 
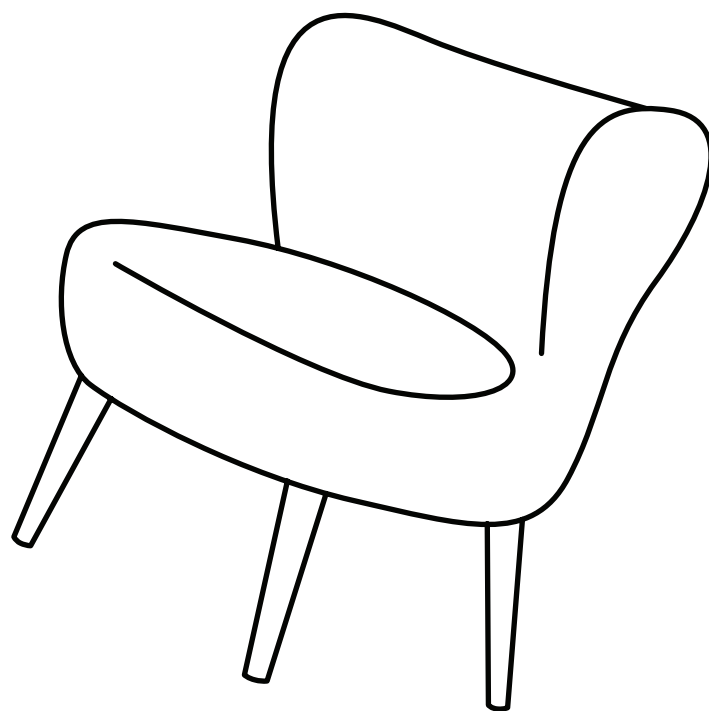 


Hello,
I've arrived!

Now that I'm here you are only one
flat-pack away from transforming
your home.

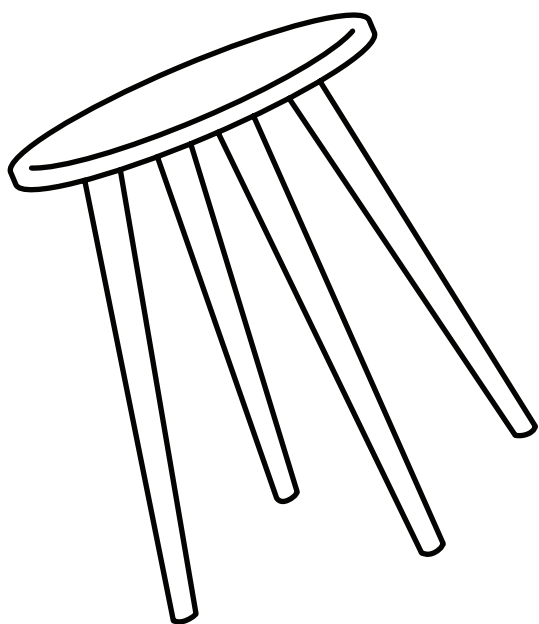

Mocka.

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create beautifully functional spaces to feel comfortably you.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions—you are already on your way to creating a beautifully functional space!



Set The Mood

Put on your favourite playlist, order that pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging and share a pic of your room reveal—we love seeing how you transform your home! Tag us @mockaaustralia/@mockaanz

Happy flat-packing!

 
The Mocka Team

Need help? Our Support Team are available via live chat, email or phone. Visit our website for details.

Aspen

Change Table

Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz

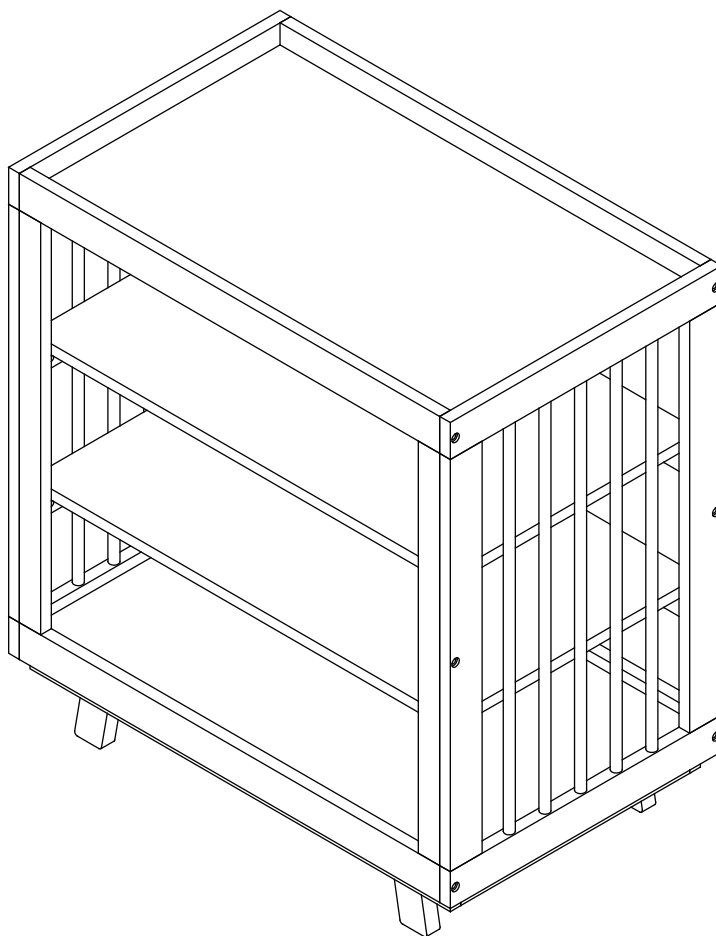


WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

Aspen

Change Table

 Panel Layout

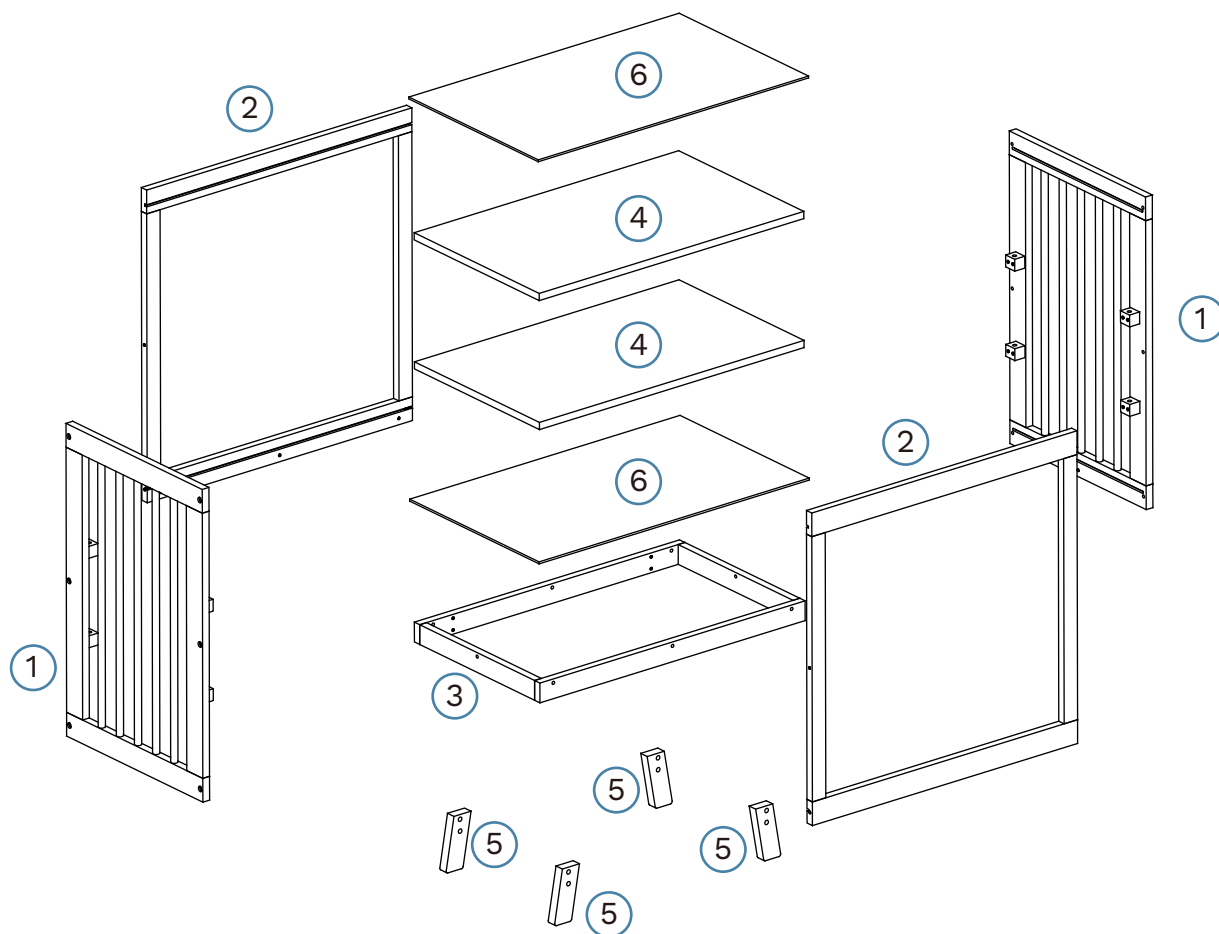


Partlist

①	End Panel	x2
②	Side Panel	x2
③	Bottom Frame	x1
④	Thicker Shelf	x2
⑤	Leg	x4
⑥	Thinner Shelf	x2

Aspen Change Table

 A



20x
bolt

B



16x
bolt

C



1x
allen key

HARDWARE SUPPLIED

D



1x
screw

E



1x
wall screw

F



2x
washer

G



 
1x
wall anchor

H



1x
wall strap


WALL STRAP



Phillips screwdriver required
For quicker assembly, we recommend the
use of a power drill on a low-speed setting.

Aspen Change Table

 
1

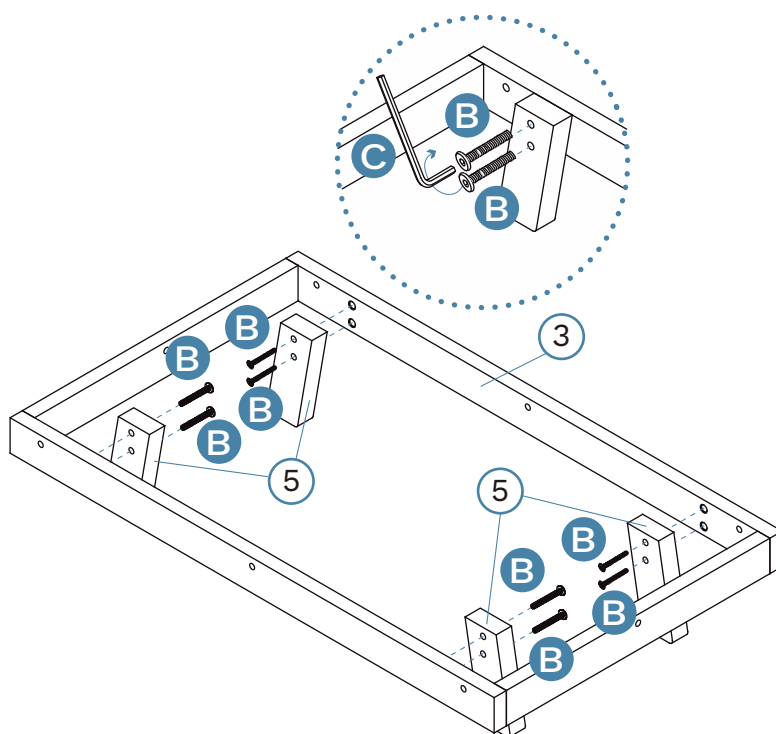

Hardware Needed

B		x8
---	---	----

 2

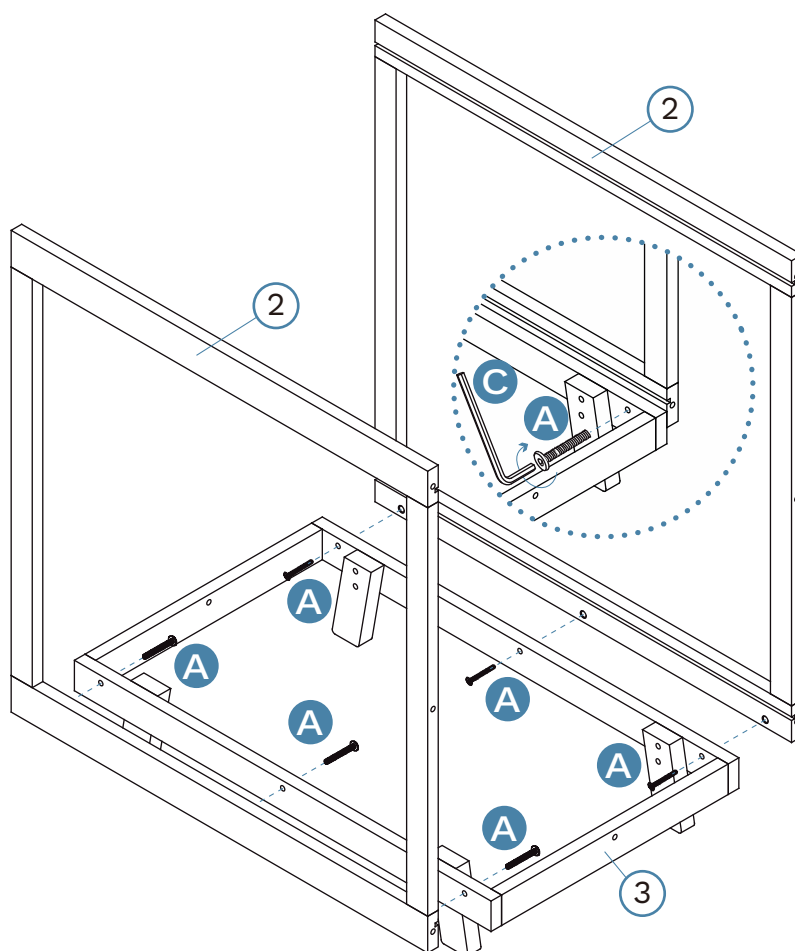


Hardware Needed

A		x6
---	---	----

Aspen Change Table

 3

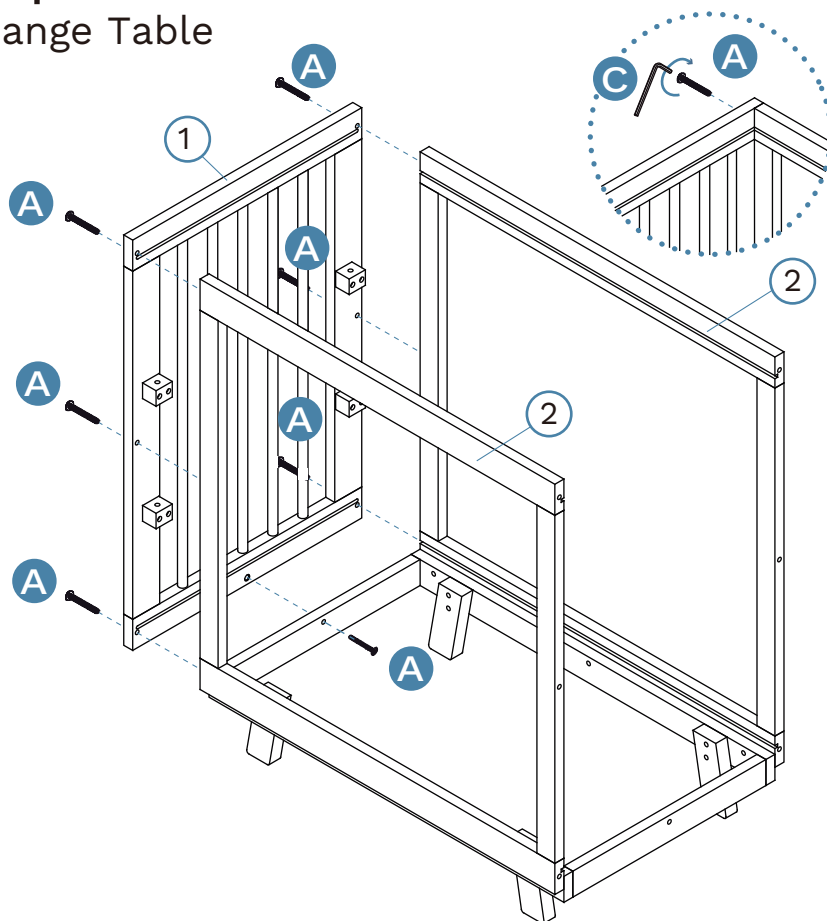


Hardware Needed

A



x7

 4

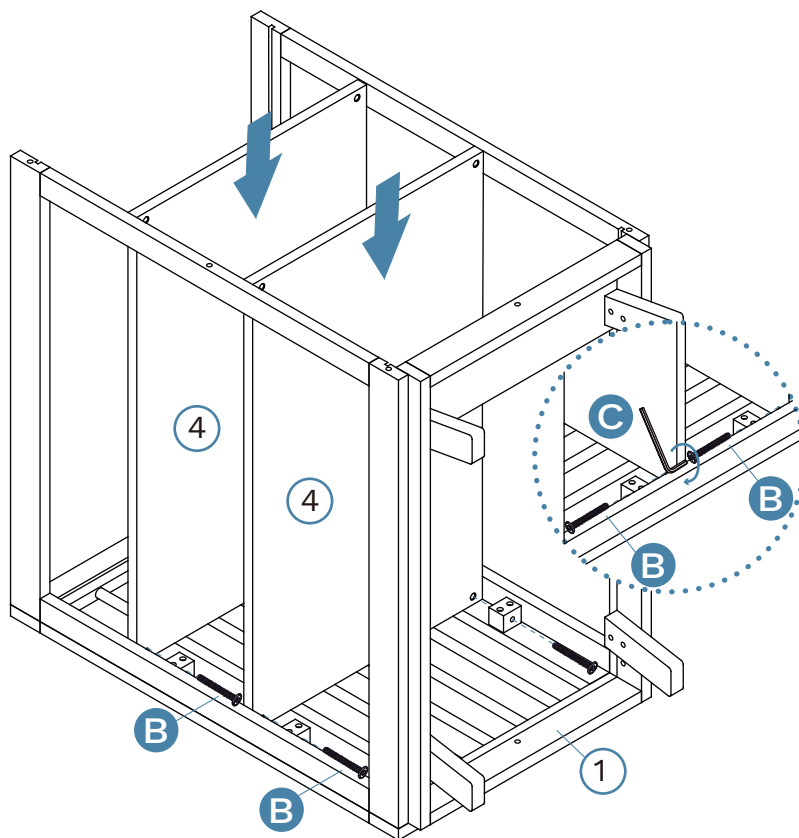

Hardware Needed

 
B





x4

Aspen Change Table

5

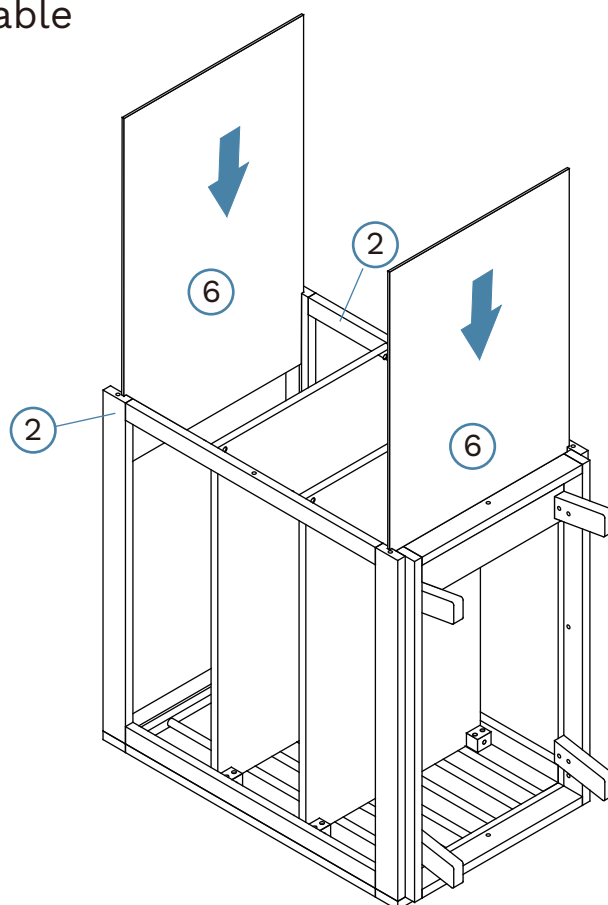

6

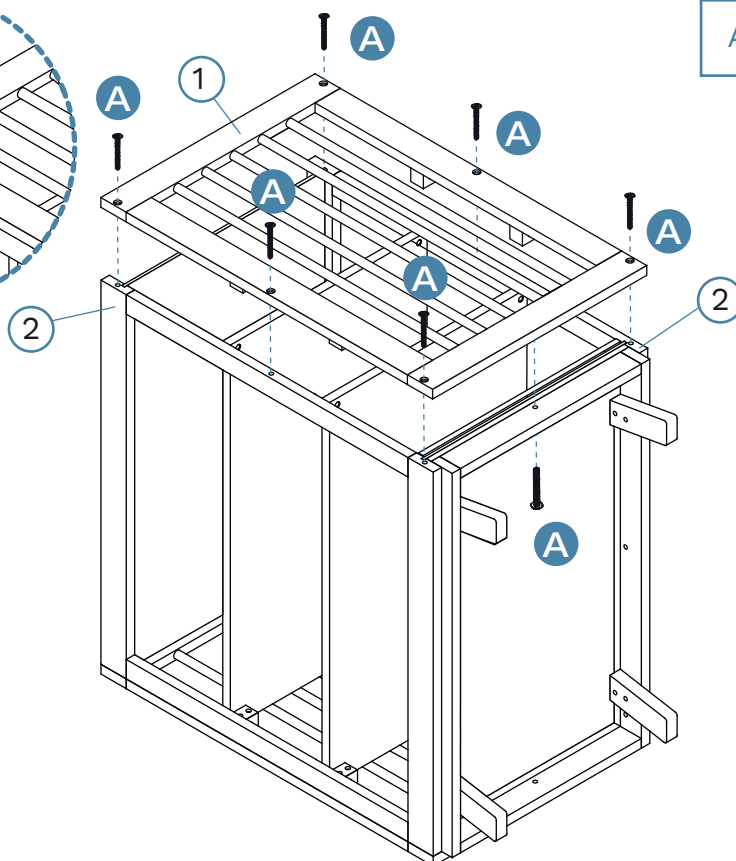 
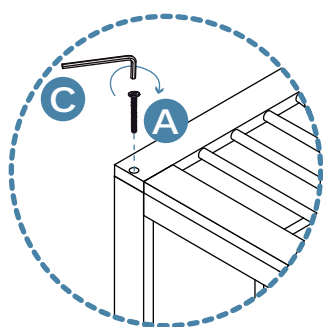 


Hardware Needed

A  x7

Aspen Change Table

  7

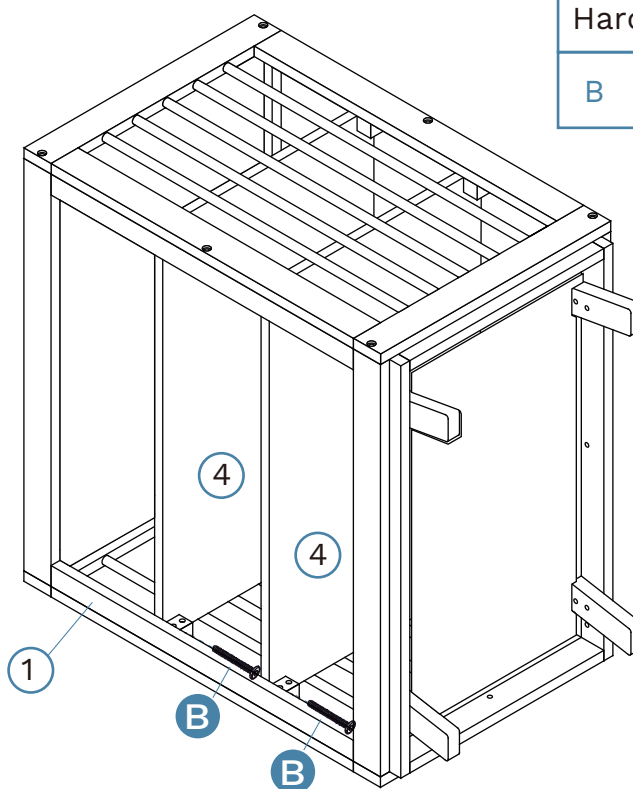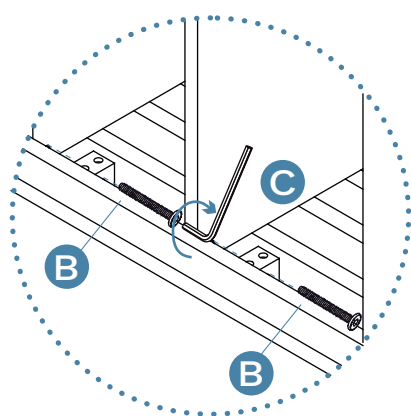



Hardware Needed

B



2

  8

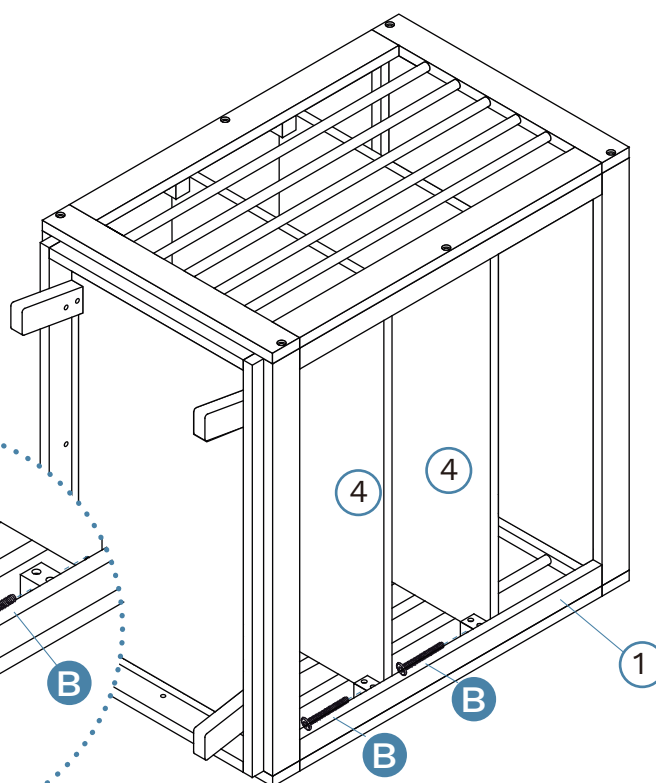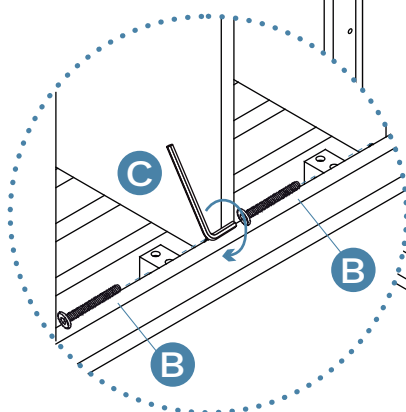

Hardware Needed

 
B


 

 



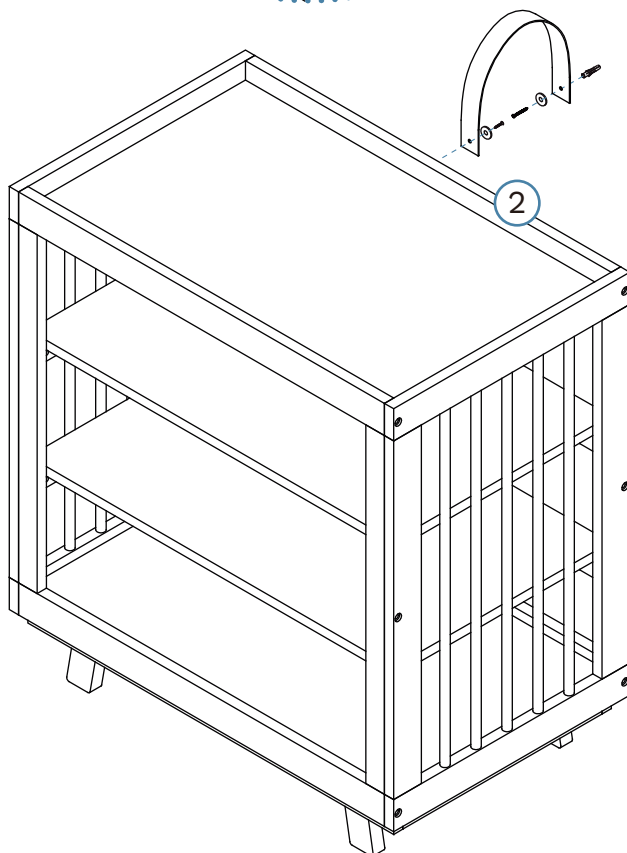 
x2

Aspen Change Table

9

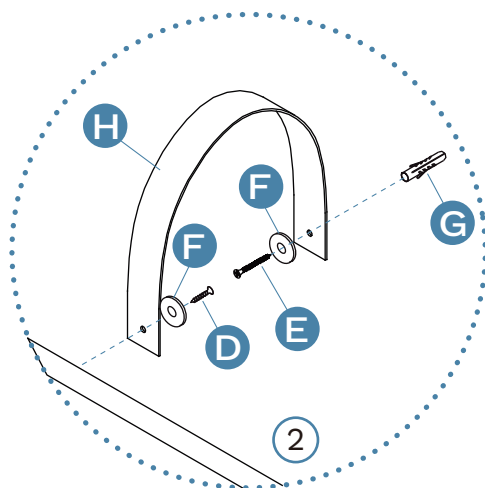

Hardware Needed		
D		x1
E		x1
F		x2
G		x1
H		x1



Once assembled lift furniture into place, do not drag. Attach wall strap (H) to side panel [2] with 1x washer (F) and 1x screw (D). Use a drill to create a small hole lining up with the safety strap (H). Fasten to wall using 1x wall anchor (G), 1x washer (F) and 1x wall screw (E). Ensure unit is balanced and steady before use. You're done, enjoy!