
Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz






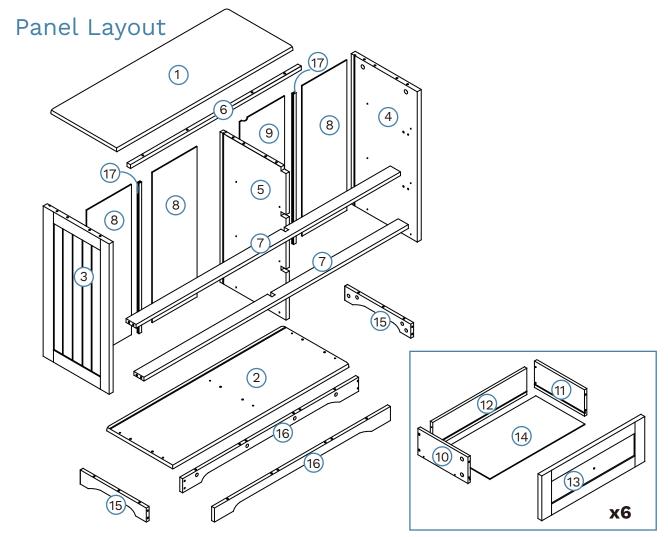


Partlist

1	Top Panel	x1	10	Left Drawer Side	x6
2	Bottom Panel	x1	(11)	Right Drawer Side	x6
3	left Side Panel	x1	(12)	Back Panel	x6
4	Right Side Panel	x1	13	Drawer Front	x6
5	Divider	x1	14	Drawer Base	x6
6	Slats	x1	15	Bottom Frame	x2
7	Slats	x2	16	Bottom Frame	x2
8	Back Panel	x3	17	Back Slats	x2
9	Back Panel	x1			



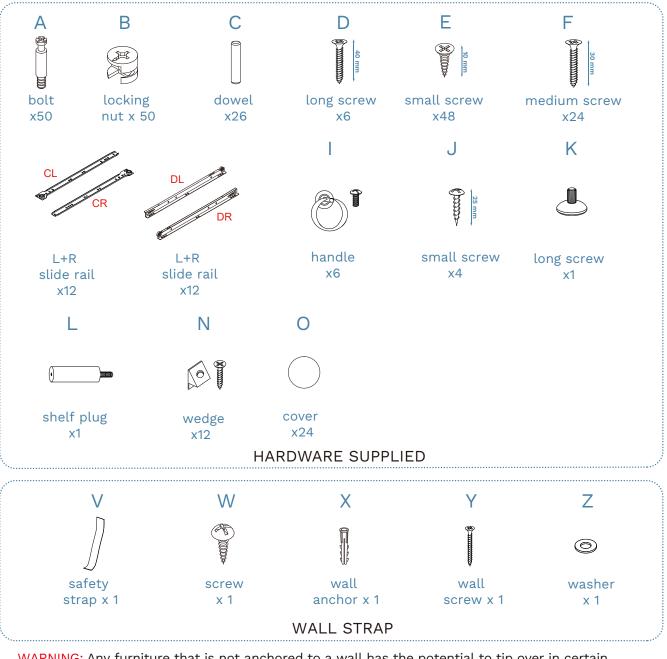

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

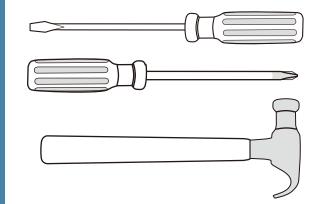



Phillips & Flathead screwdrivers and hammer required


For quicker assembly, we recommend the use of a power drill on a low-speed setting.







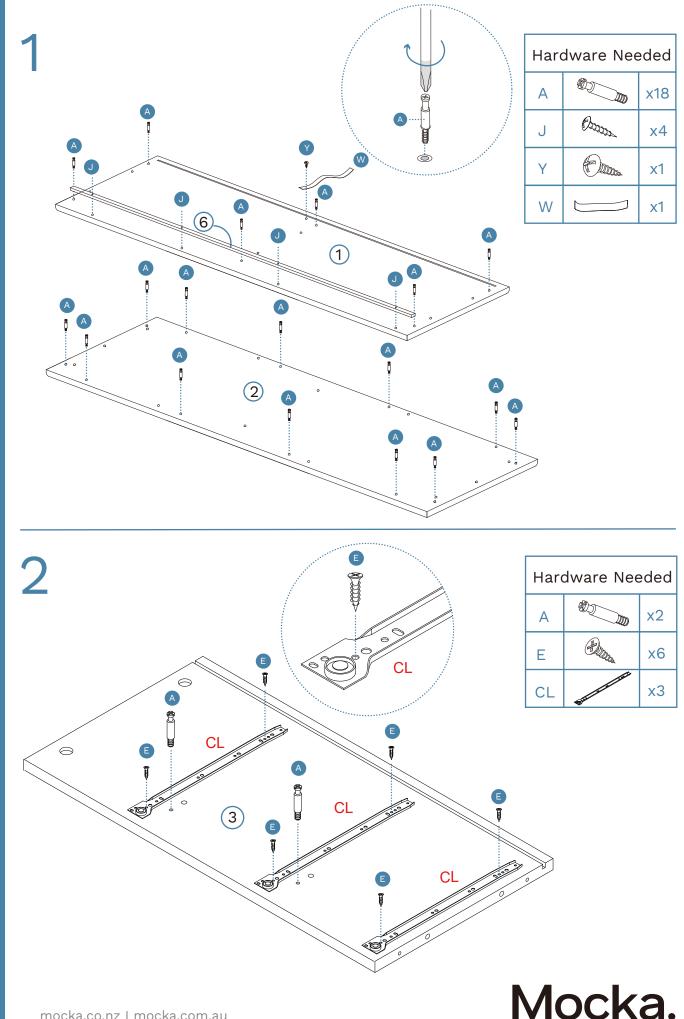

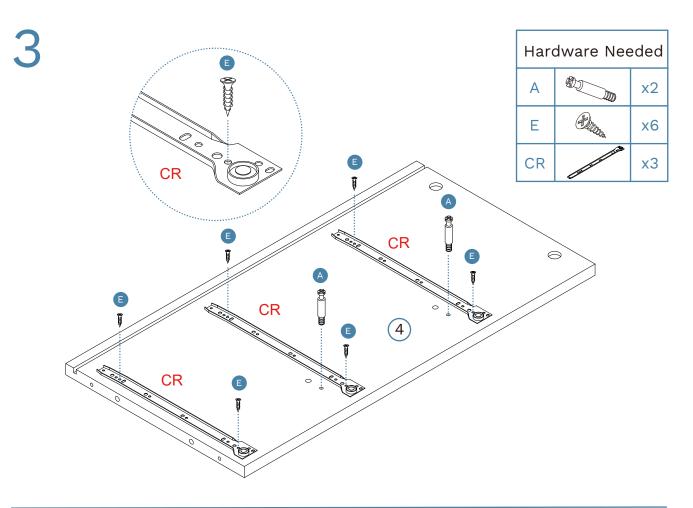

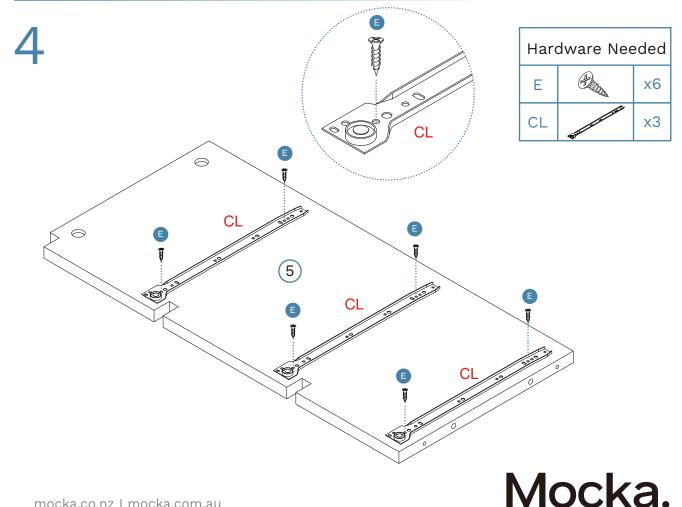

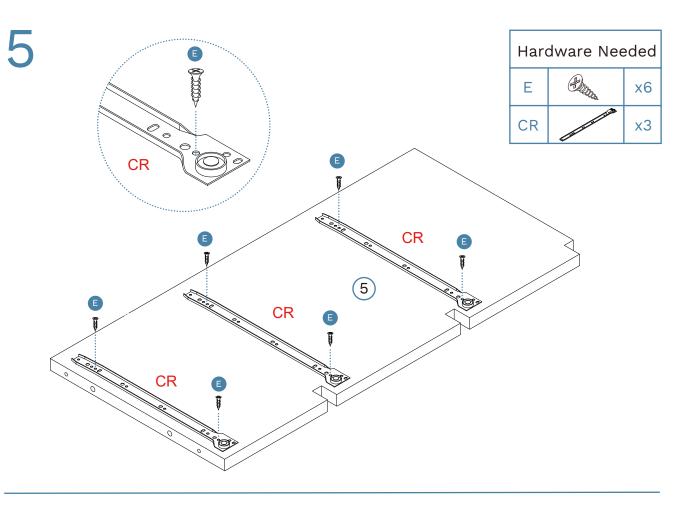

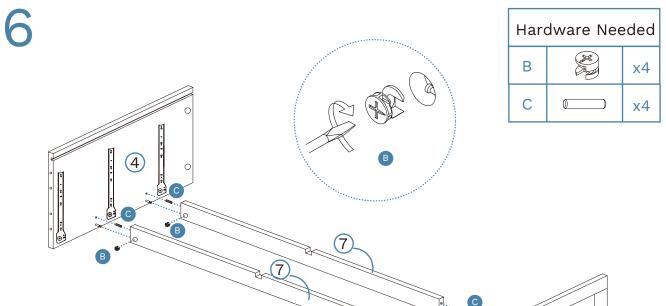



В

B


3

Mocka.

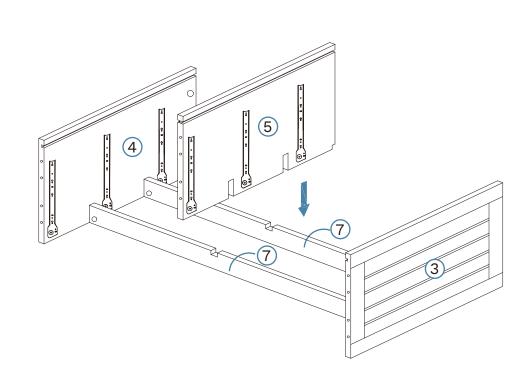


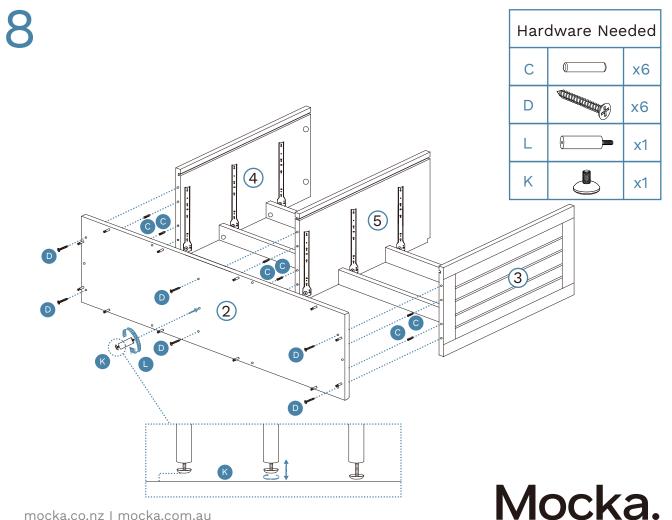


10

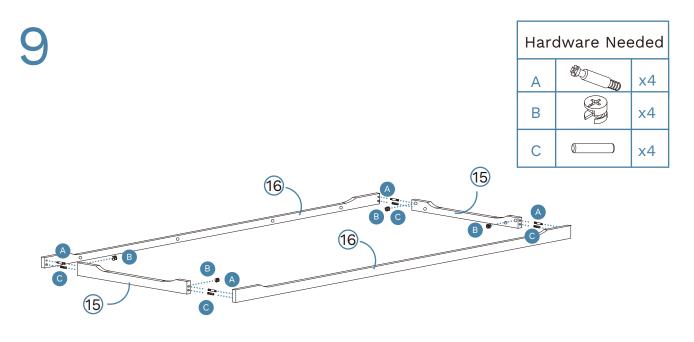




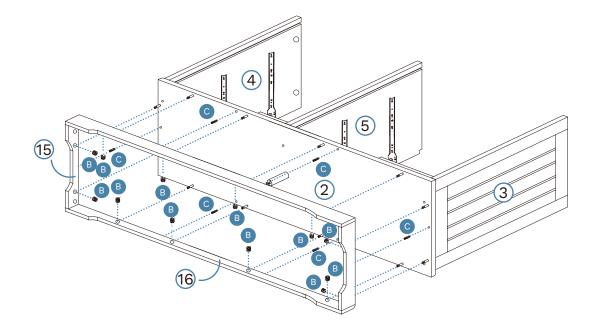





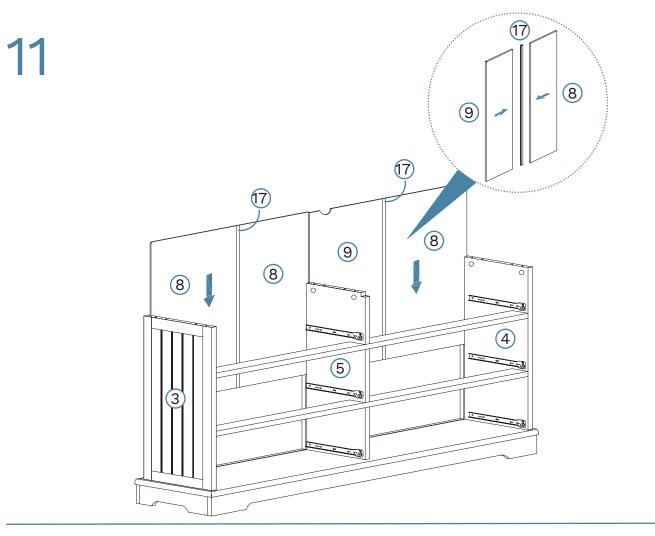

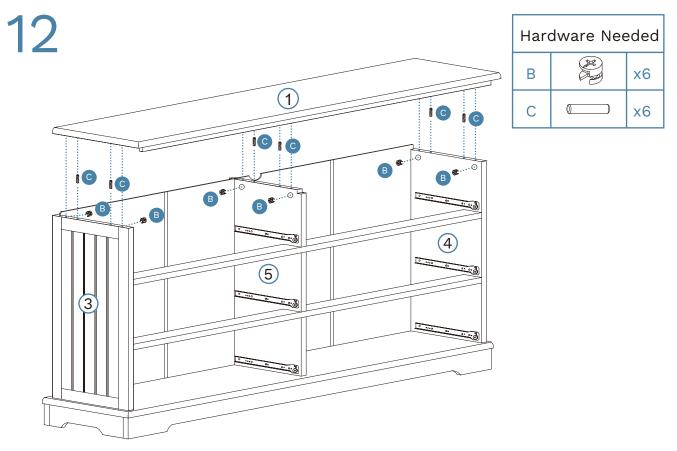


Mocka.

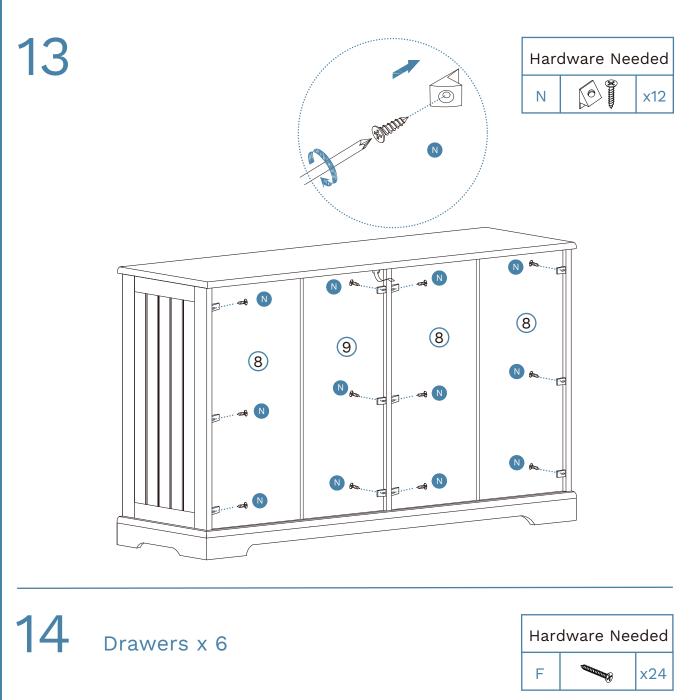


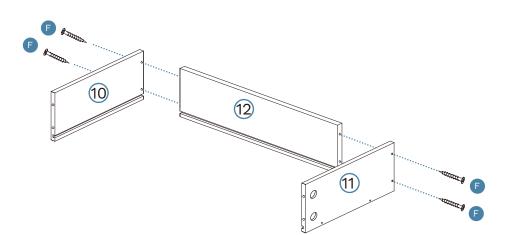




15 Drawers x 6

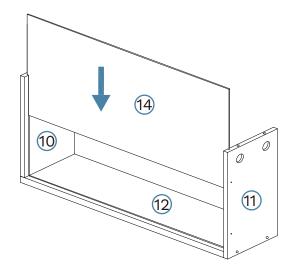


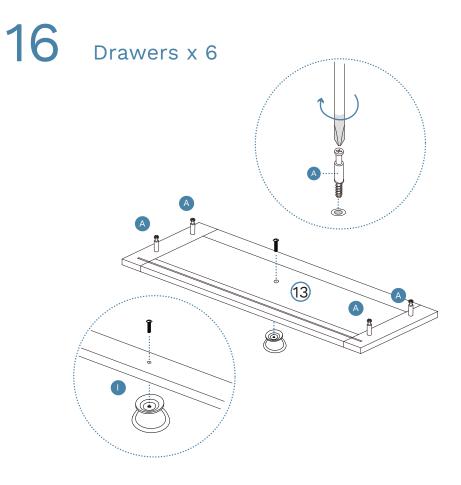





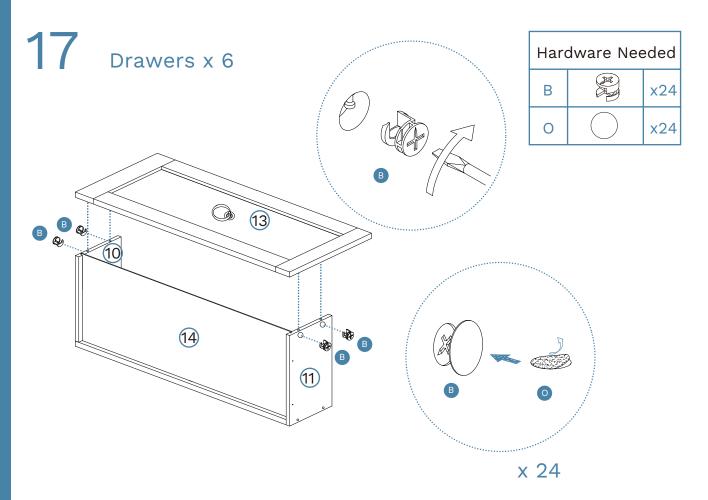

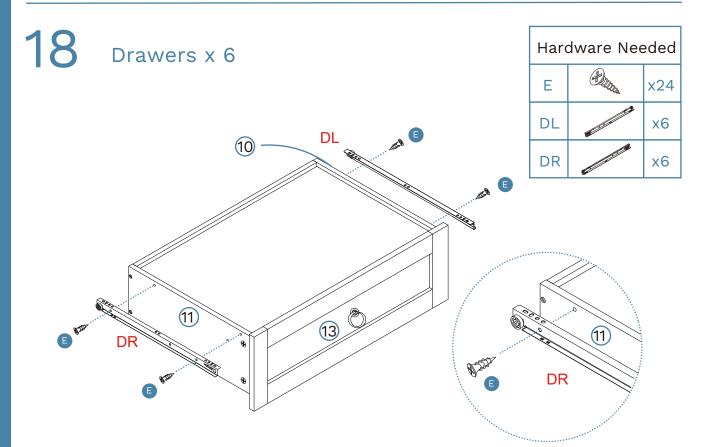

Mocka.

