

Highchair Harness

Assembly Instructions

Includes instructions for Original Highchair,
Soho Highchair & Designer Highchair

Thank you for your purchase.
Please follow the instructions below for correct assembly.

IMPORTANT!

KEEP FOR FUTURE REFERENCE:

WARNING: Never leave your child unattended in the highchair. Strict adult supervision is required at all times.

WARNING: Ensure the safety strap is in use at all times to avoid the child slipping downwards and causing injury. We recommend the use of the shoulder and waist harness for added safety and to avoid injury caused by falls – this is available for \$19.95.

WARNING: Do not use the highchair unless components are correctly fitted and adjusted.

WARNING: Ensure the highchair is positioned away from objects or structures that can cause injury. Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc, in the vicinity of the highchair.


WARNING: Ensure both the seat and footrest are locked into position, and cannot be moved by hand, before placing the child in the highchair.

Do not tighten all screws until all components have been assembled.

The highchair should not be used until the child can sit up unaided.

Do not use the highchair if any part is broken, torn or missing.

mocka

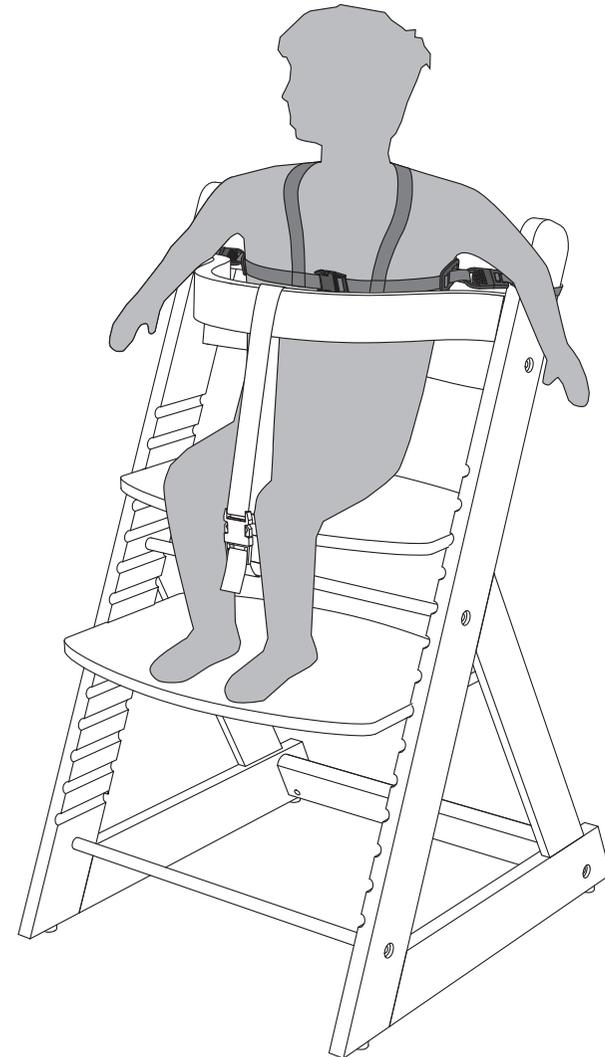


Highchair Harness

Assembly Instructions

For Original Highchair & Soho Highchair


mocka

1

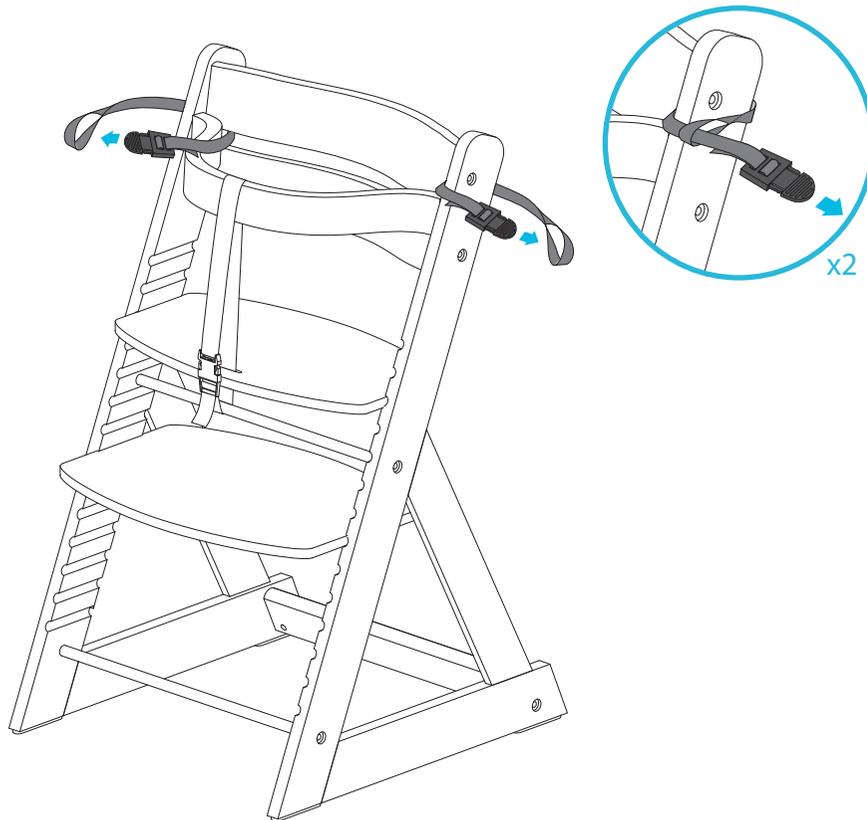

Separate the anchor straps and loop around the high-chair supports and under the backrest. Tie to high-chair frame by passing each clip through the loop in the straps.

2

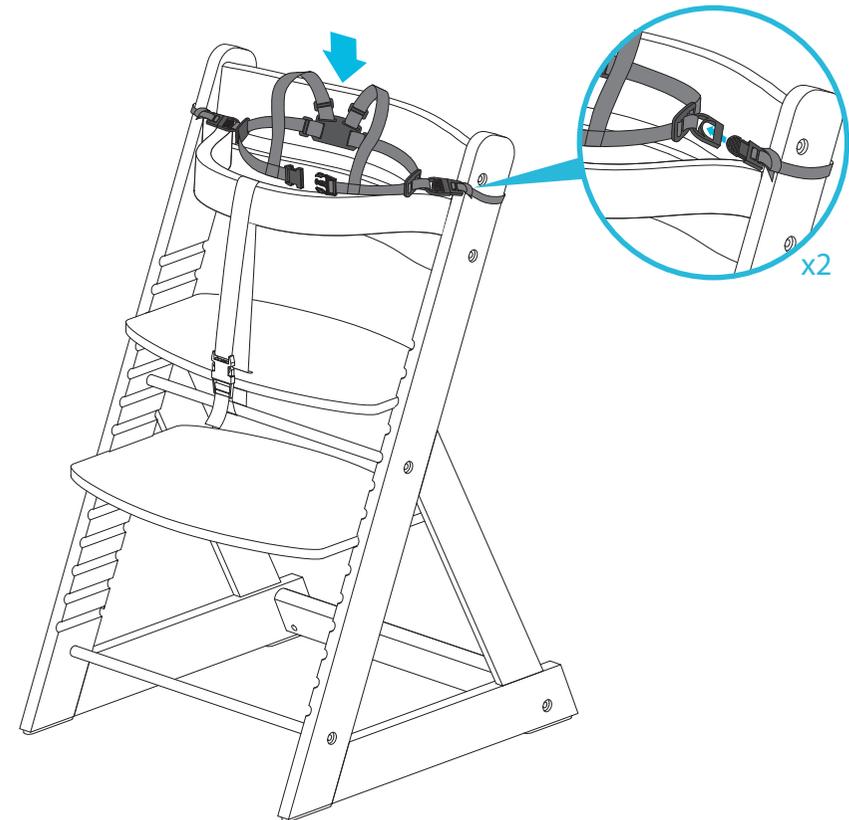

Connect the rest of the harness to the anchor-straps by clipping together both buckles as shown. Keep the harness and middle buckle loose and open for now.


Highchair Harness

Assembly Instructions


For Original Highchair & Soho Highchair

mocka


3

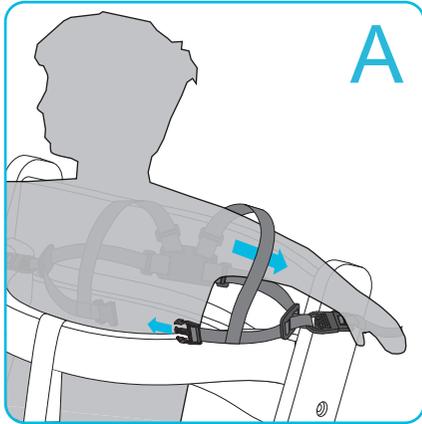

A

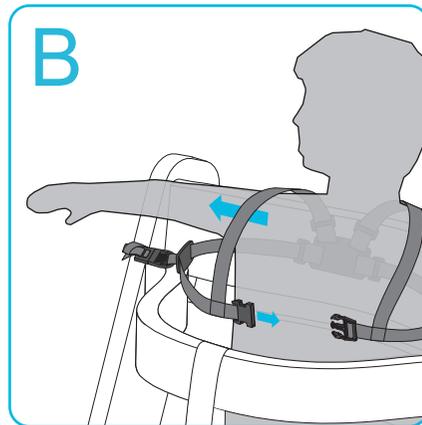

B

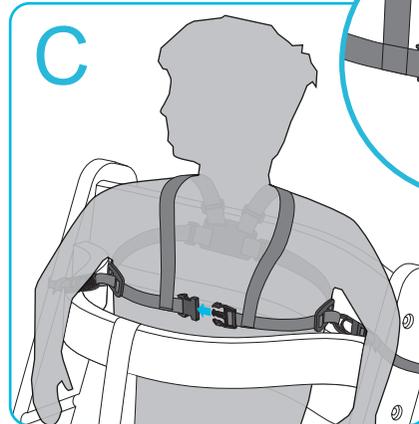

C

4



- A. Carefully sit child in the highchair and slip arm through harness.
- B. Slip child's second arm through the harness loop.
- C. With the harness sitting over the shoulders, clip the front buckles together as shown.

Finally, adjust the straps to ensure a snug fit around child's shoulders and chest. To take the child out of the chair, simply unclip the buckle and slip off harness. All done! Enjoy!



Highchair Harness

Assembly Instructions

For Designer Highchair

mocka



5

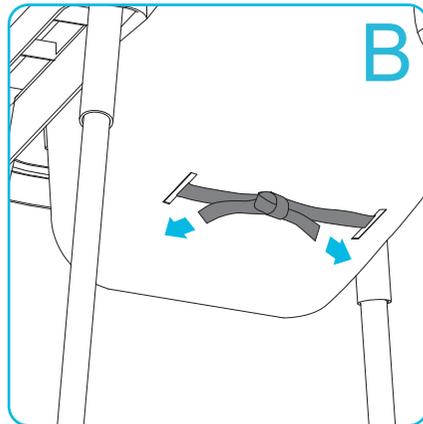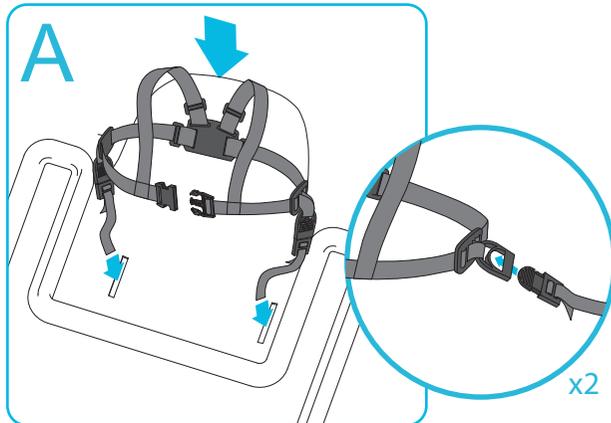

A. Attach the anchor straps to the harness. Place the complete harness inside the seat of the highchair and push the two ends down through the seat holes.

B. Pull the anchor straps tight underneath and tie a reef knot.

6

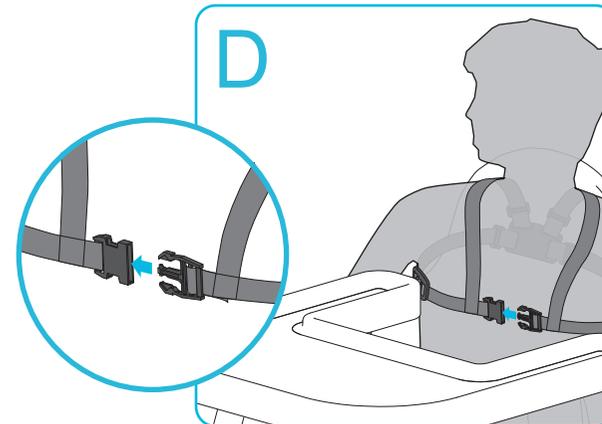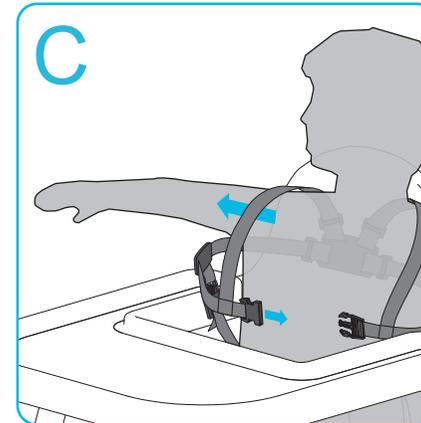

C. Carefully seat child in the highchair and slip arms and shoulders through harness.

D. Clip the front buckles together as shown. Adjust straps to ensure a snug fit around child's shoulders and chest.