

 
Assembly Instructions

Thank you for your purchase.

Please follow the instructions below for correct assembly.

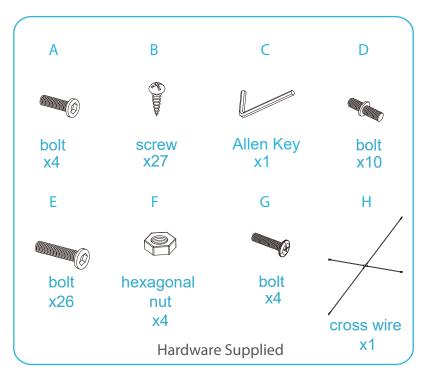

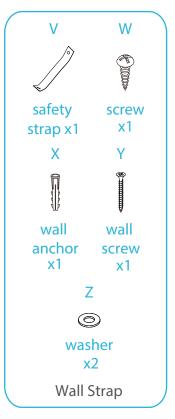




Phillips

For quicker assembly, we recommend the use of a power drill on a low-speed setting.

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.




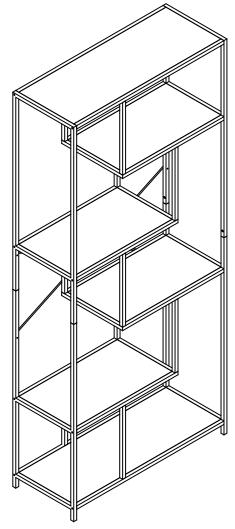


Maximum weight limit per shelf is 10kg Indoor Use Only

Assembly Instructions



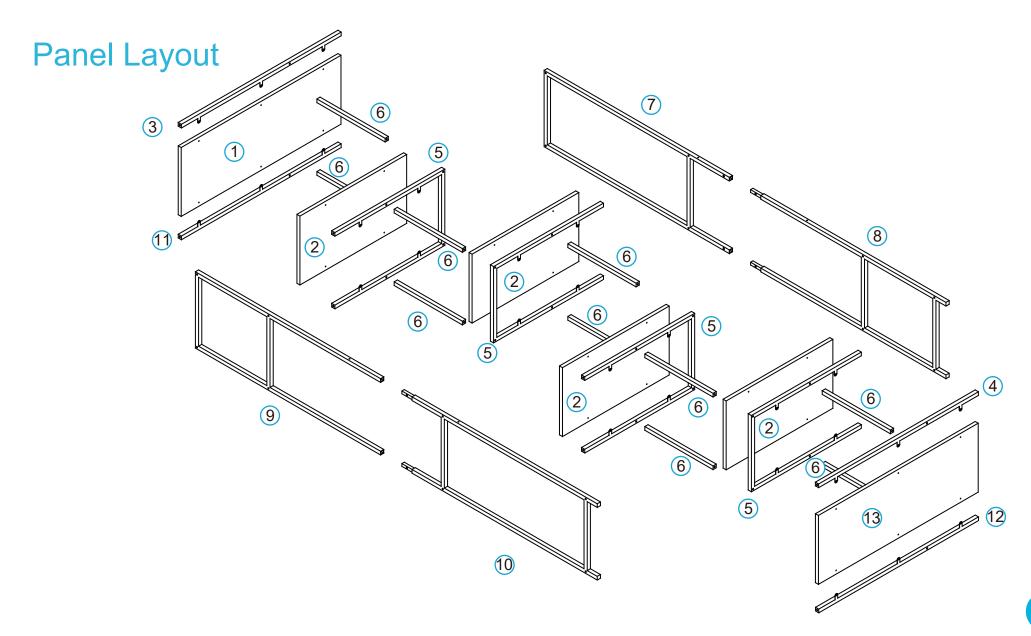


Assembly Instructions

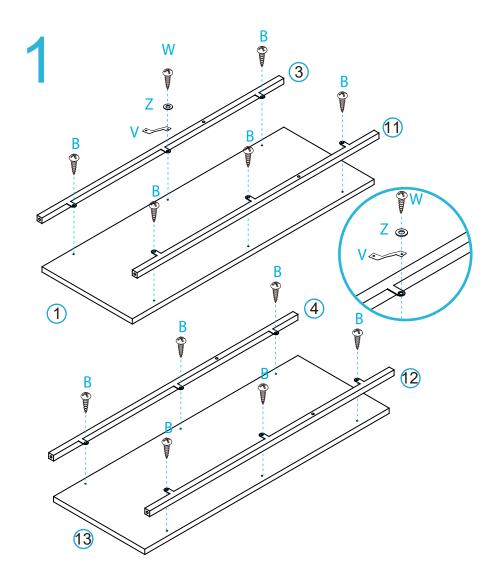

Attach panels [4] and [12] to panel [13] and secure with 6x screws (B). Attach panels [3] and [11] to panel [1] and secure with 5x screws [B]. Attach 1x safety strap (V) and 1x washer (Z) to panel [3] and secure with 1x screw (W). Tighten with a screwdriver.

mocka

2 x4

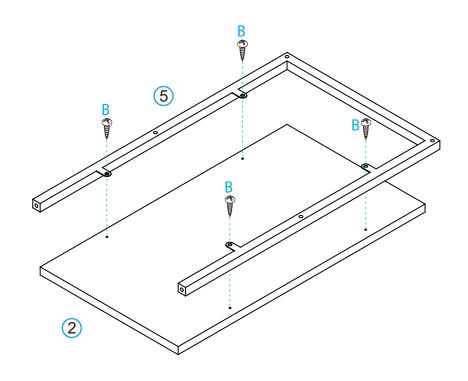


Attach panels [5] to panels [2] and secure with 4x screws (B). Tighten with a screwdriver.


Assembly Instructions

mocka

3x4

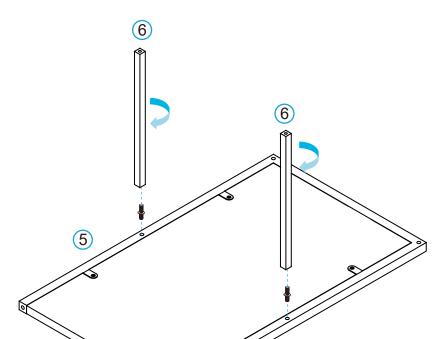

4

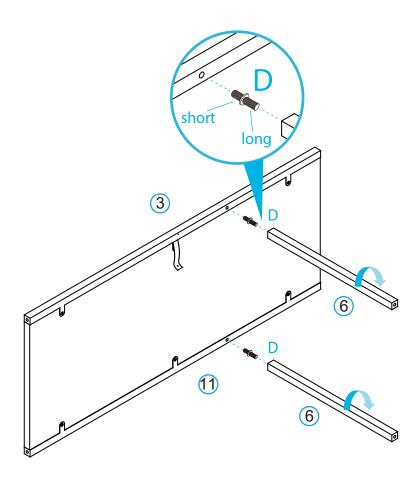



Attach panels [6] to panel [5] and secure with 8x bolts (D) as shown.

Attach panels [6] to panels [3] and secure with 2x bolts (D) as shown.

Assembly Instructions



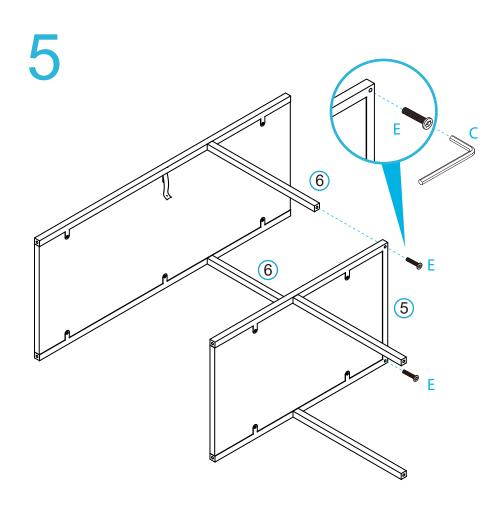

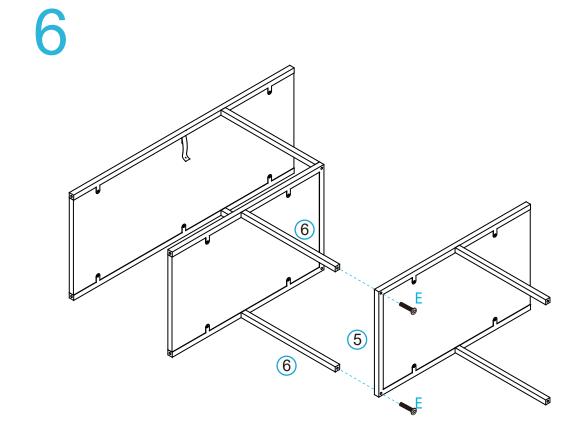


Attach panel [5] to panels [6] and secure with 2x bolts (E). Tighten with an Allen Key (C).

Attach panel [5] to panels [6] and secure with 2x bolts (E). Tighten with an Allen Key (C).

Assembly Instructions



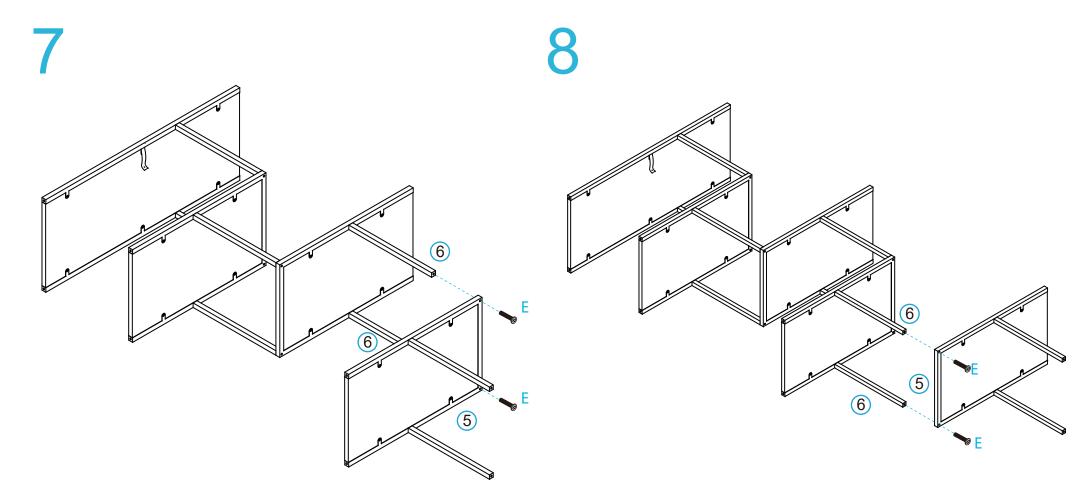


Attach panel [5] to panel [6] and secure with 2x bolts (E). Tighten with an Allen Key (C).

Attach panel [5] to panels [6] and secure with 2x bolts (E). Tighten with an Allen Key (C).


Assembly Instructions

9

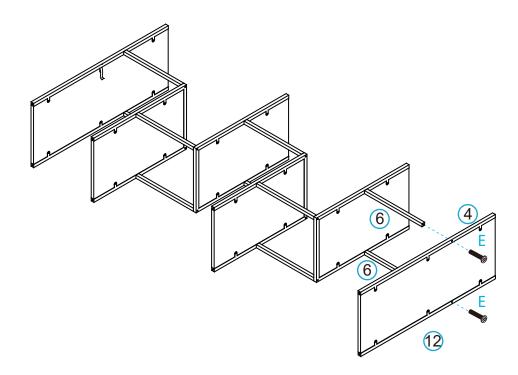

Attach panels [4] to panels [6] and secure with 2x bolts (E). Tighten with an Allen Key (C).


mocka

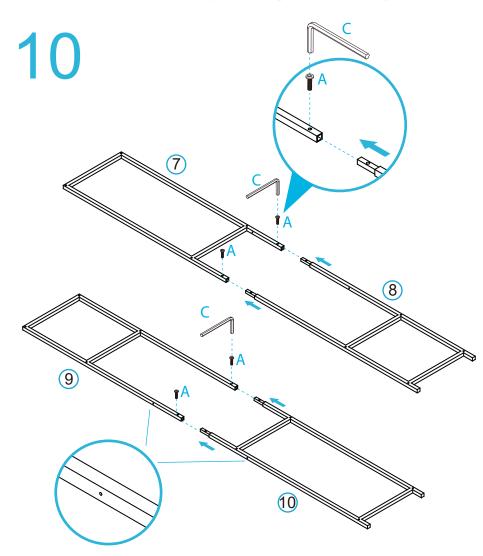

Attach panel [7] to panel [8] and secure with 2x bolts (A). Attach panel [9] to panel [10] and secure with 2x bolts (A). Tighten with an Allen Key (C).


Assembly Instructions

11

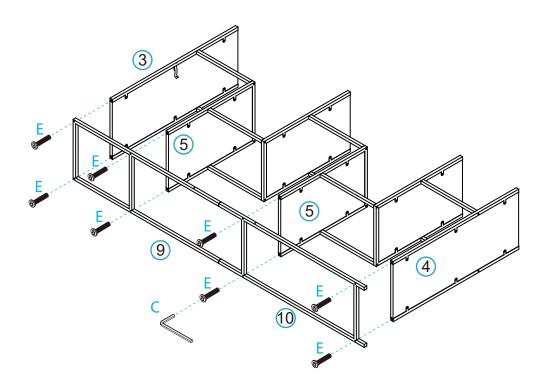

mocka

12

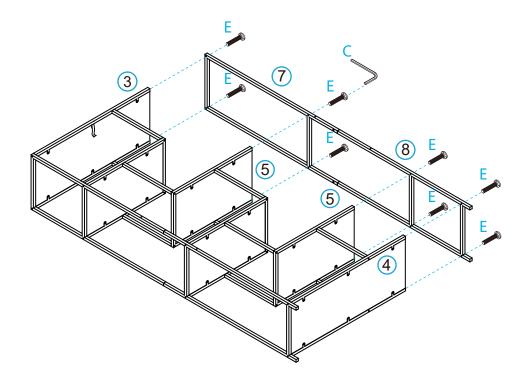


Attach panel [9] and [10] to panels [3], [4] and [5] and secure with 8x bolts (E). Tighten with an Allen Key (C).

Attach panel [7] and [8] to panels [3], [4] and [5] and secure with 8x bolts (E). Tighten with an Allen Key (C).

Assembly Instructions


13

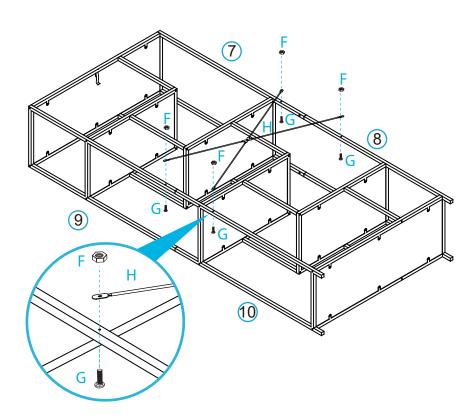

Attach 1x cross wire (H) to panels [7], [8], [9] and [10] and secure with 4x bolts (G) and 4x hexagonal nut (F). Tighten with a screwdriver.

mocka

14

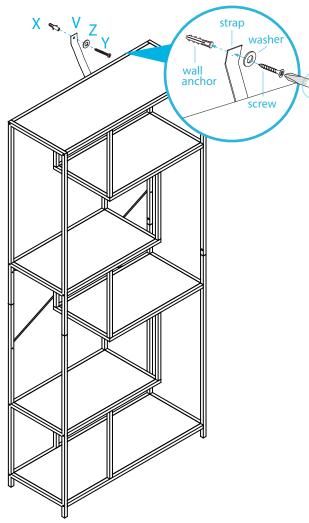

Once assembled lift furniture into place, do not drag. Use a drill to create a small hole lining up with the top of the safety strap (V). Fasten to the wall using 1x washer (Z), 1x wall anchor (X) and 1x wall screw (Y). Ensure unit is balanced and steady before use. You're done, enjoy!