 



Mocka Activity Play Table

Assembly Instructions


Thank you for your purchase.
Please follow the instructions below for correct assembly.

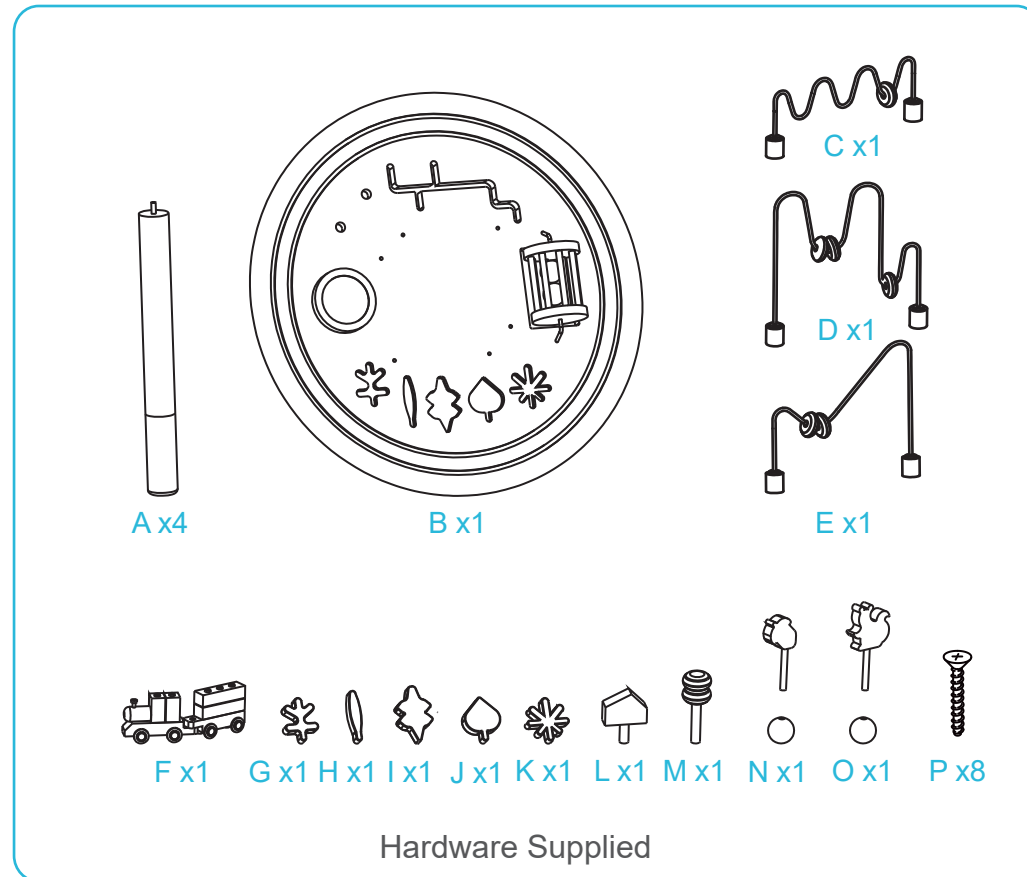

Cross screwdriver required.

ALL nuts and bolts must be checked and tightened before first use. Regularly check all screws are tight to ensure safety.

mocka

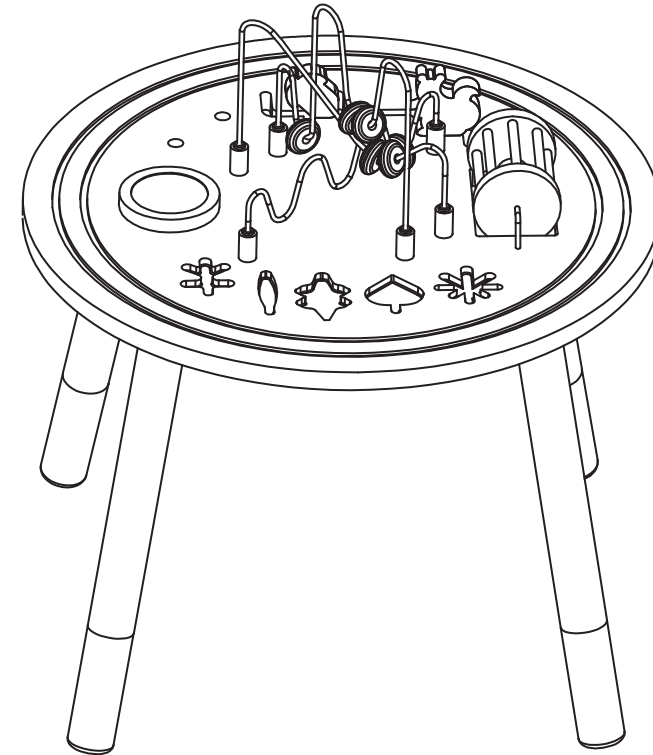

WARNING: Due to the small size of the hardware and the sharp points of the screws, they are potentially hazardous.

Keep all assembly parts and packaging materials out of reach of children.

Retain packaging information for future reference.

Adult assembly required.



Age recommendation 12 months +

Mocka Activity Play Table

Assembly Instructions



mocka

1 x4

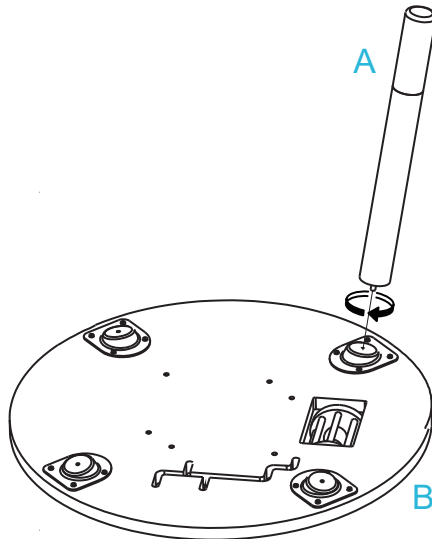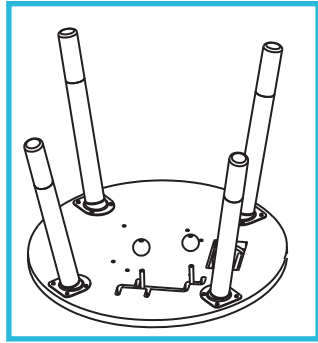

Attach 4 x legs (A) to 1 x table (B) as shown.

2

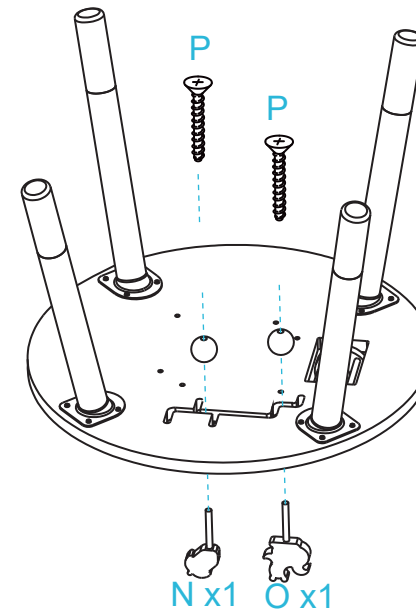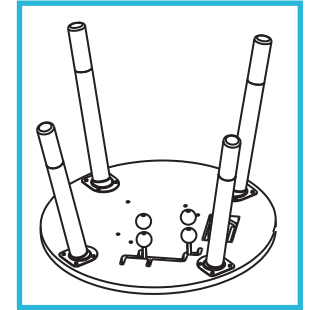


Attach 1 x toy (N) and 1 x toy (O) to table and secure with 2 x screws (P). Tighten with a screwdriver.

Mocka Activity Play Table

Assembly Instructions


mocka

3

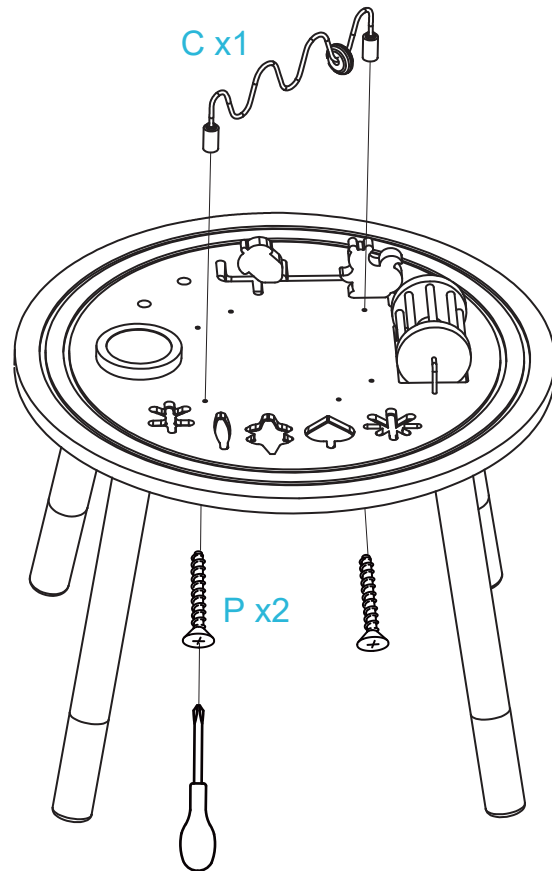

Attach 1 x toy (C) to table and secure with 2 x screws (P). Tighten with a screwdriver.

4

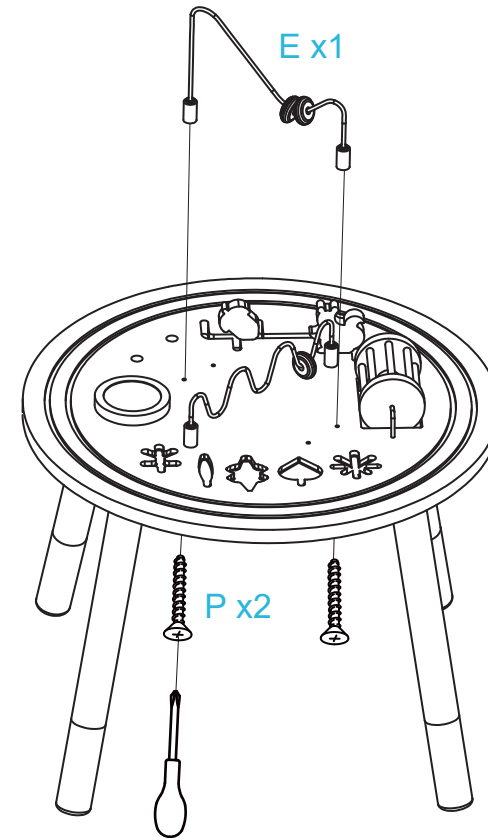


Attach 1 x toy (E) to table and secure with 2 x screws (P). Tighten with a screwdriver.

Mocka Activity Play Table

Assembly Instructions


mocka

5

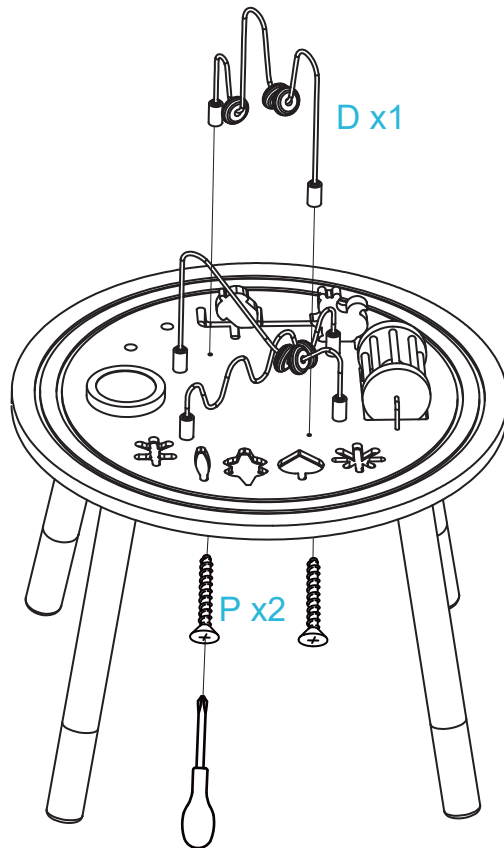

Attach 1 x toy (D) to table and secure with 2 x screws (P). Tighten with a screwdriver.

6

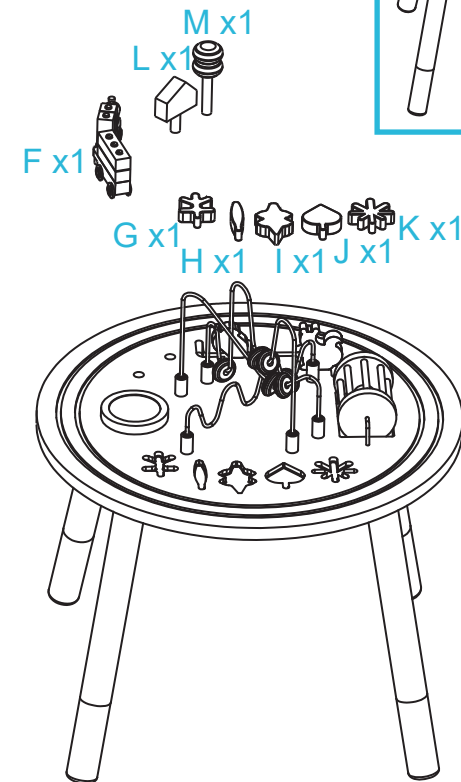

Attach remaining toys as shown. Lift the furniture into the desired location, do not drag, You're done, enjoy!

