 


Sadie

Buffet

 
 
 
Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz

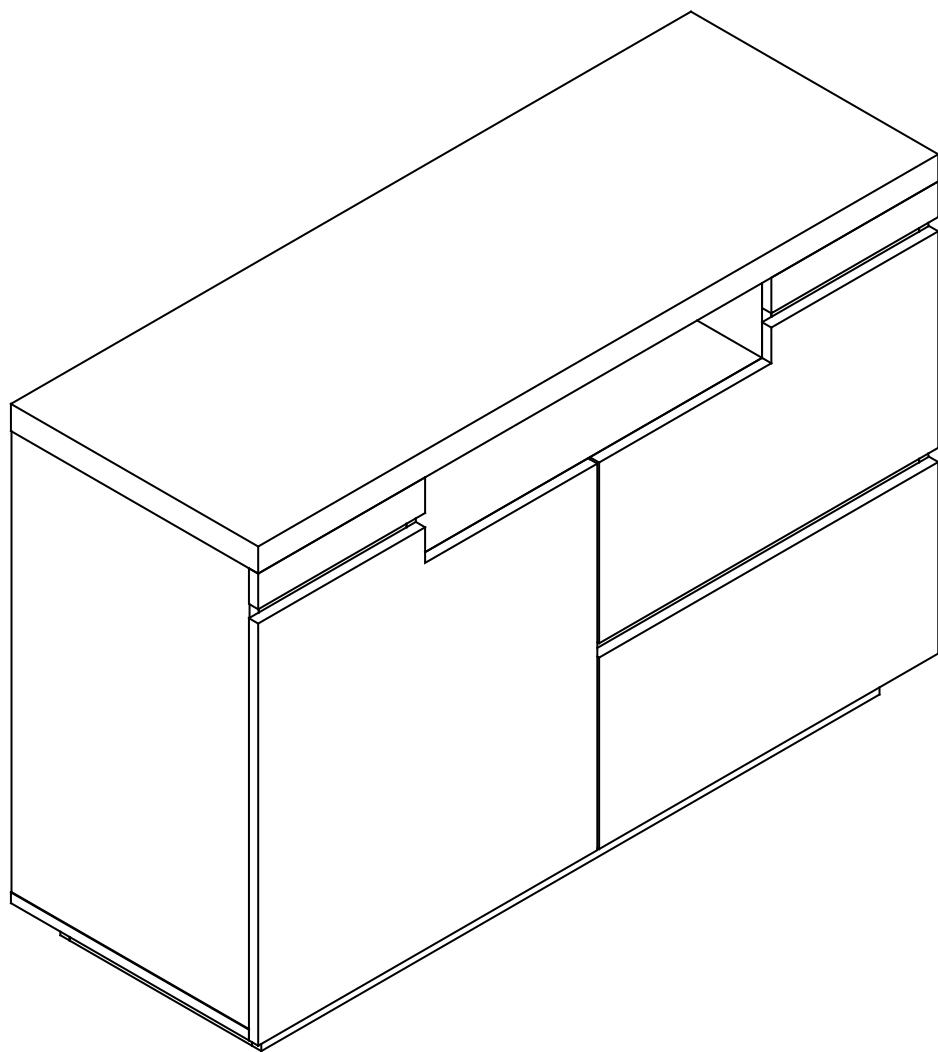

Sadie

Buffet

Panel Layout

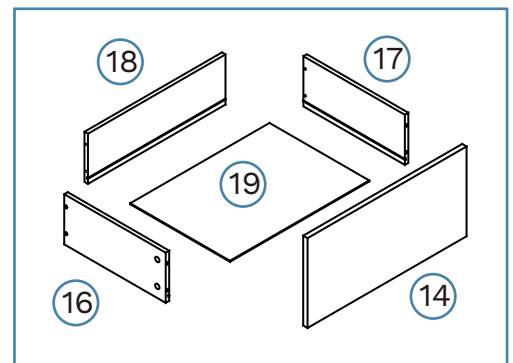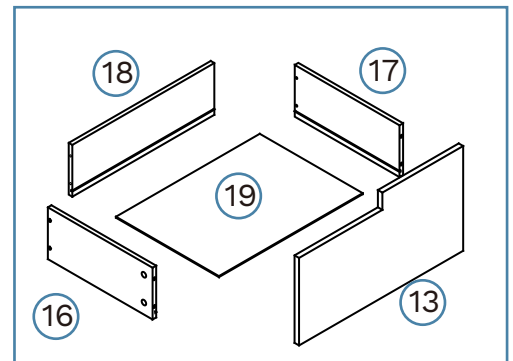
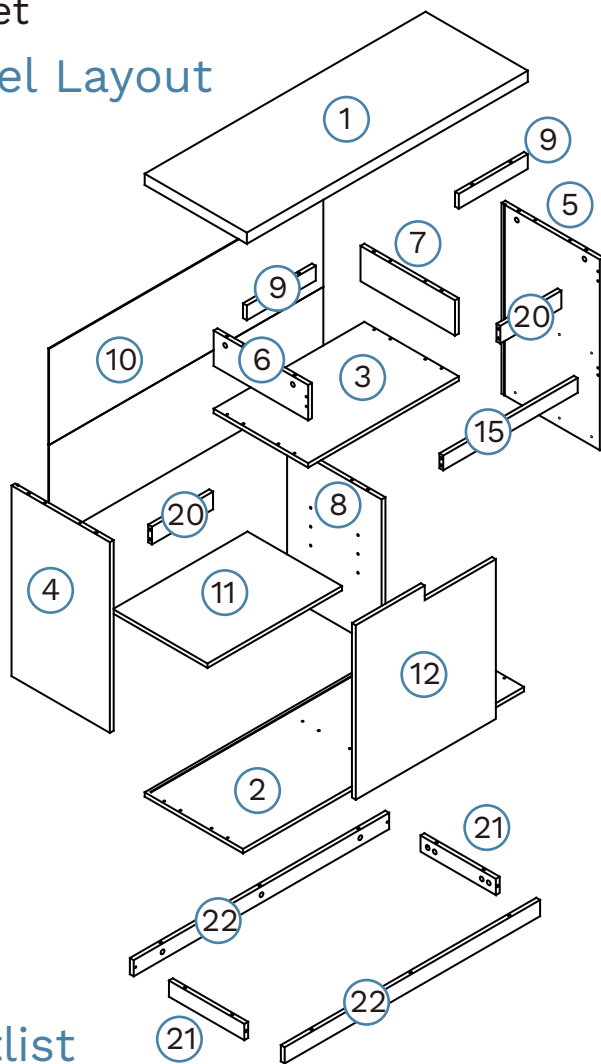


Partlist


①	Top Panel	x1	⑫	Door	x1
②	Bottom Panel	x1	⑬	Drawer Front	x1
③	Shelf Panel	x1	⑭	Drawer Front	x1
④	left Side Panel	x1	⑮	Rail	x1
⑤	Right Side Panel	x1	⑯	Left Drawer Side	x2
⑥	Divider	x1	⑰	Right Drawer Side	x2
⑦	Divider	x1	⑱	Drawer Back	x2
⑧	Divider	x1	⑲	Drawer Base	x2
⑨	Rail	x2	⑳	Rail	x2
⑩	Back Panel	x1	㉑	Rail	x2
⑪	Shelf Panel	x1	㉒	Rail	x2

Sadie

  Buffet

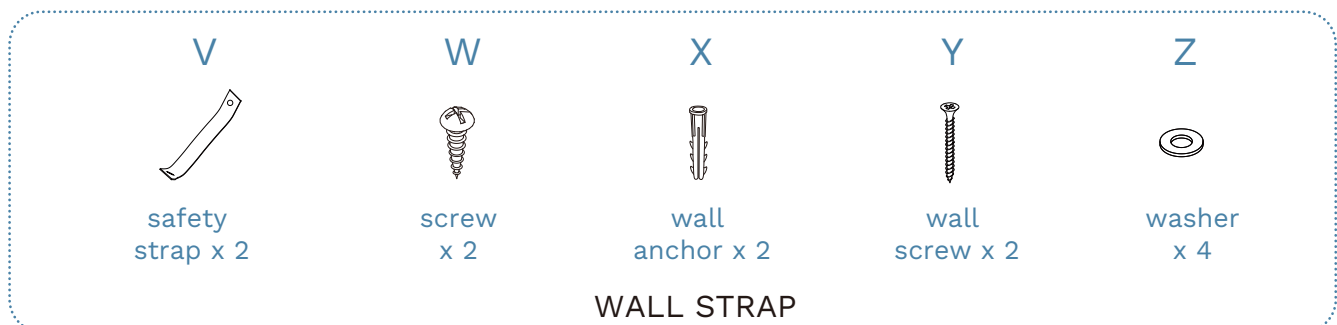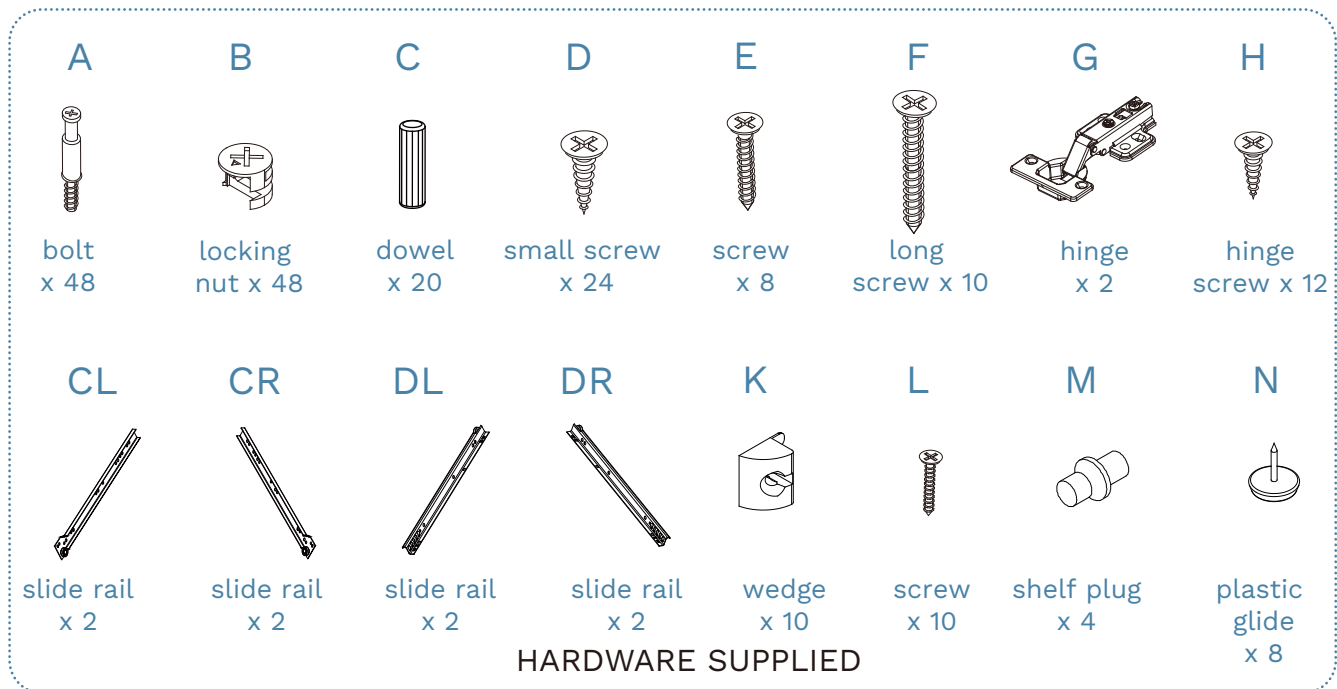

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

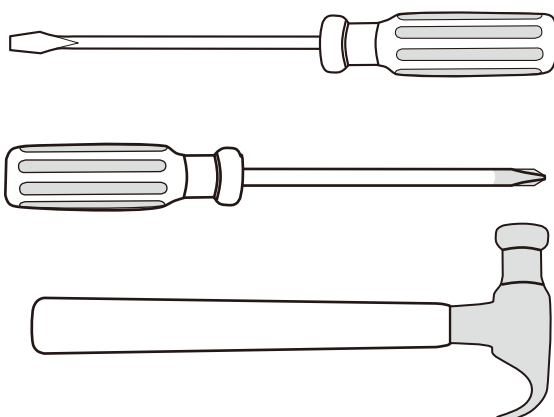 


Phillips & Flathead screwdrivers
and hammer required

**For quicker assembly, we recommend the
use of a power drill on a low-speed setting.**




Sadie

 Buffet

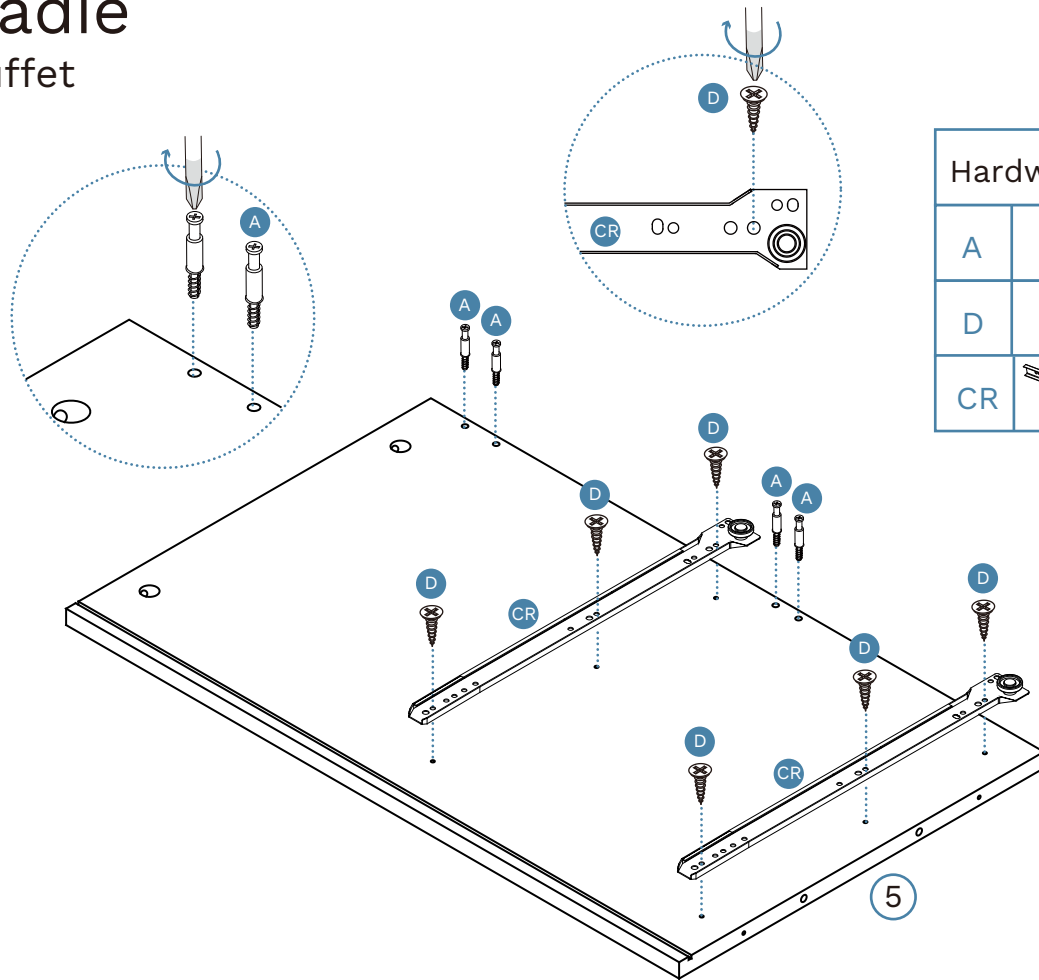
1






Hardware Needed

A		x4
D		x6
CR		x2

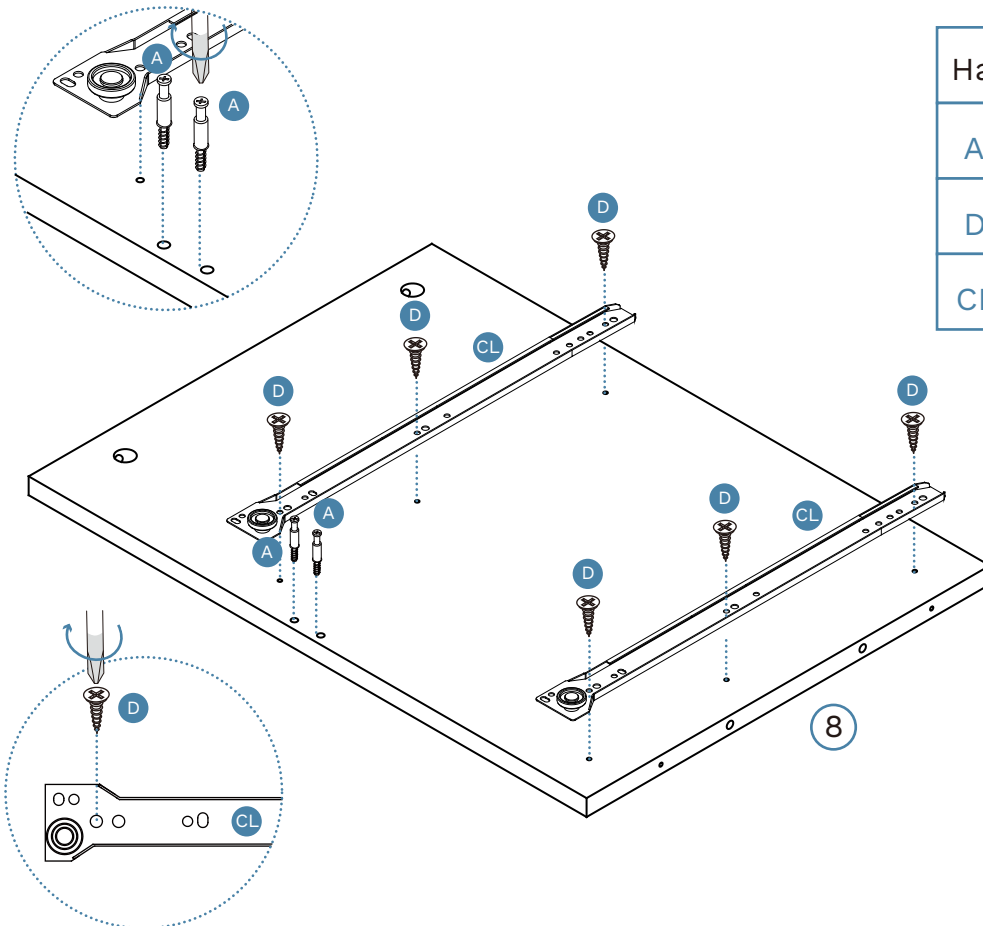 2




Hardware Needed

A		x2
D		x6
CL		x2


Sadie

Buffet

 3

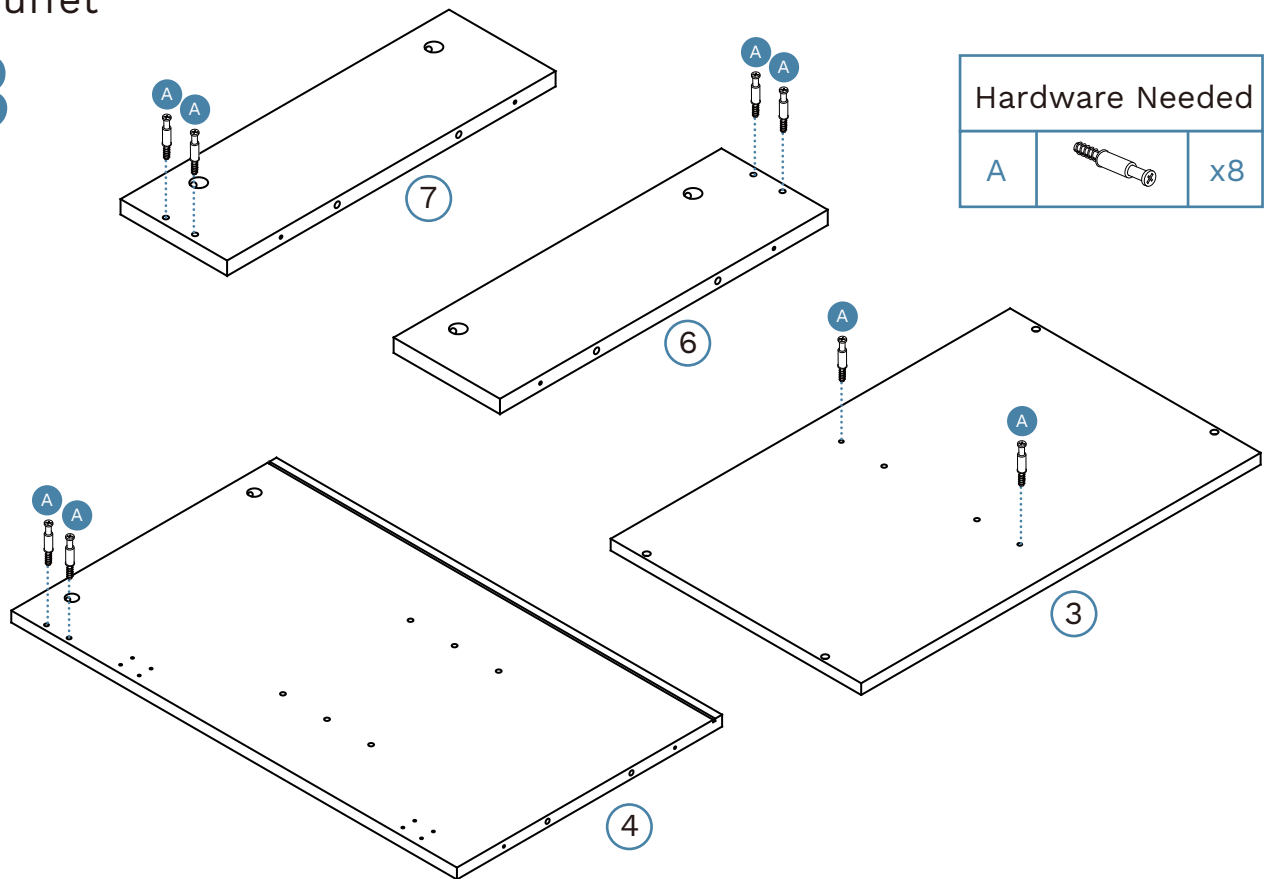


4

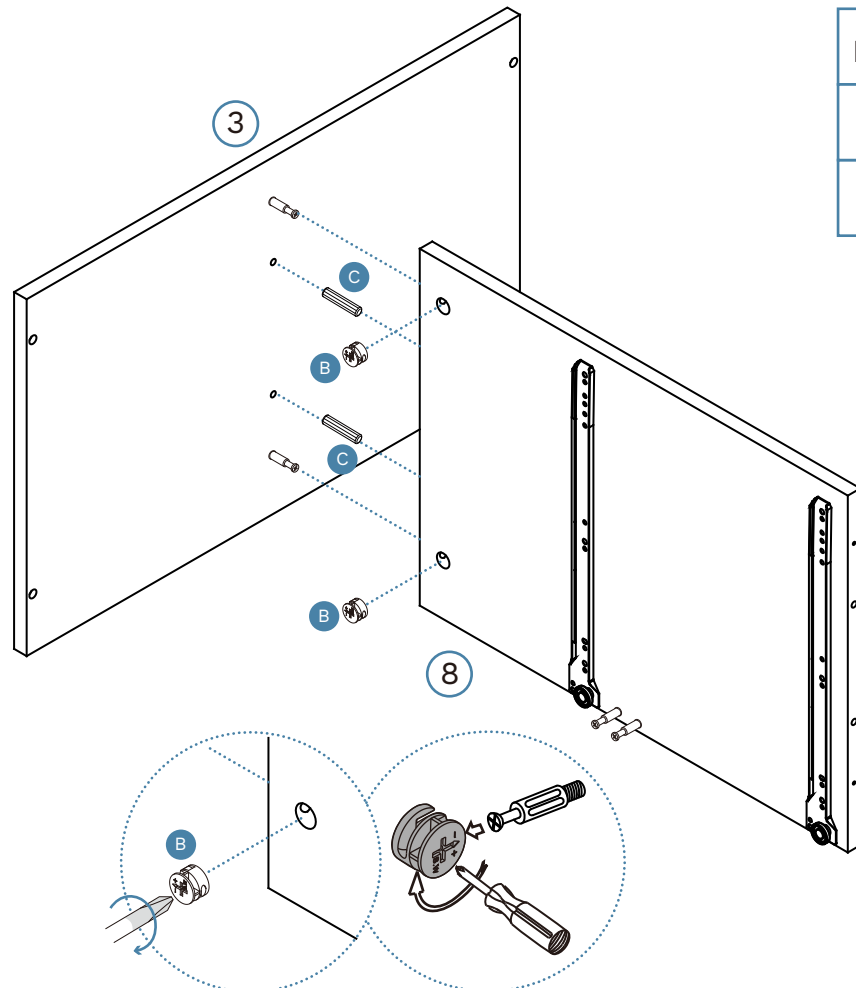 

Sadie Buffet

 
5

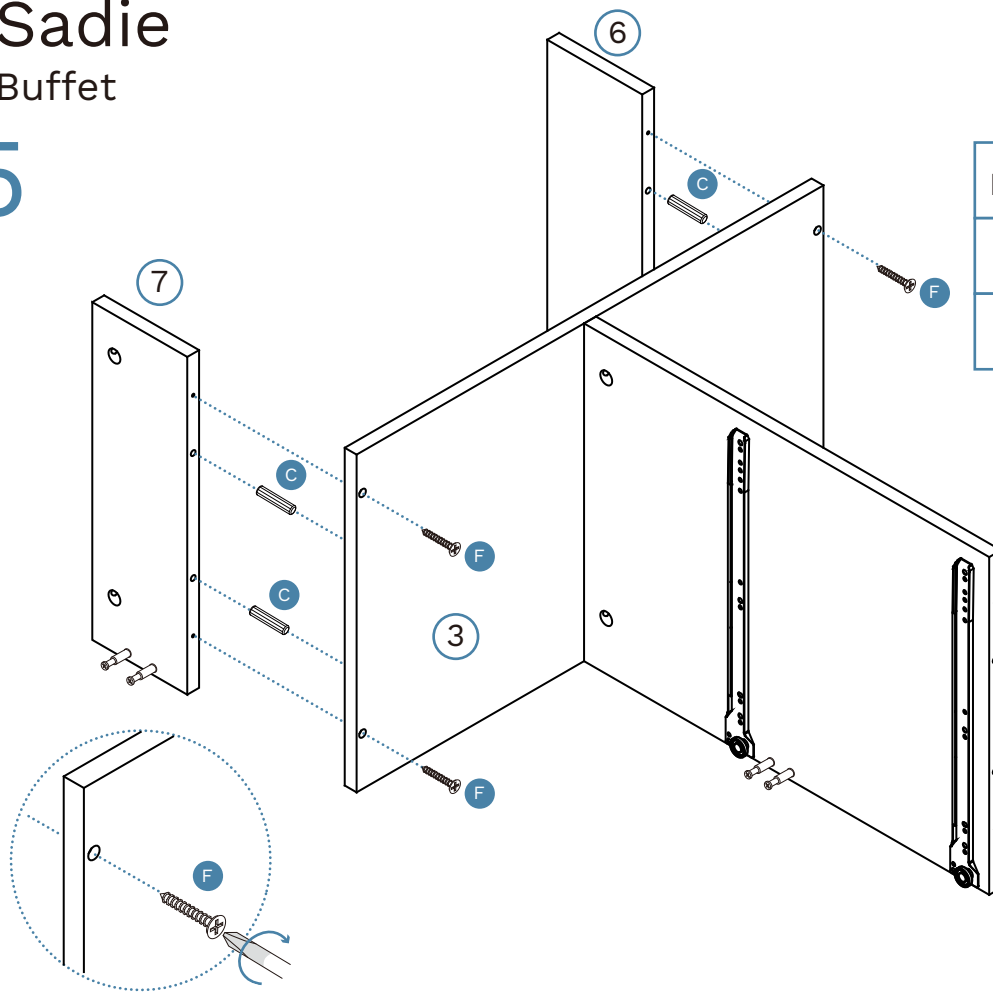

Hardware Needed

C		x4
F		x4

 6

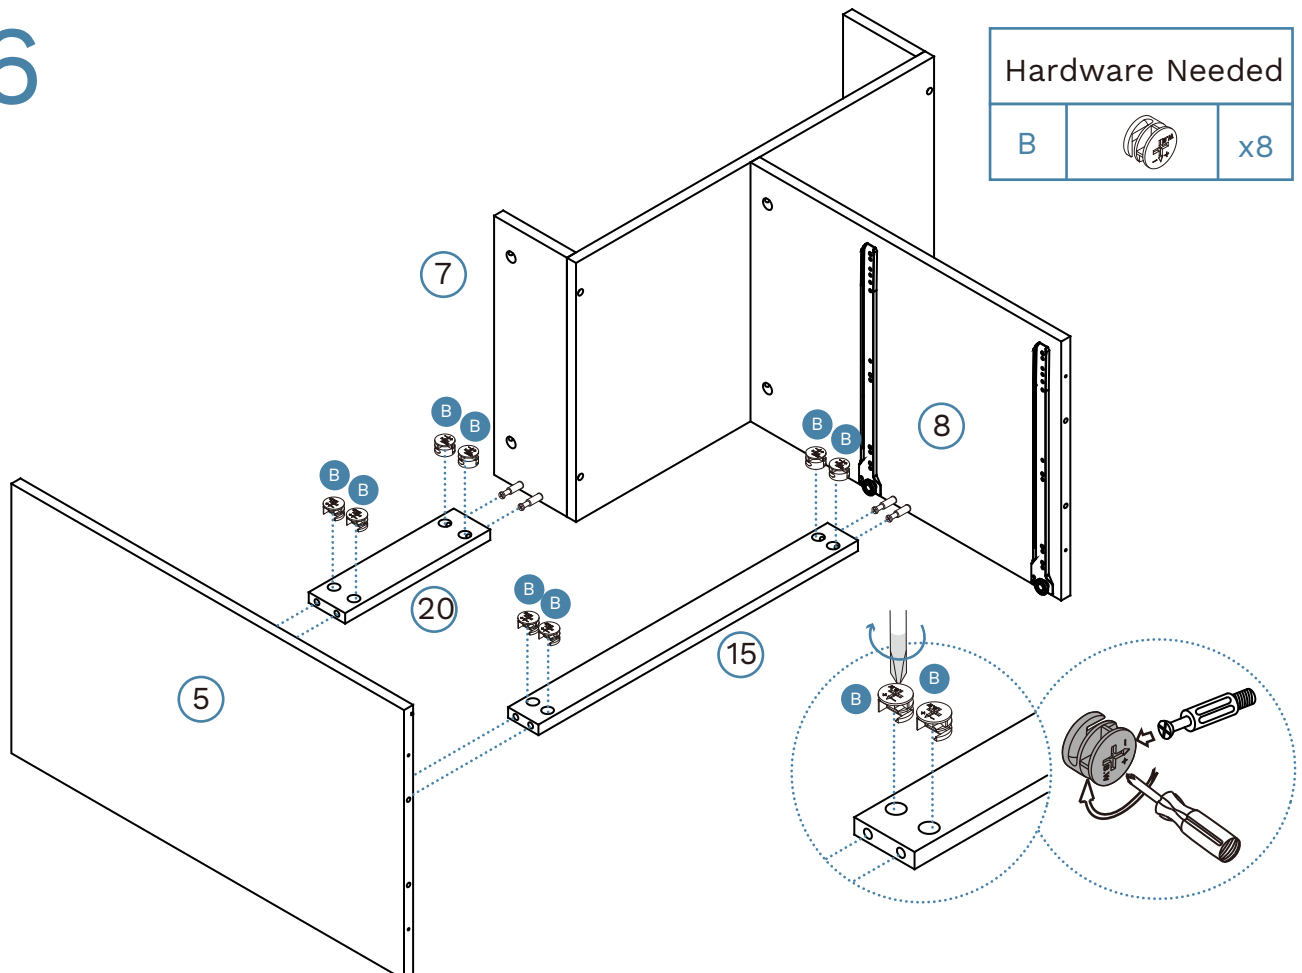


Hardware Needed


B		x8
---	--	----

Sadie Buffet

 7

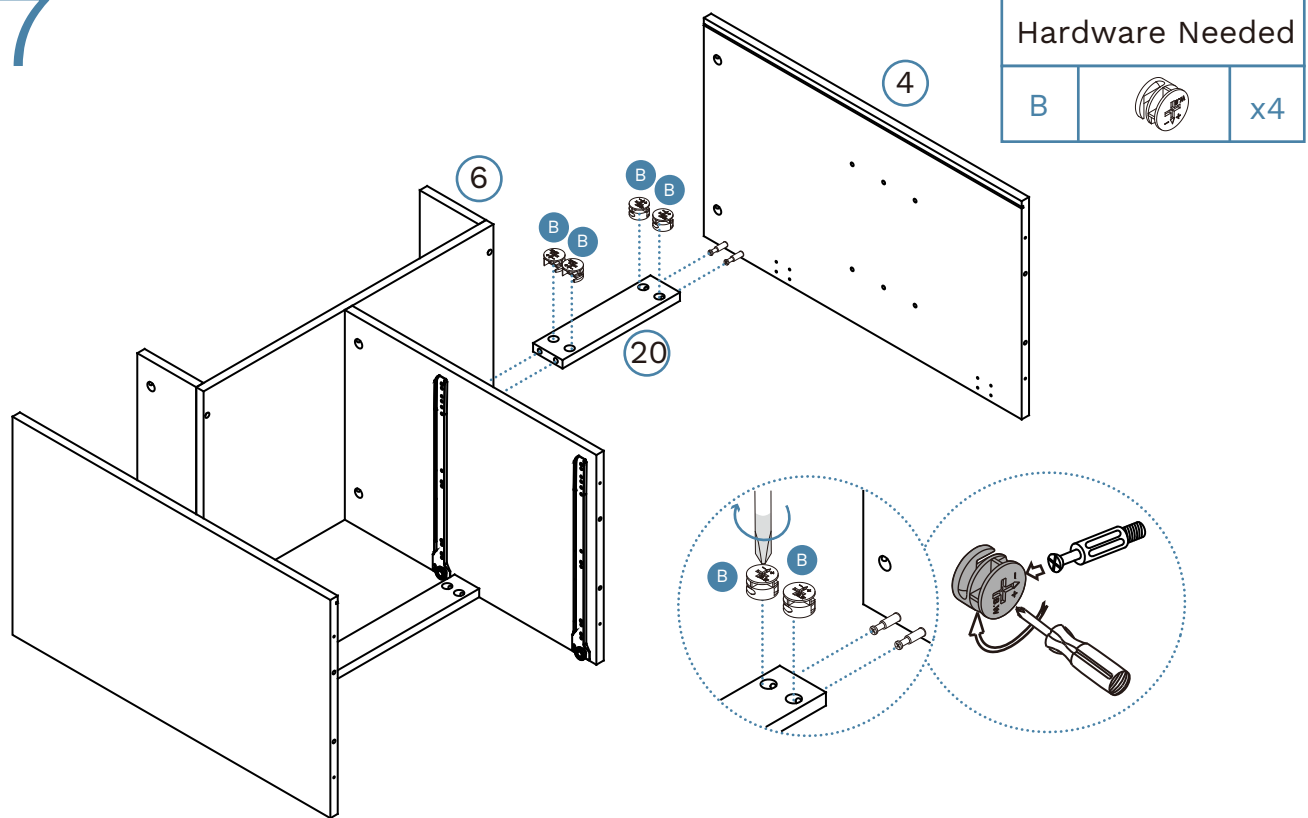


8

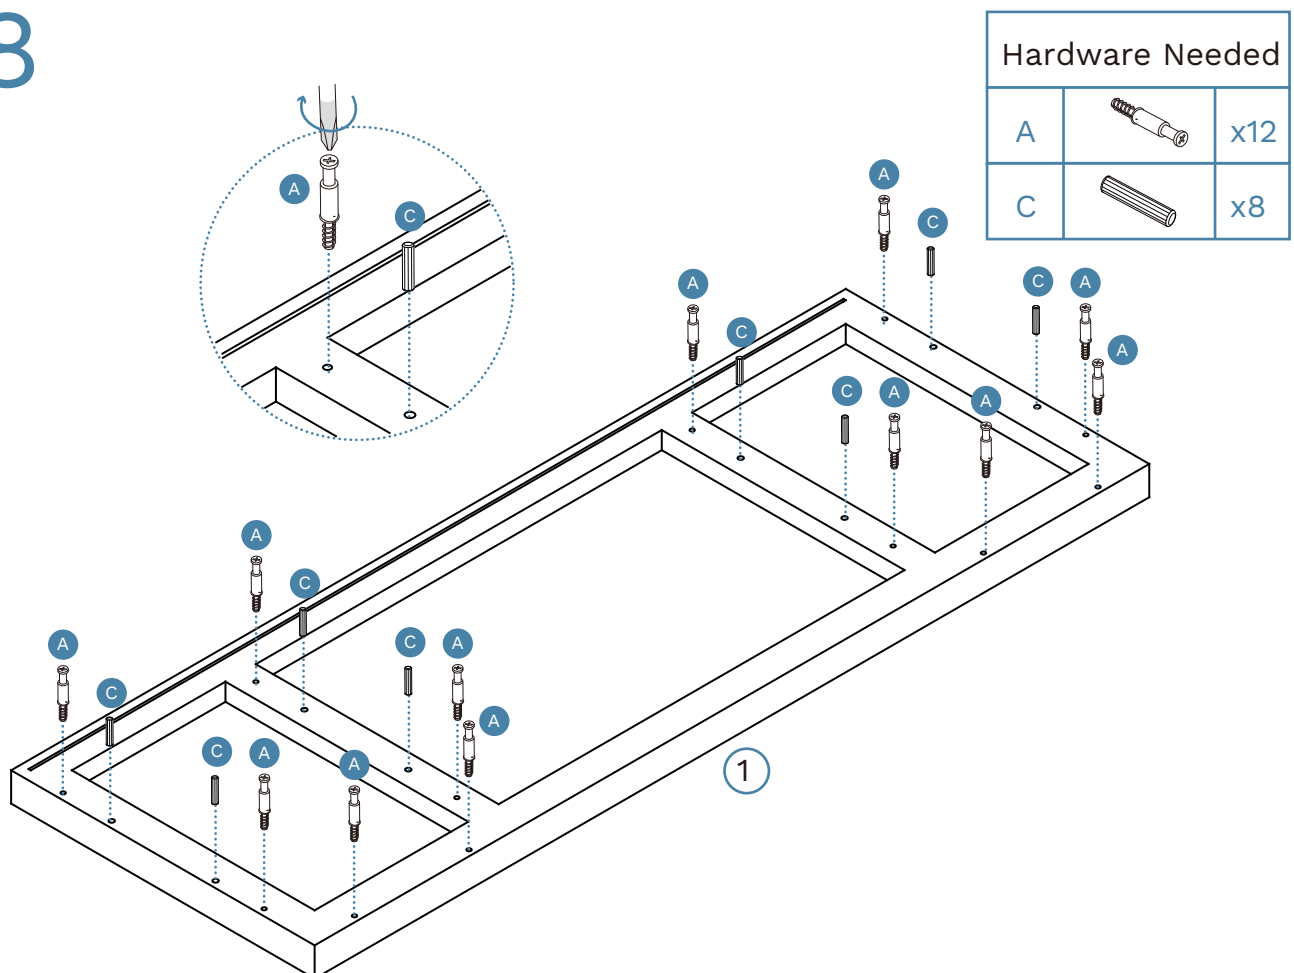 

Sadie Buffet

 9

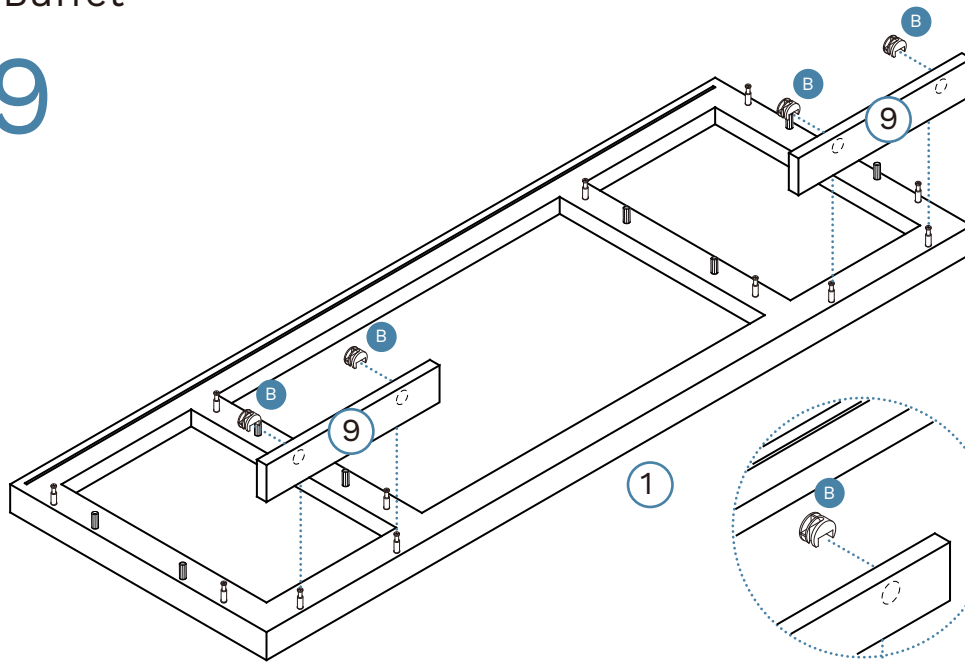


Hardware Needed

B



x4

 10

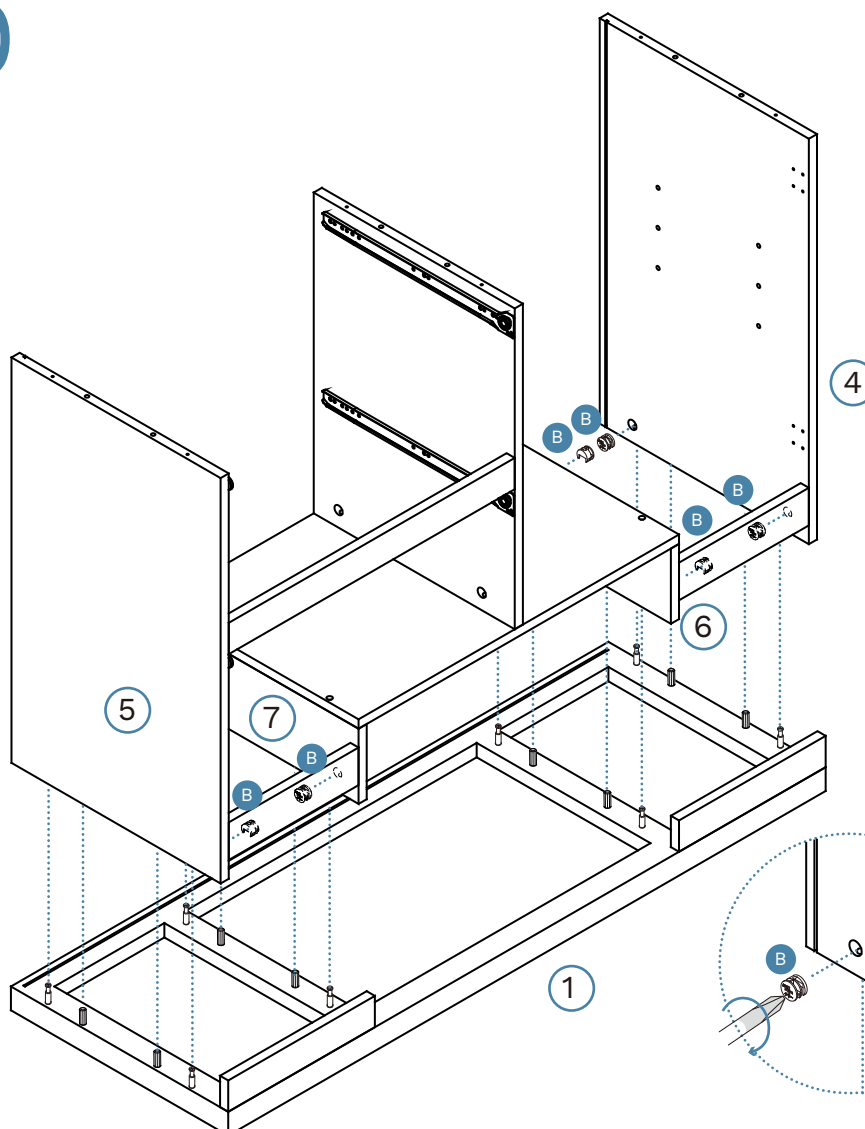

Hardware Needed

 
B




x8

Sadie Buffet



11

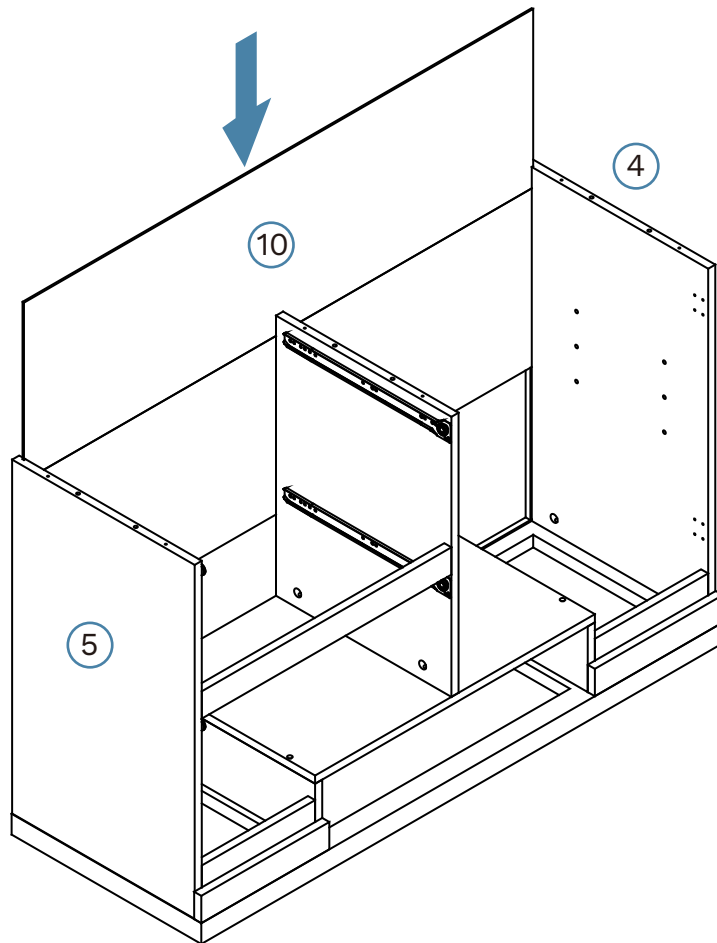


12

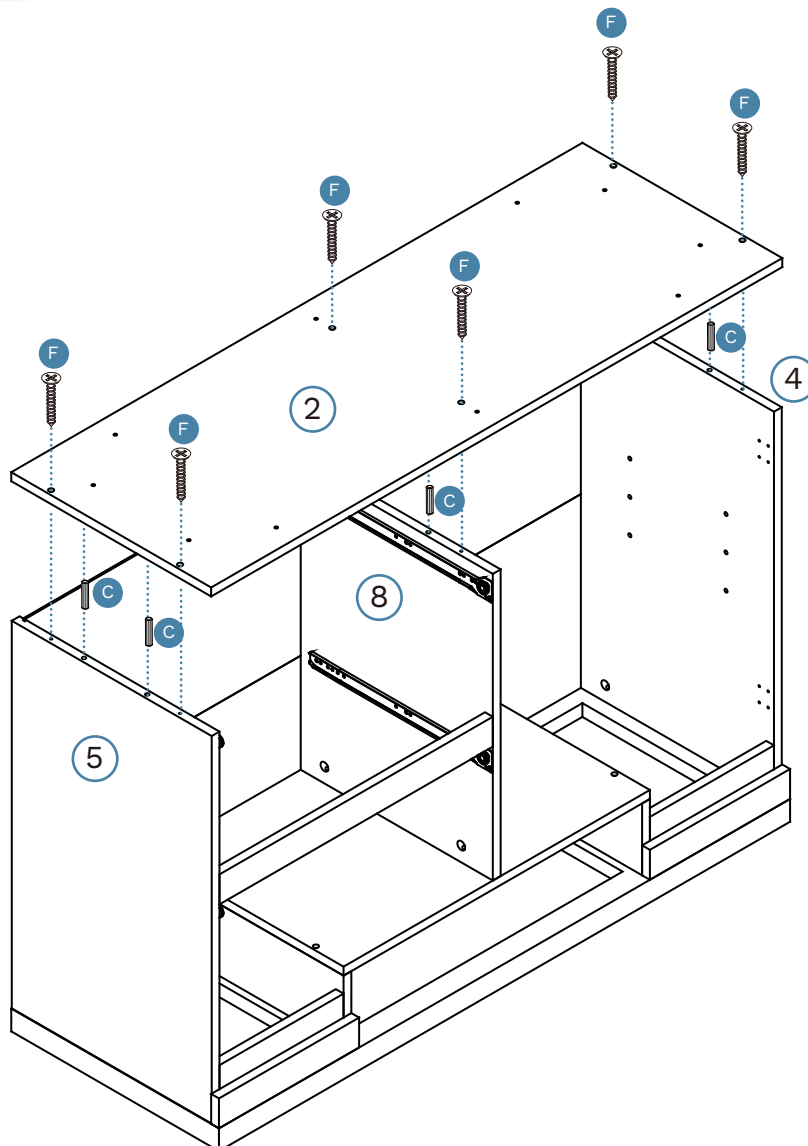 


Hardware Needed

 C		x6
F		x6

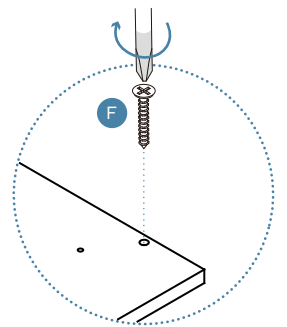 


Sadie Buffet

 13

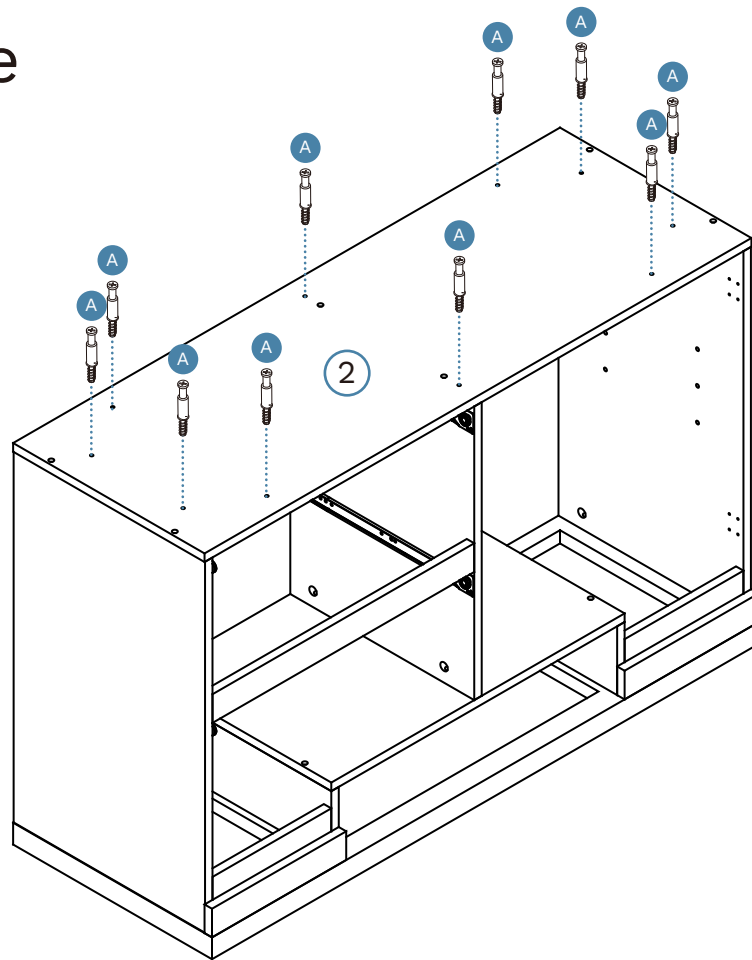


Hardware Needed

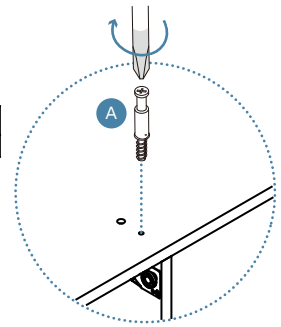 

A		x10
---	---	-----

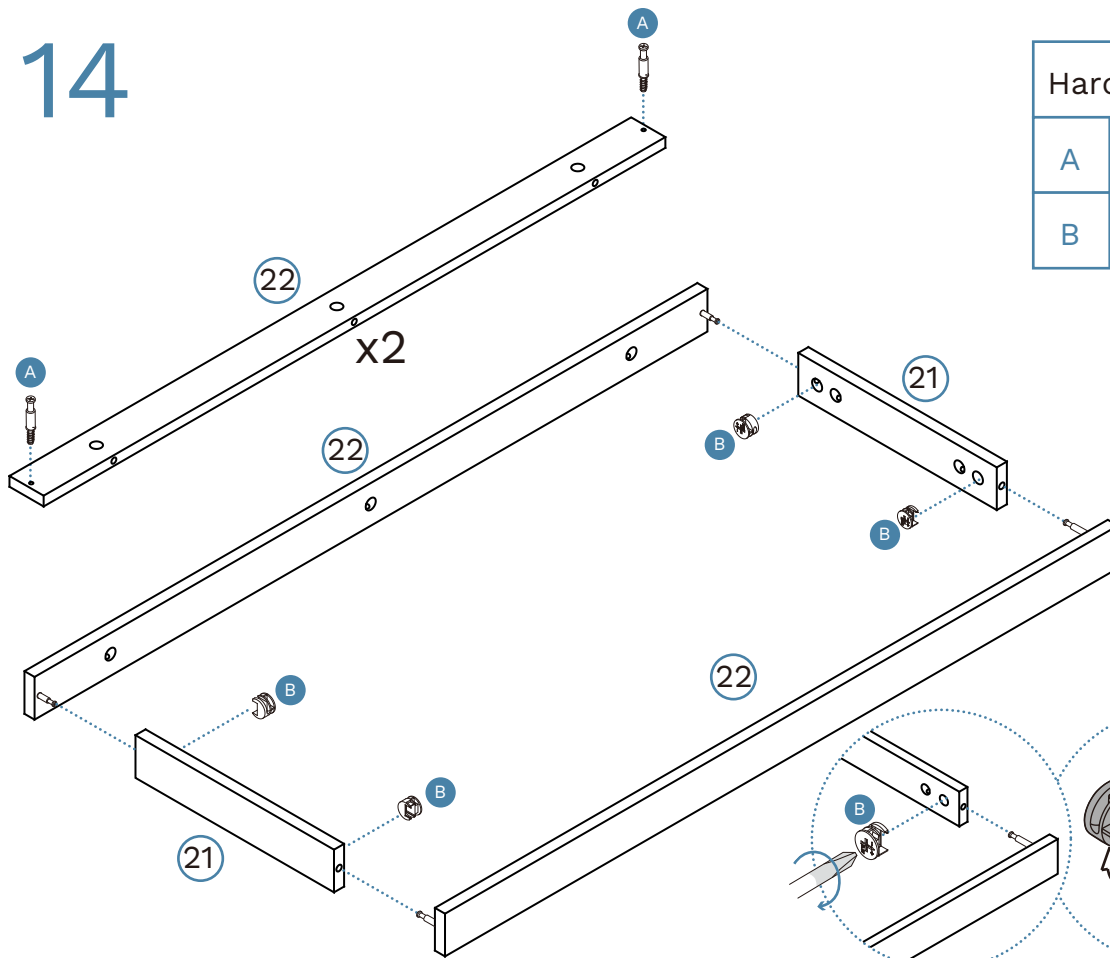 


14




Hardware Needed

A		x4
B		x4

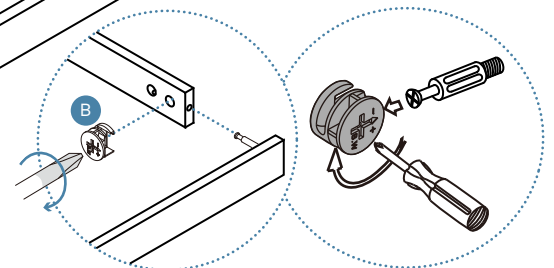 

Sadie Buffet

 15

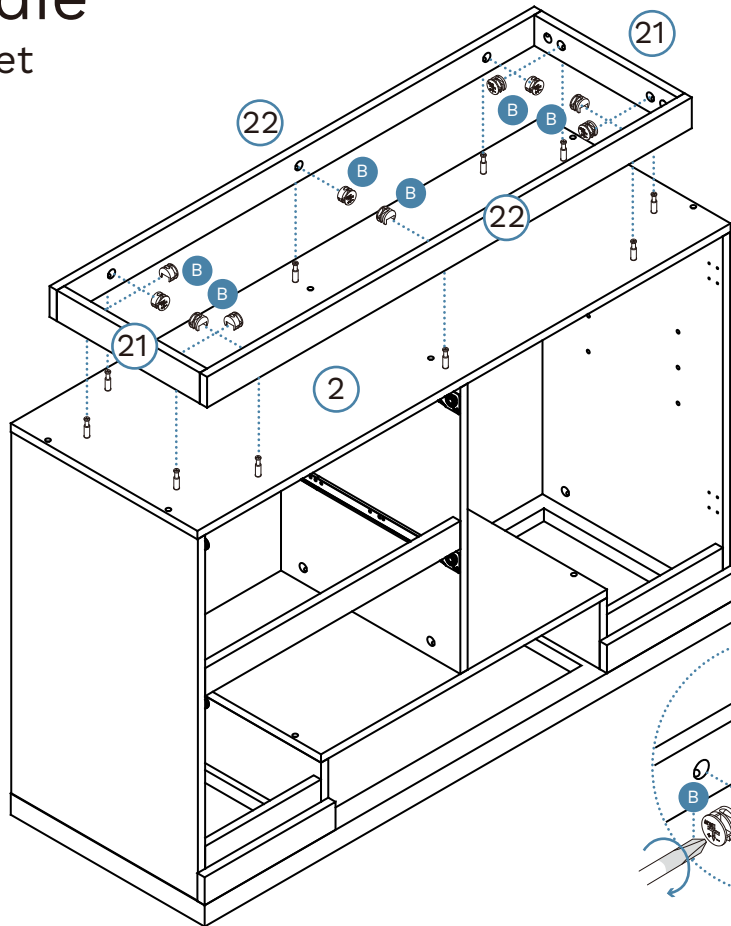


Hardware Needed

B




 x10

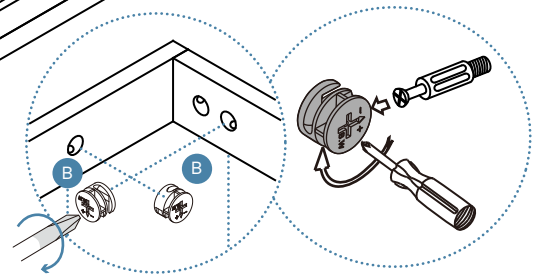

TURN OVER

 16

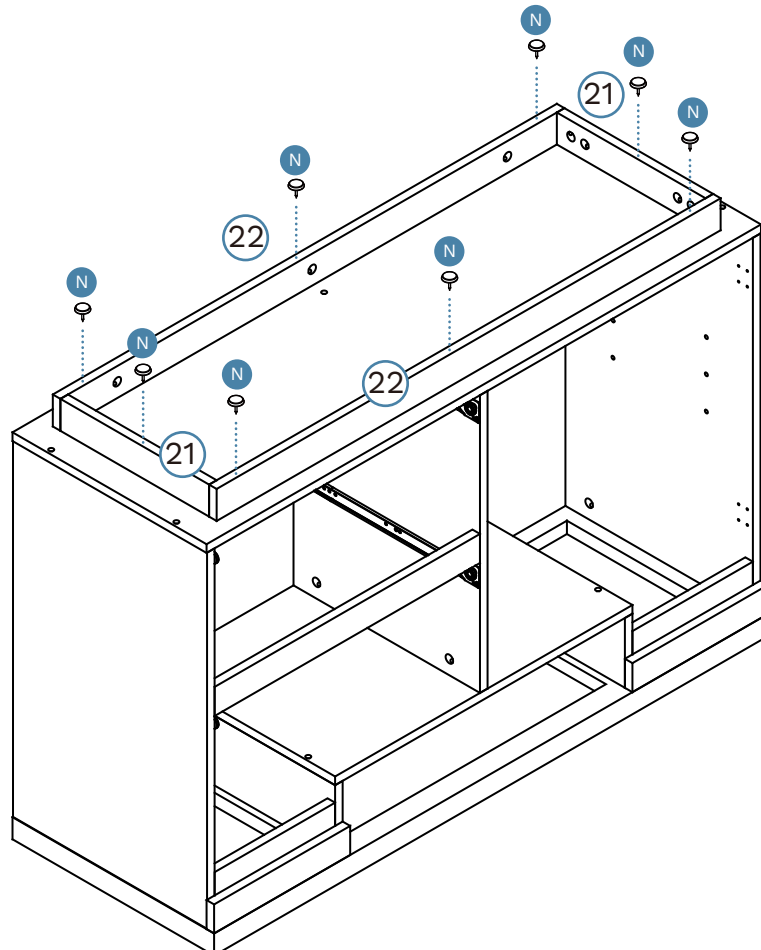


Hardware Needed

N




 x8

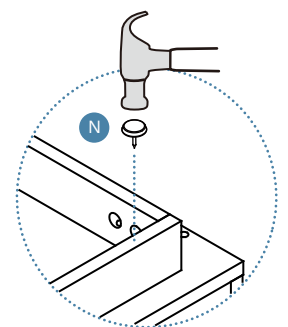

Sadie Buffet

 
17

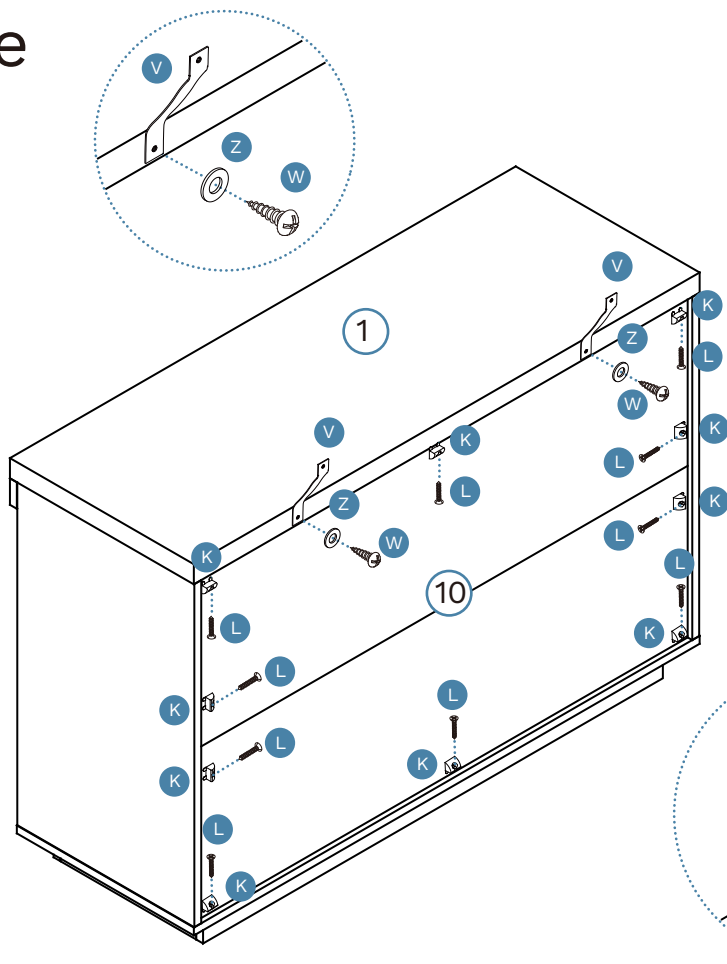

Hardware Needed

K		x10
L		x10
V		x2
W		x2
Z		x2

 18

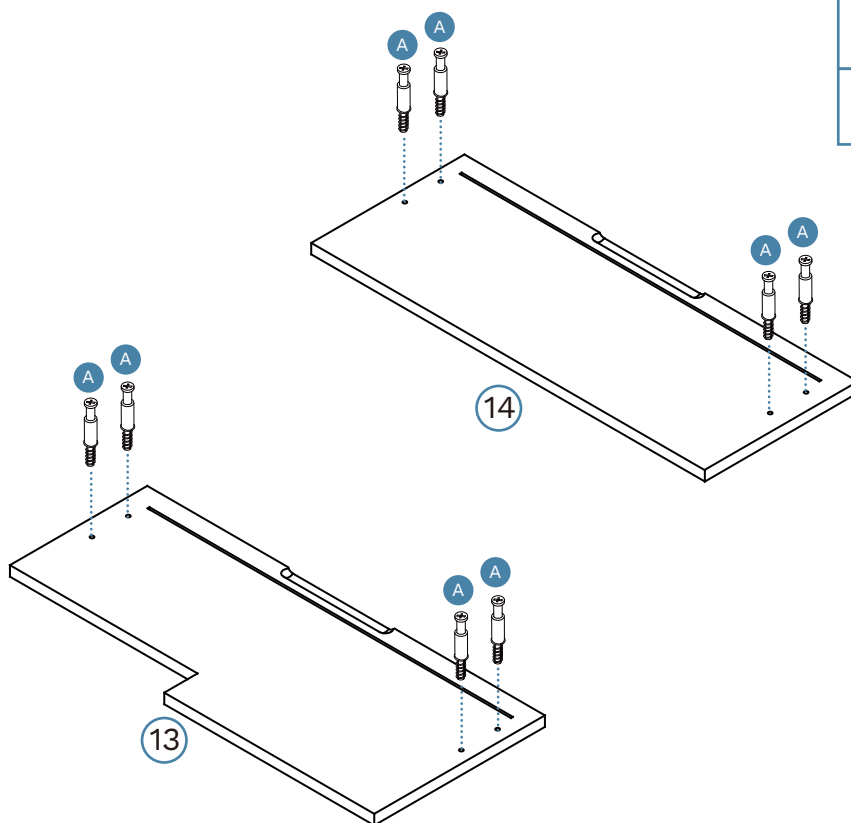


Hardware Needed


A		x8
---	--	----

Sadie Buffet

 19

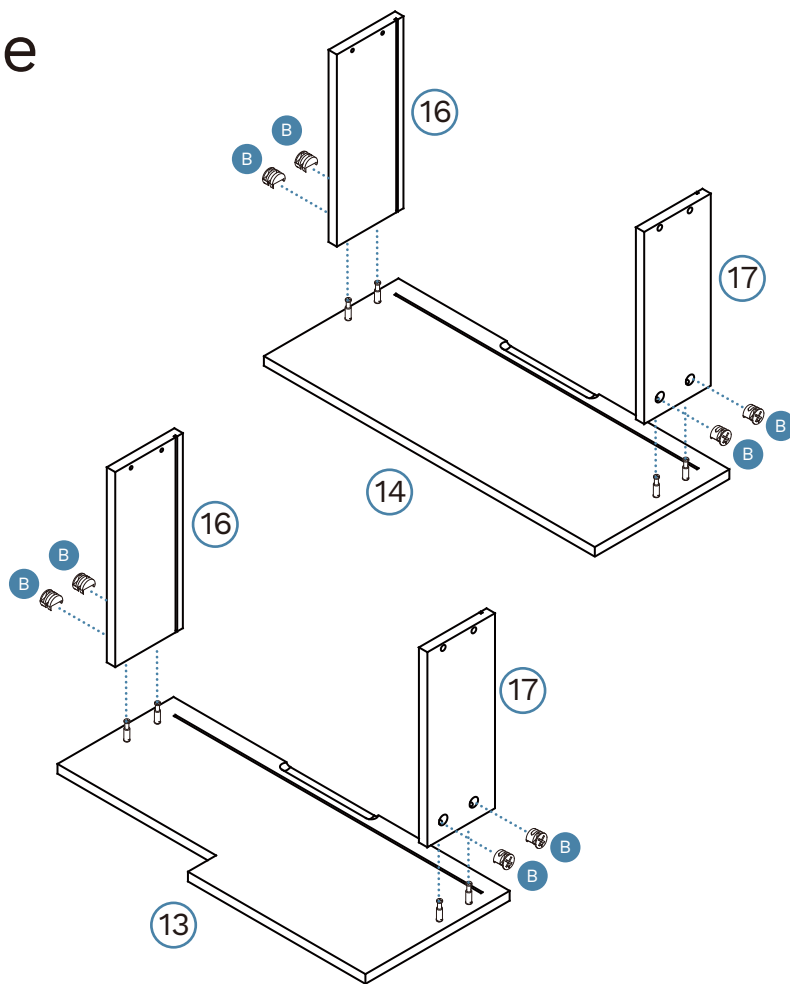


20

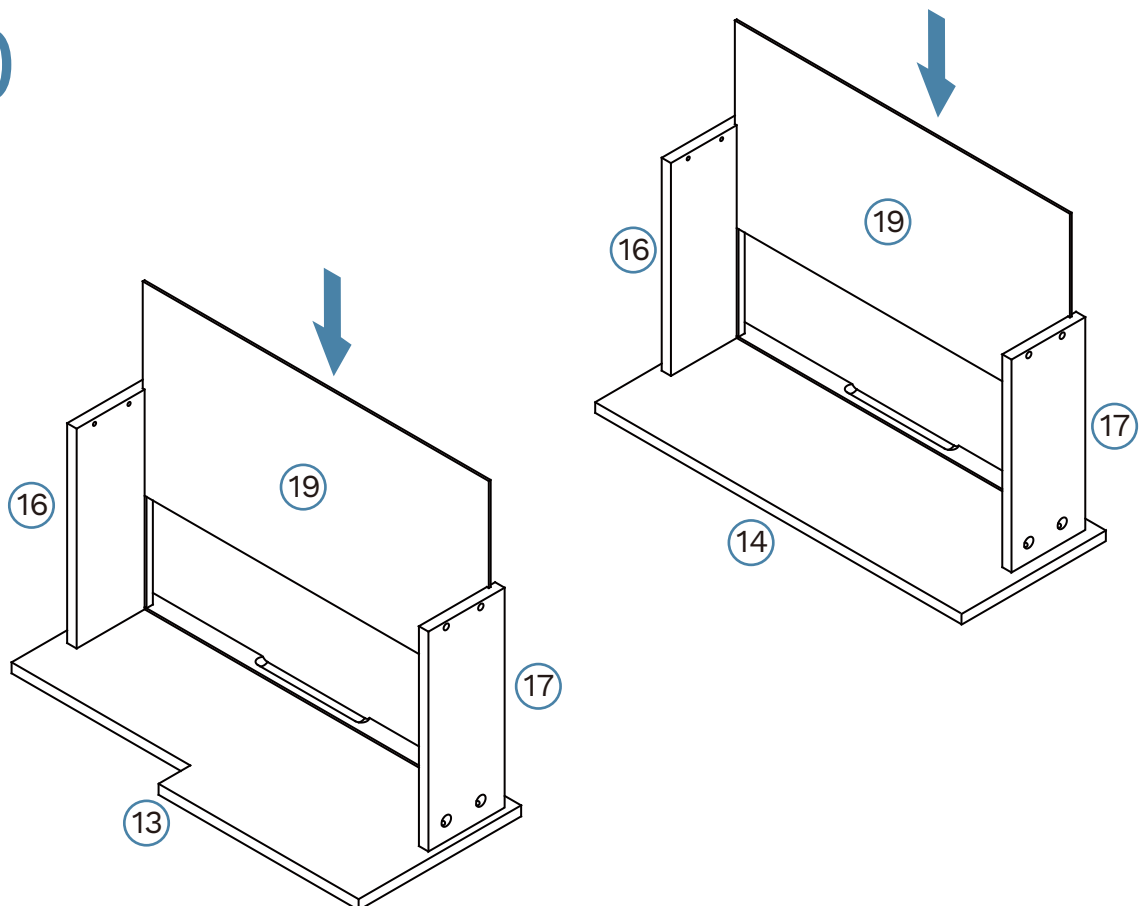 

Sadie Buffet

 
21

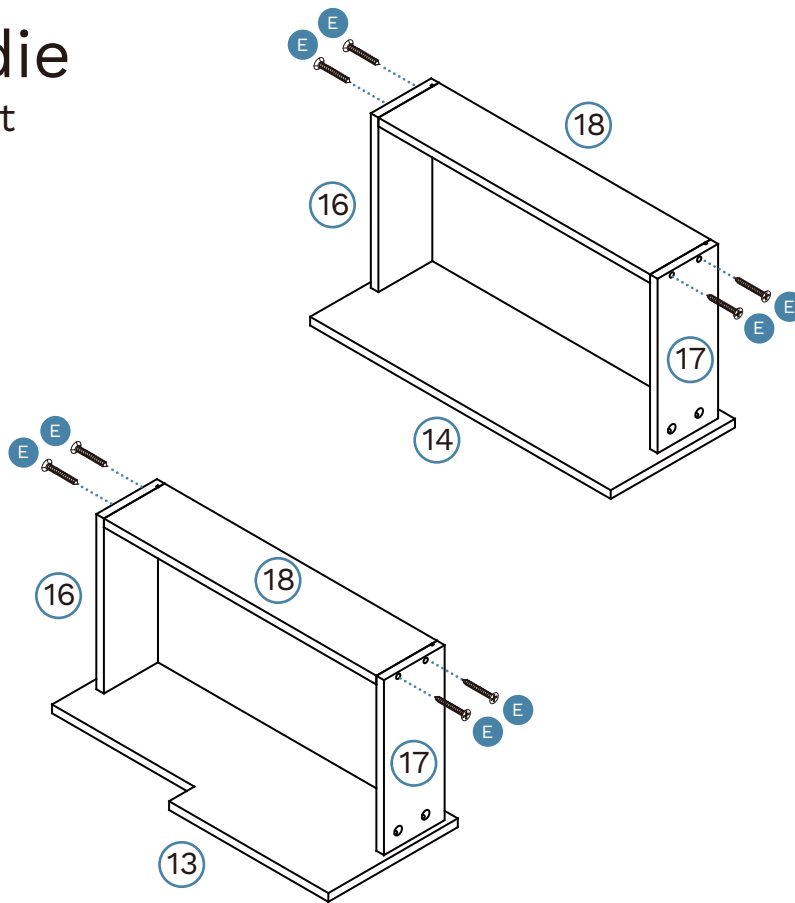




Hardware Needed


E		x8
---	---	----

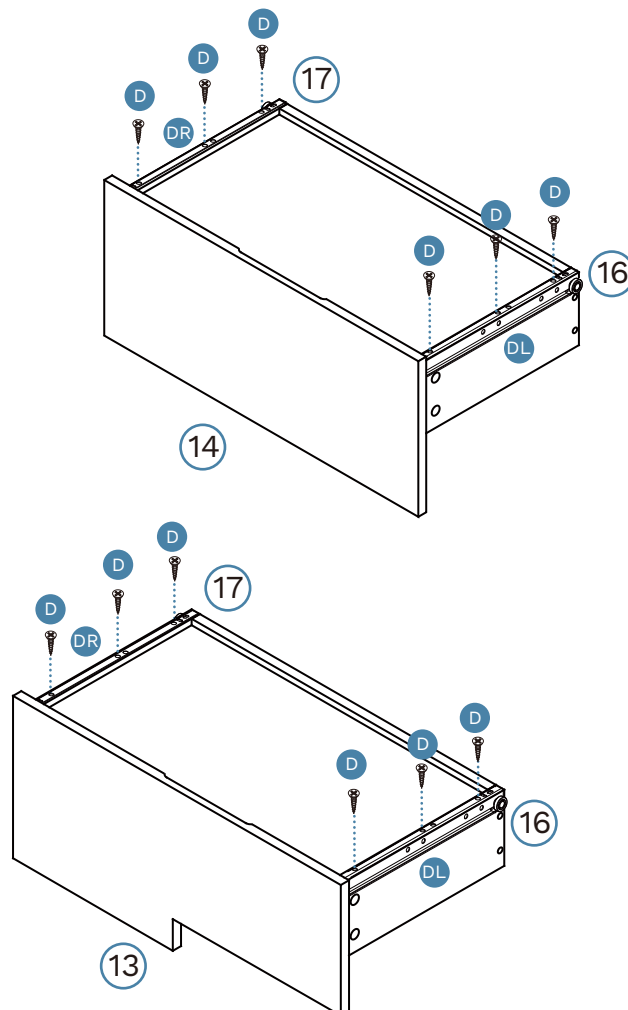 22



Hardware Needed


D		x12
DL		x2
DR		x2

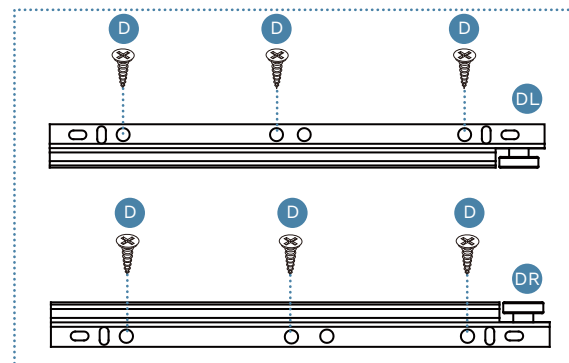 

Sadie


Buffet

 23

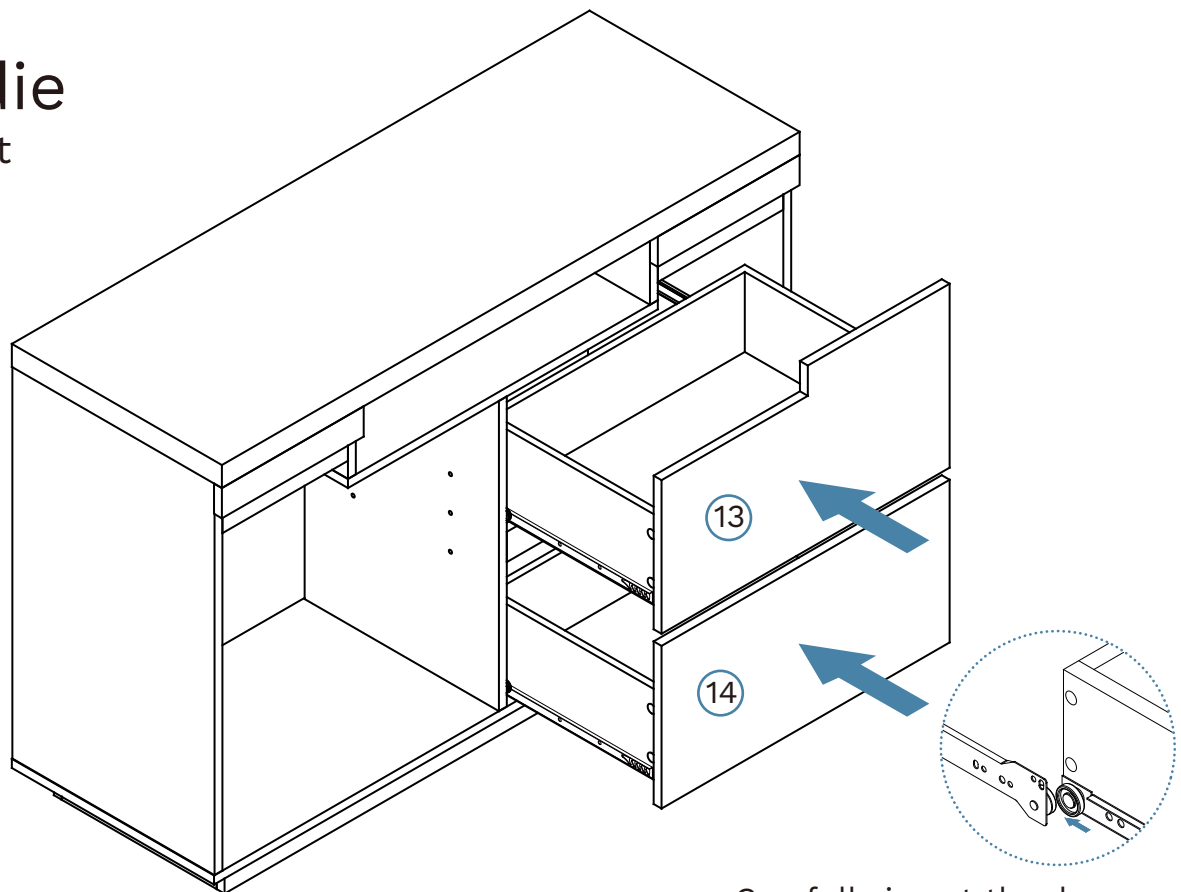

Carefully insert the drawers into the unit by gently guiding the runners into the tracks.

 24

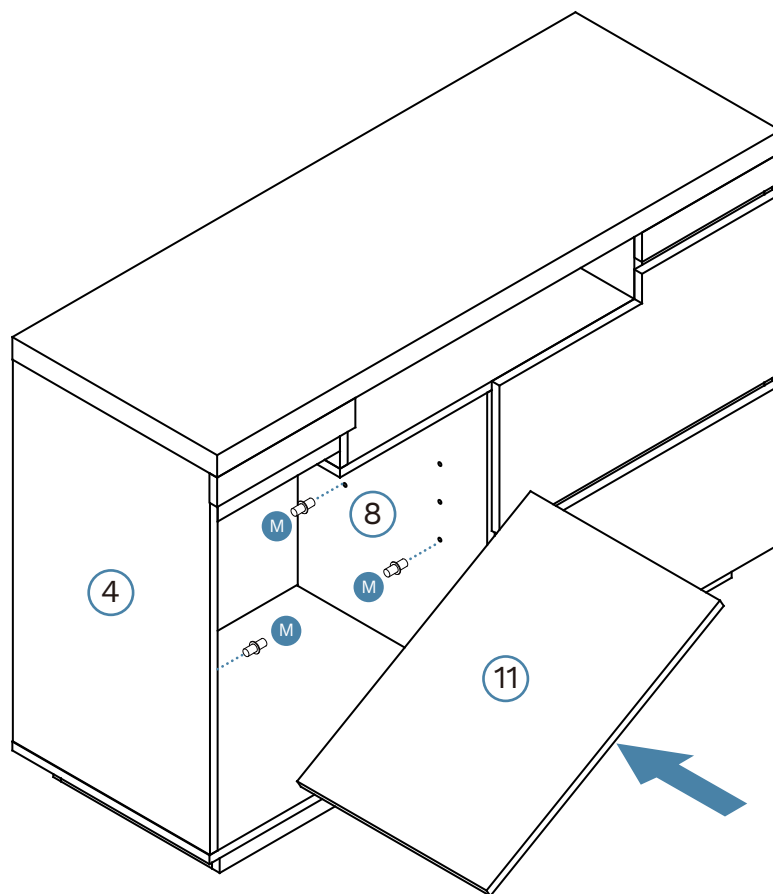

Hardware Needed

M



 
x4

Insert 4 x shelf plug (M) into panels [4, 8]. Rest the shelf panels [11] onto shelf plug (M). Ensure the shelves are balanced and stable.



Sadie

Buffet

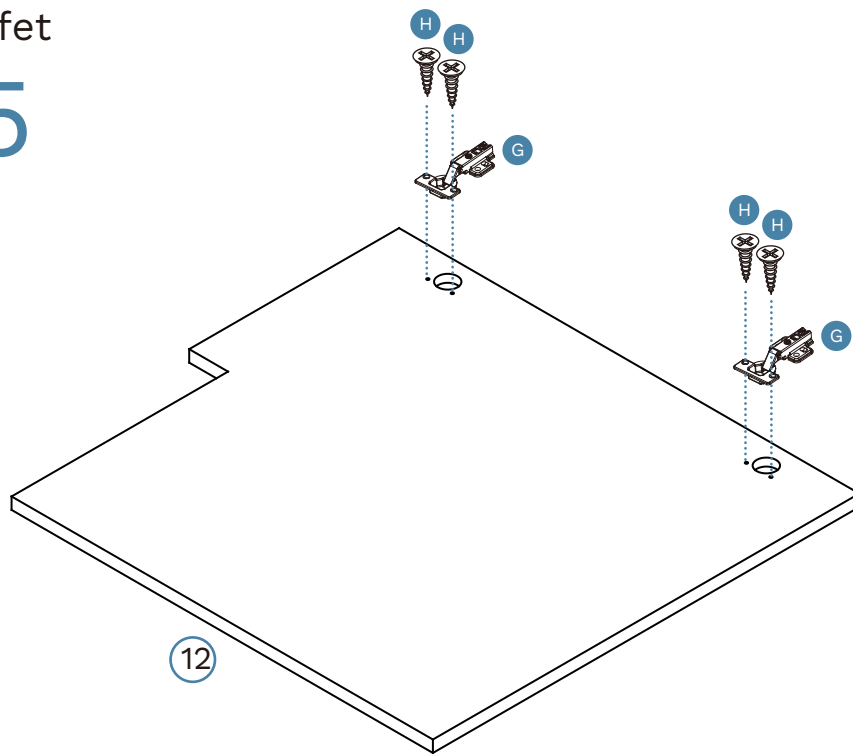
25



Hardware Needed

G		x2
H		x4

 26

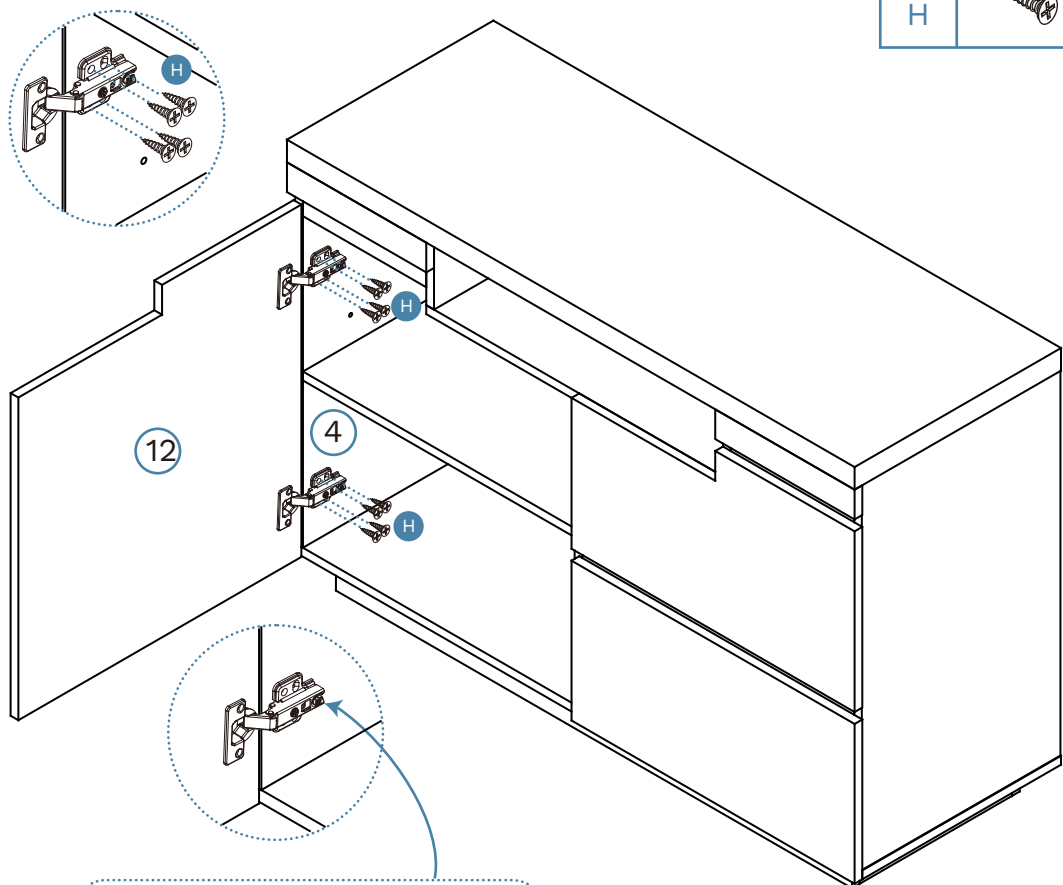

Hardware Needed


H		x8
---	---	----

NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush.




Sadie

 Buffet

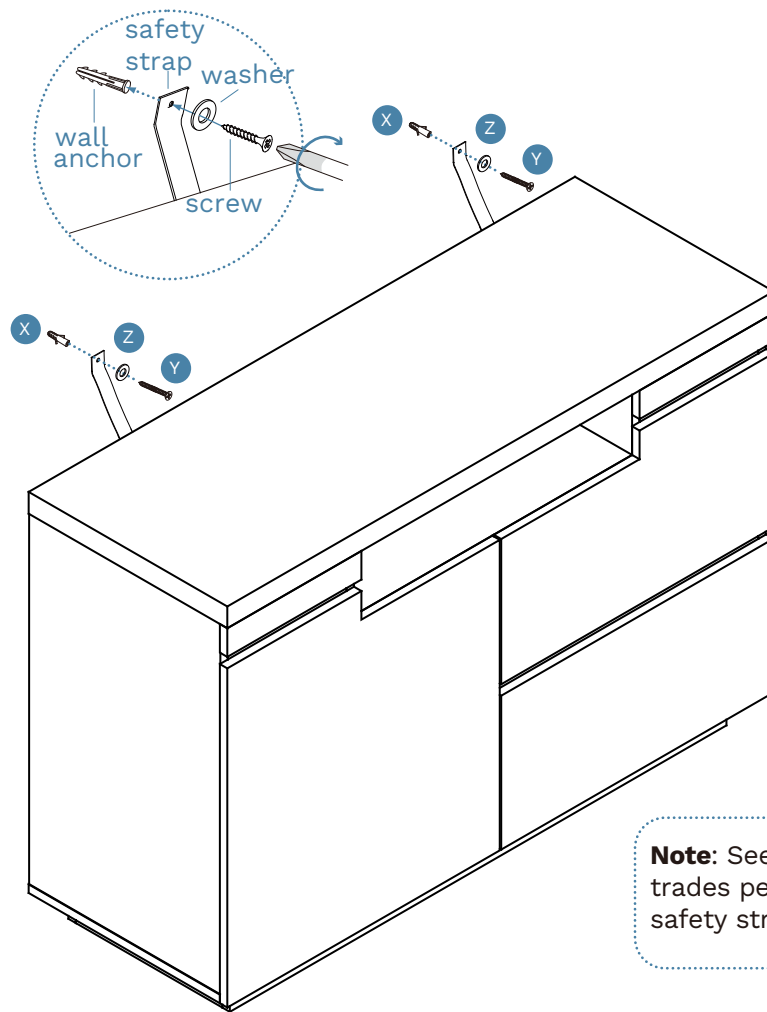27




Hardware Needed

X		x2
Y		x2
Z		x2

Note: Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

 28

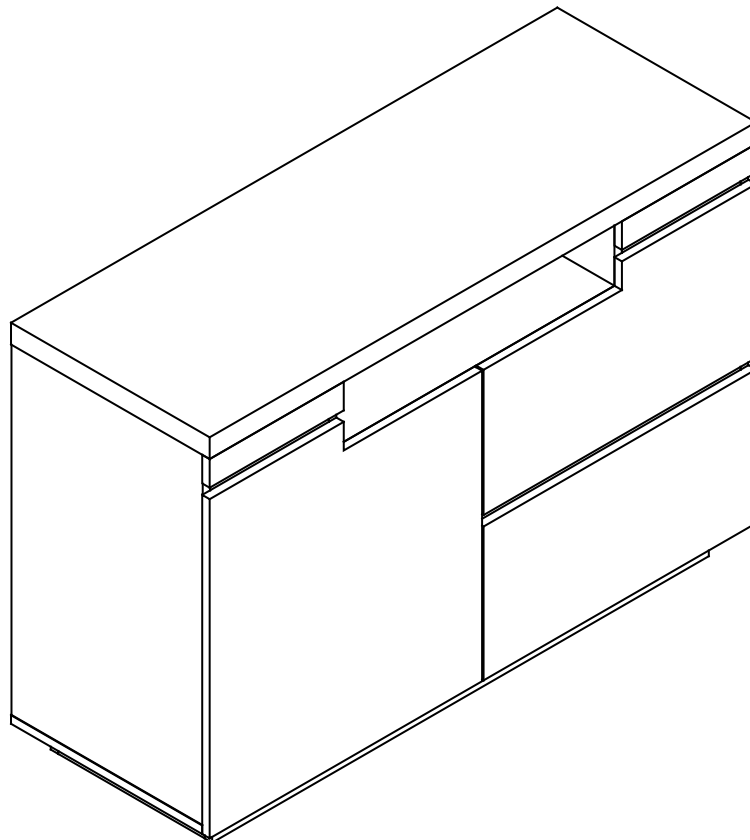

Once assembled lift furniture into place, do not drag. You're done, enjoy!

 
Sadie

Buffet

HOW TO ADJUST THE HINGES TO
ALIGN THE DOORS IF NEEDED.


STEP 1

Open the door.

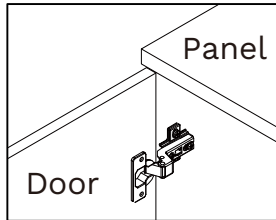

STEP 2

 Adjust the door panels upward or downward

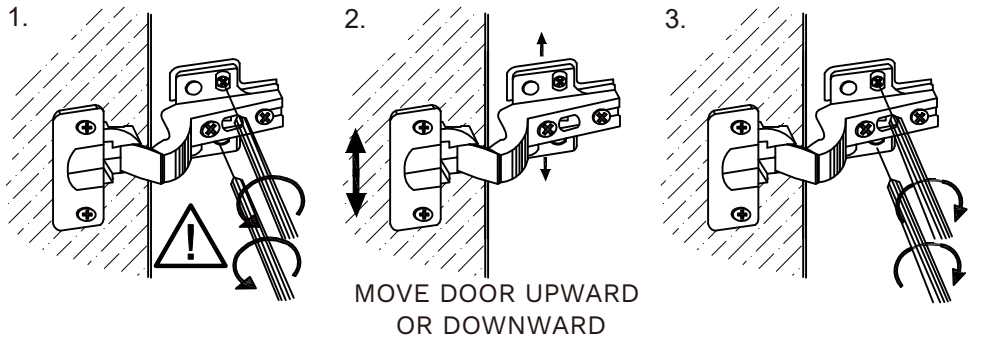


Unscrew 2 screws in round holes loosen 2 screws in oval holes a bit.

Tighten 2 screws in oval holes. Screw in 2 screws in round holes

STEP 3

 Adjust the flush between door panel and side panel

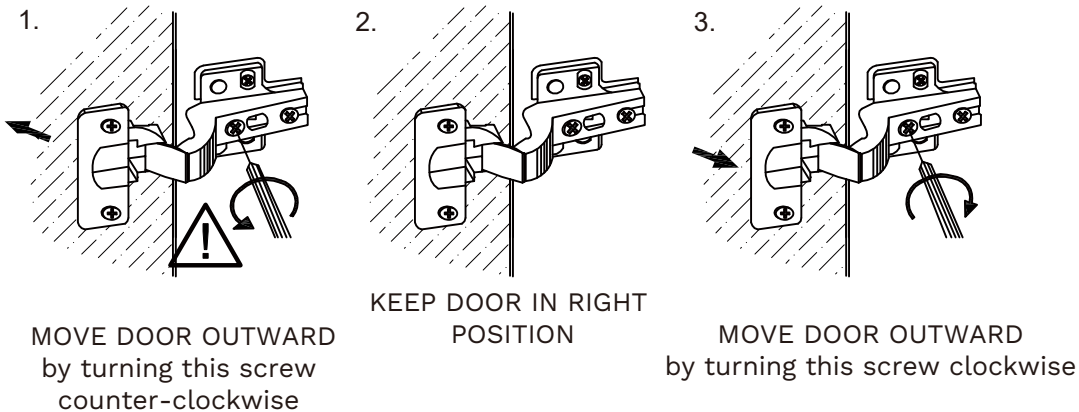


MOVE DOOR OUTWARD by turning this screw counter-clockwise

KEEP DOOR IN RIGHT POSITION

MOVE DOOR OUTWARD by turning this screw clockwise

STEP 4

 Adjust the Gap between door panel and side panel

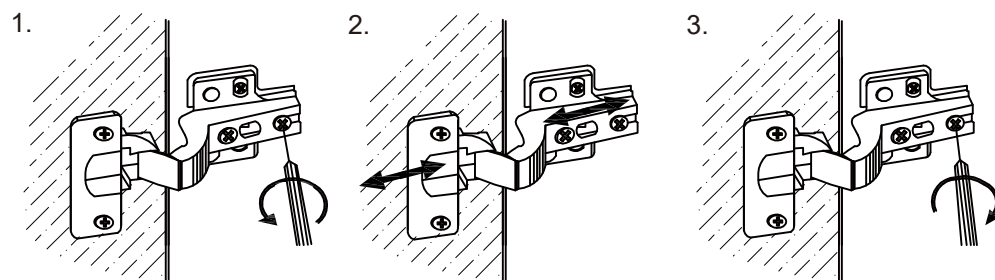

Loosen this screw a bit.

MOVE DOOR BACK OR FORTH

Re-tighten this screw.