 



Urban Ladder Shelf

Assembly Instructions


Thank you for your purchase.
Please follow the instructions below for correct assembly.

mocka

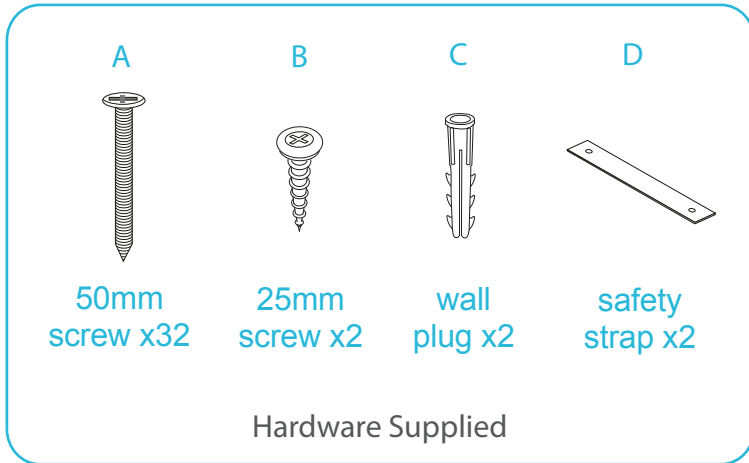

Phillips screwdriver required

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

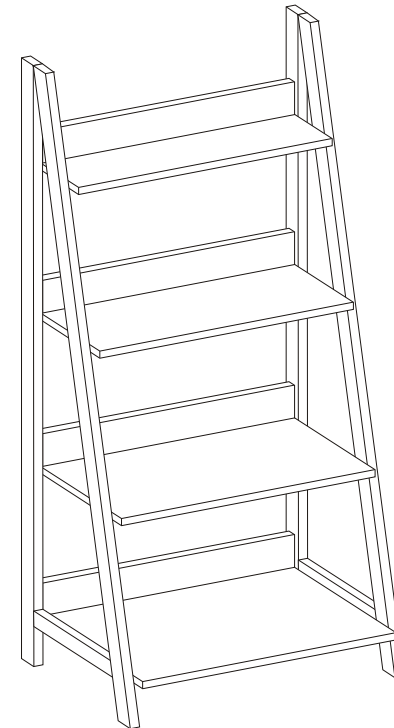


Urban Ladder Shelf

Assembly Instructions


mocka

1

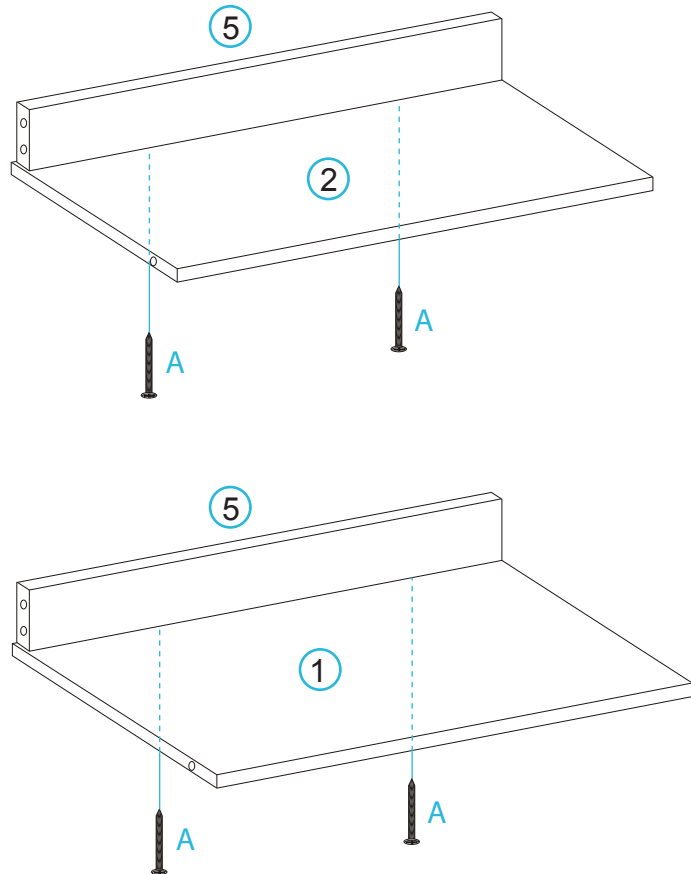

Attach panel [5] to panel [2] using 2x 50mm screws (A). Attach panel [5] to panel [1] using 2x 50mm screws (A). Tighten with a screwdriver.

2

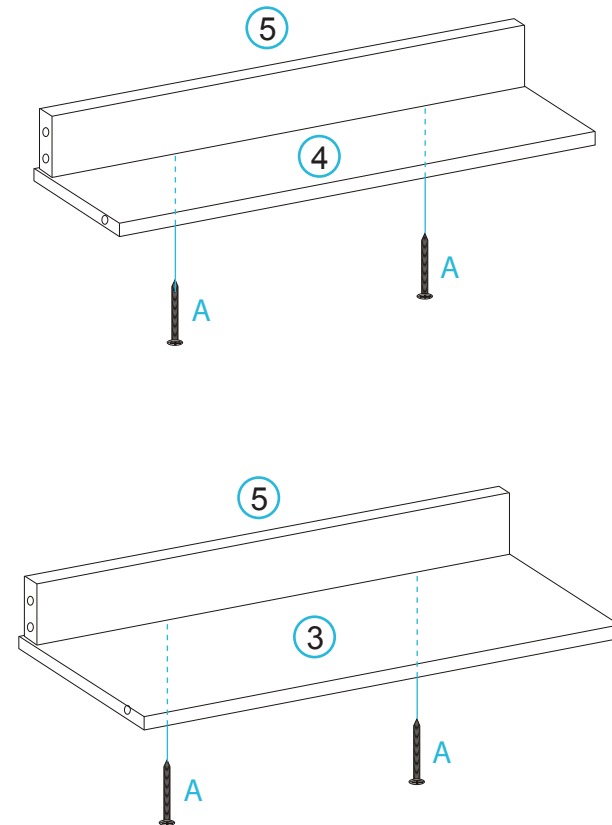


Attach panel [5] to panel [4] using 2x 50mm screws (A). Attach panel [5] to panel [3] using 2x 50mm screws (A). Tighten with a screwdriver.

Urban Ladder Shelf

Assembly Instructions


mocka

3

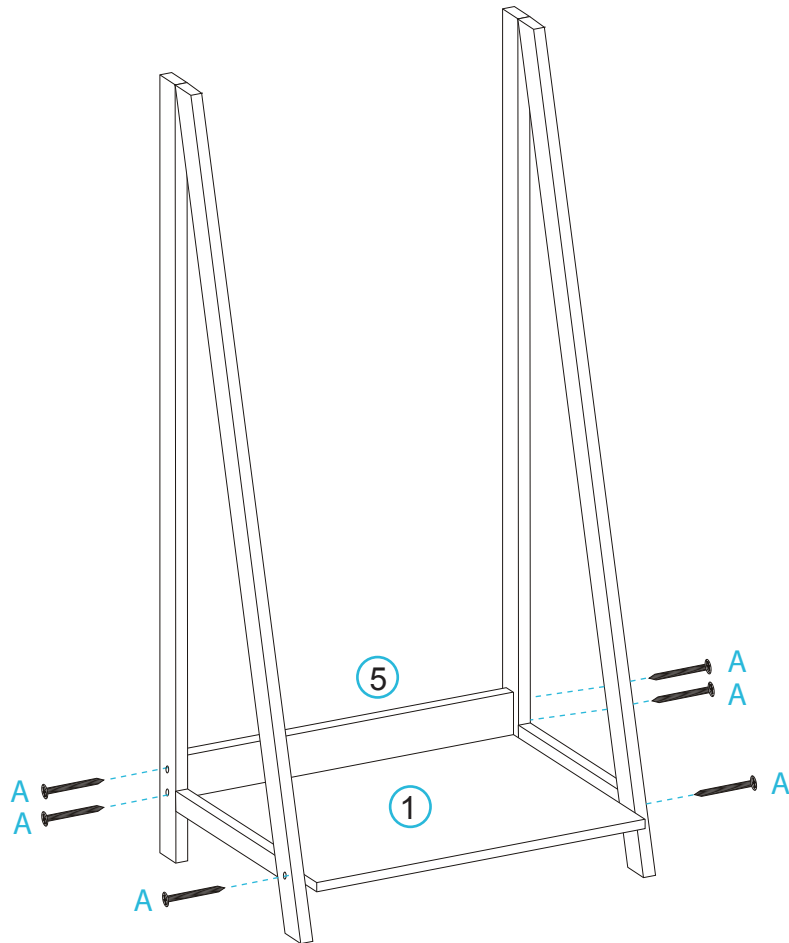

Attach panels [1] and [5] to the side panels using 6x 50mm screws (A). Tighten with a screwdriver.

4

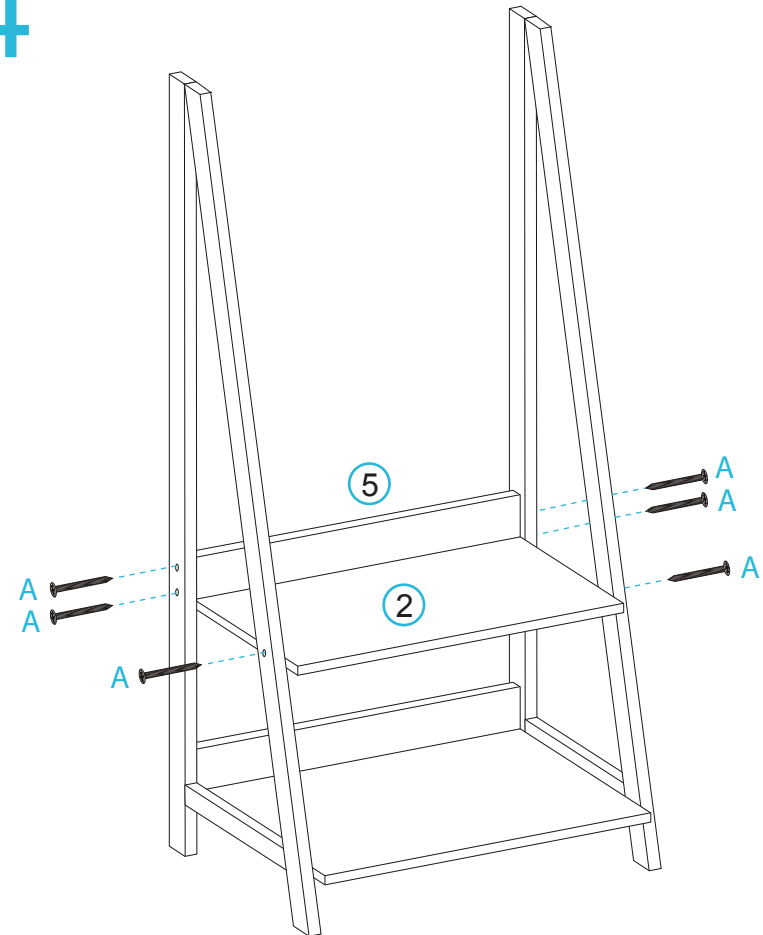


Attach panels [2] and [5] to the side panels using 6x 50mm screws (A). Tighten with a screwdriver.

Urban Ladder Shelf

Assembly Instructions


mocka

5

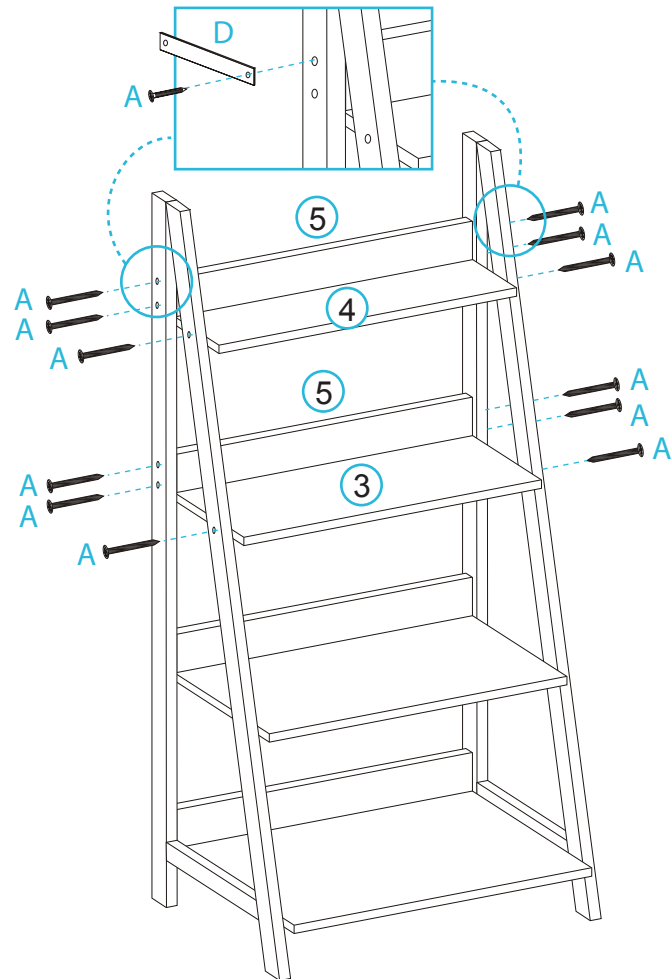

Attach panels [4] and [5] to the side panels using 6x 50mm screws (A), while also securing the 2x safety straps (D), as shown. Attach panels [3] and [5] to the side panels using 6x 50mm screws (A). Tighten with a screwdriver.

6

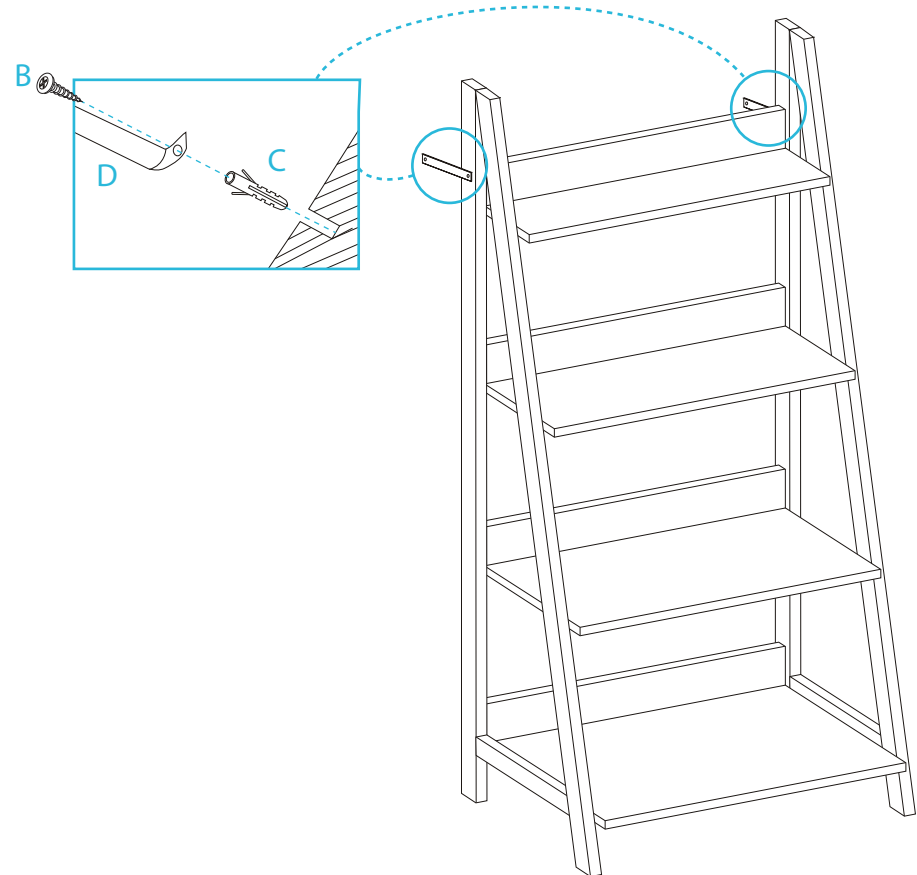

Once assembled lift furniture into place, do not drag. Attach the other end of the safety straps (D) to the wall using 2x wall plugs (C) and 2x 25mm screws. Tighten with a screwdriver. You're done, enjoy!