

Six Drawer

Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz

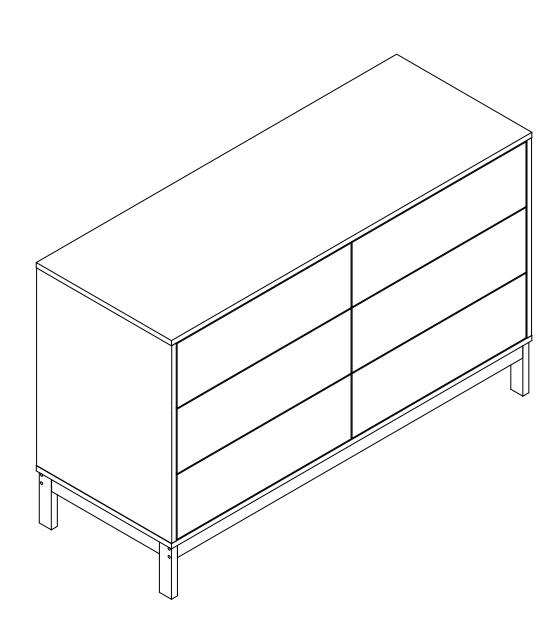

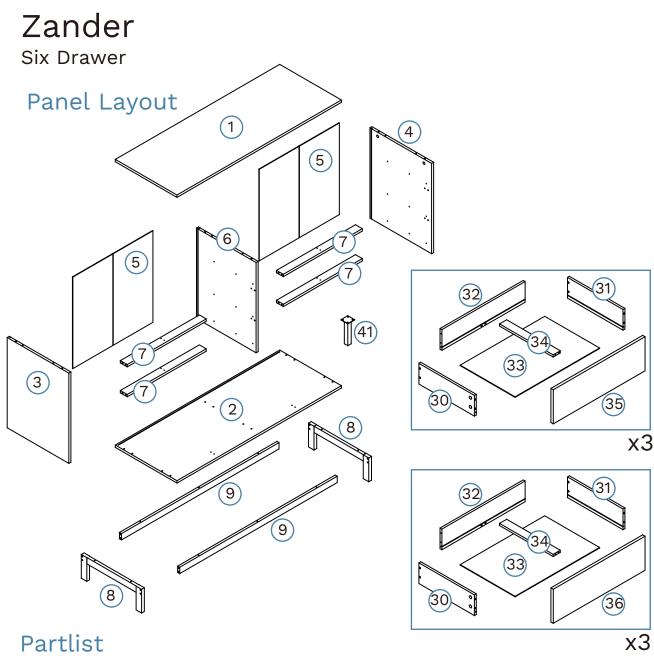





1	Top Panel	x1	30	Left Drawer Side	x6
2	Bottom Panel	x1	31	Right Drawer Side	x6
3	Left Side Panel	x1	32	Drawer Back	x6
4	Right Side Panel	x1	33	Drawer Base	x6
5	Back Panel	x2	34	Rail	x6
6	Divider	x1	35	Drawer Front	x3
7	Rail	x4	36	Drawer Front	x3
8	Leg	x2	(41)	Support Leg	x1
9	Rail	x2			



Six Drawer

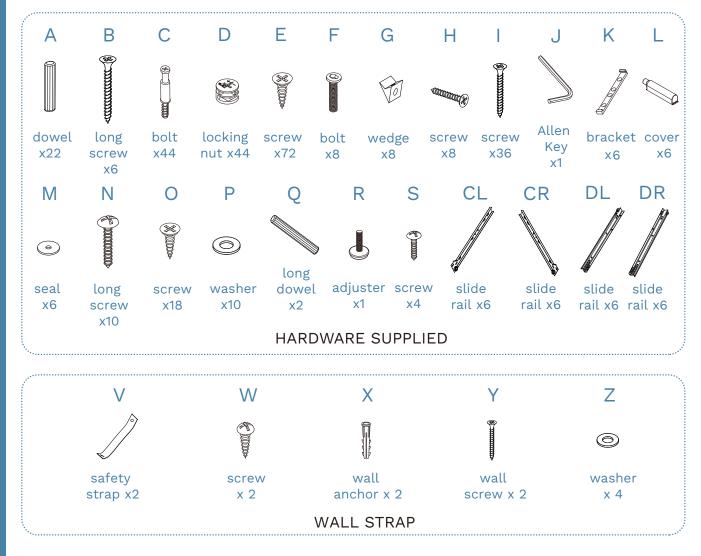


WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

 



Phillips & Flathead screwdrivers

For quicker assembly, we recommend the use of a power drill on a low-speed setting.



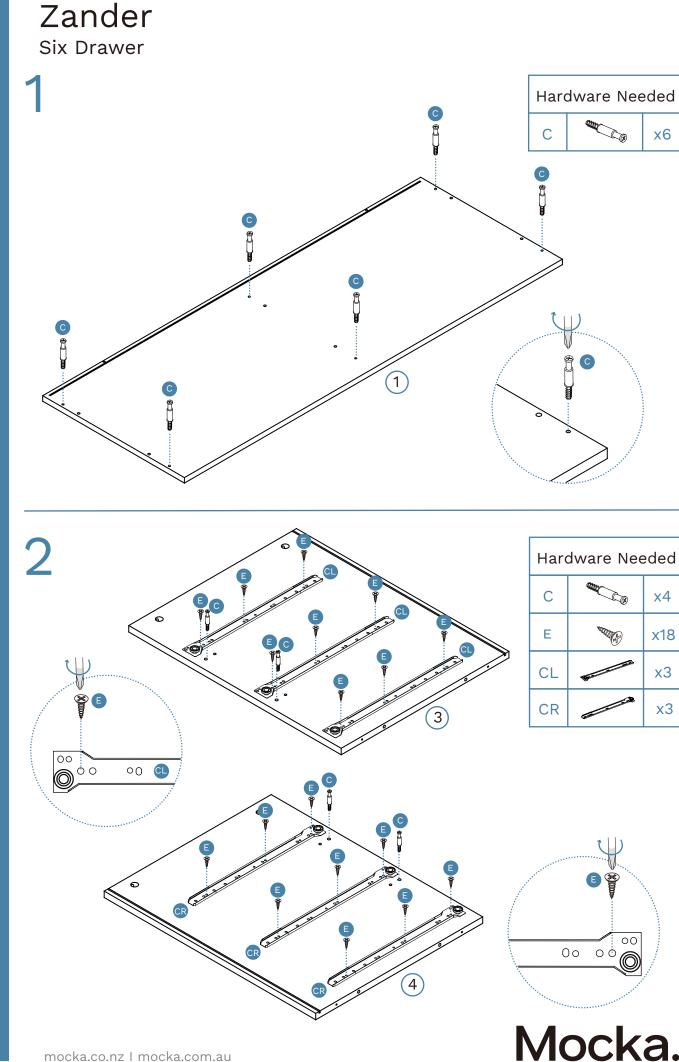

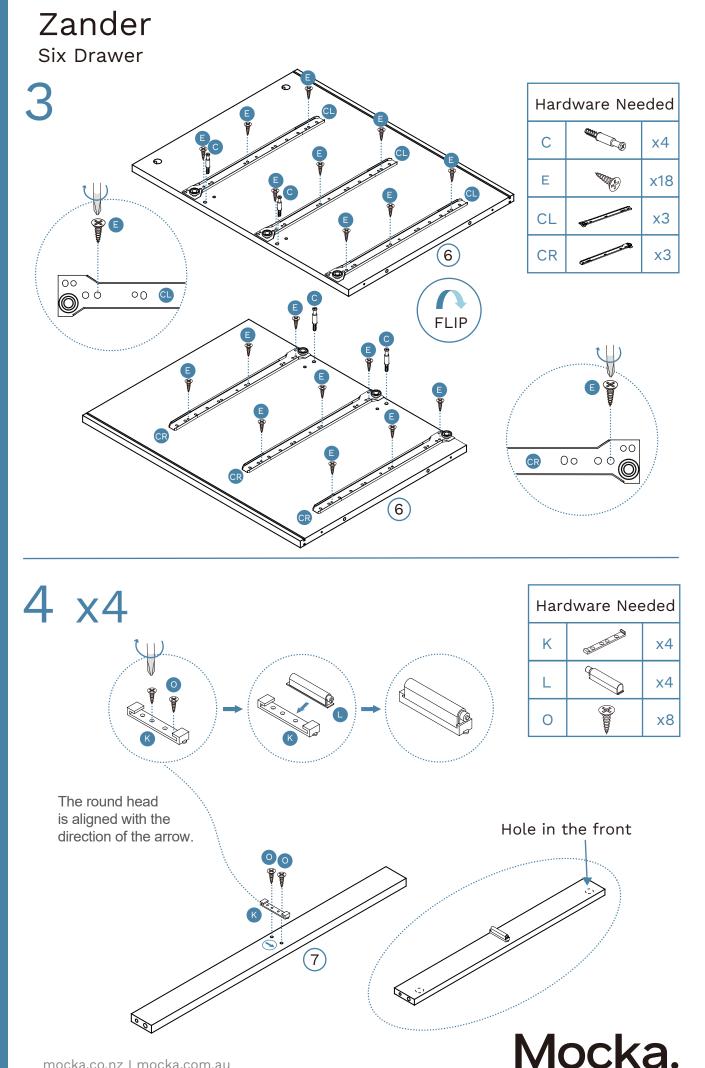

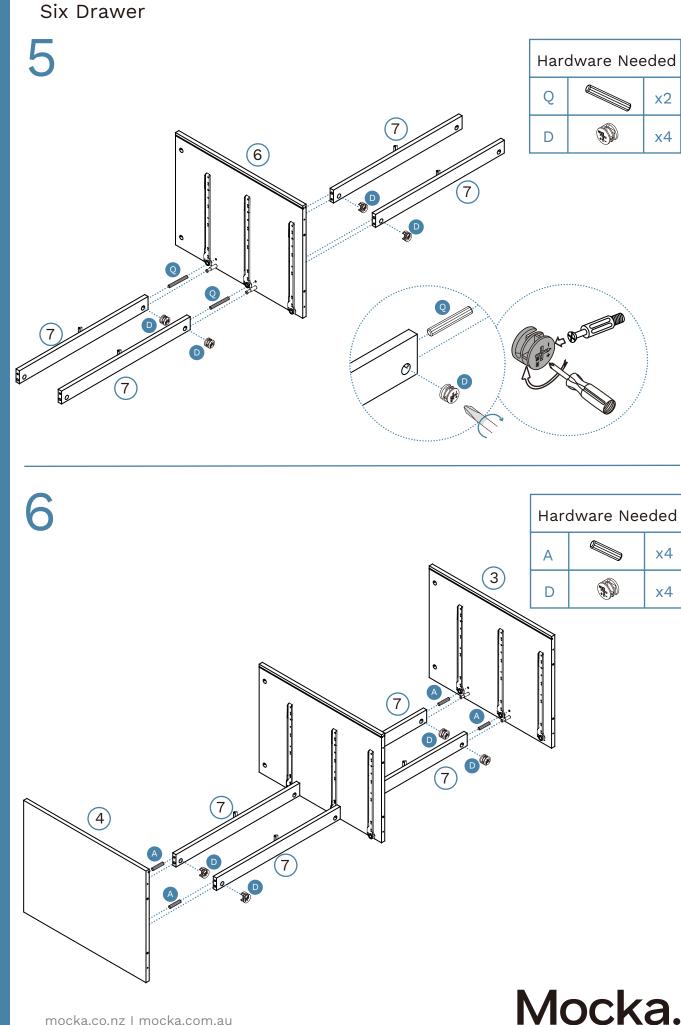


x2


x4


x4

x4

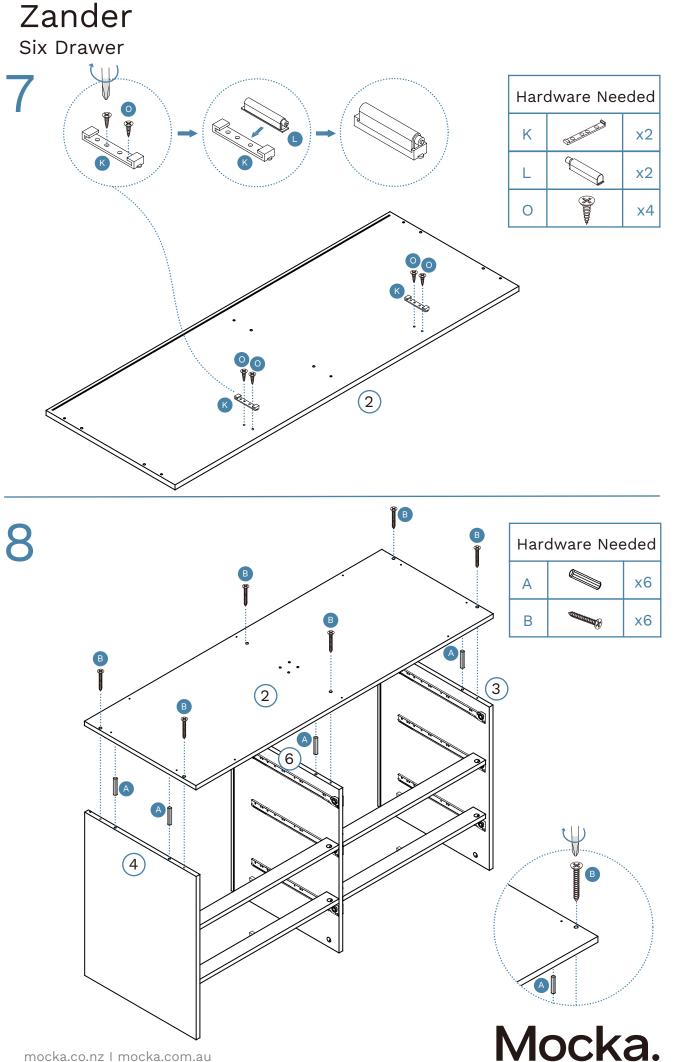


mocka.co.nz I mocka.com.au

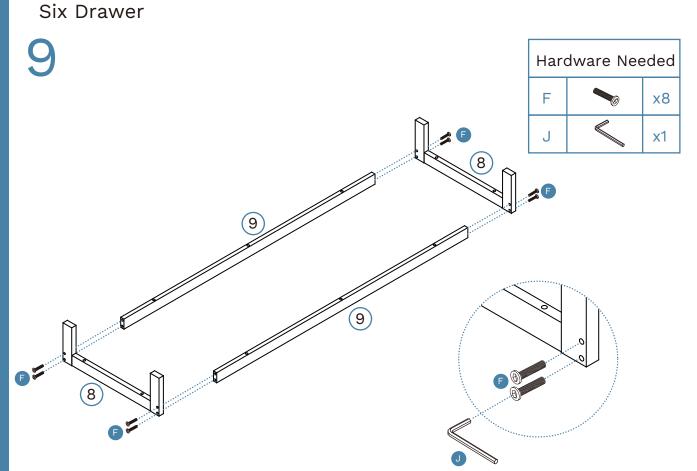


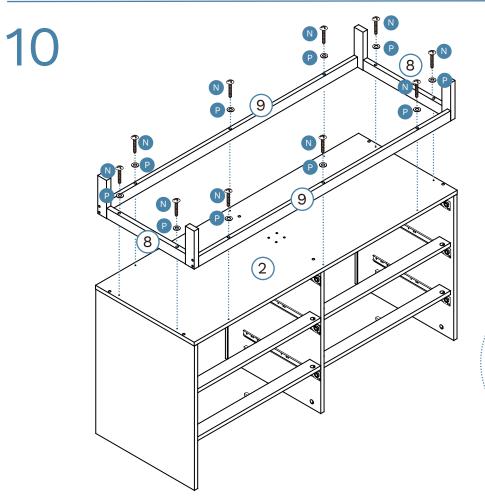



Haro	Hardware Needed				
N	Conness	x10			
Р	0	x10			

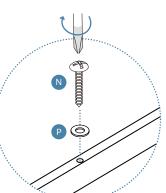




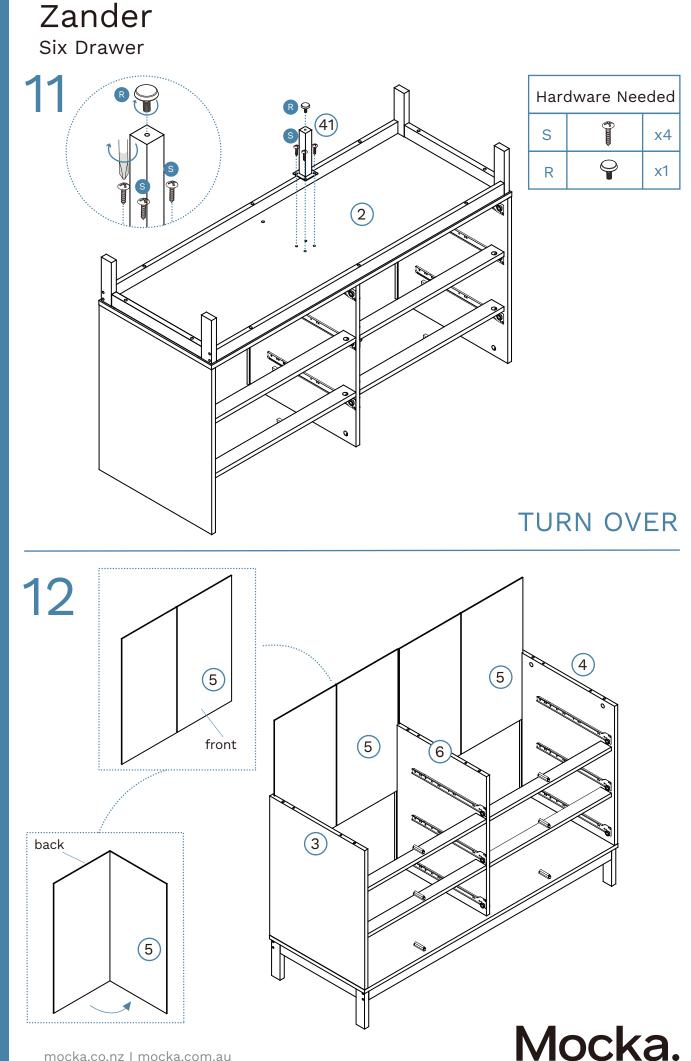


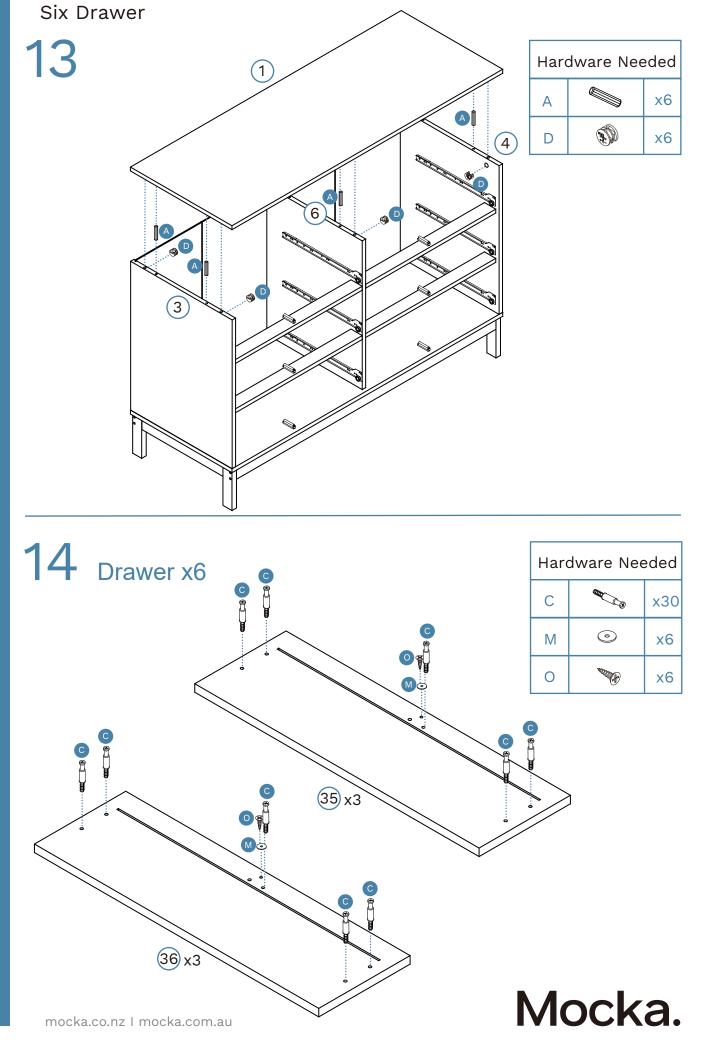


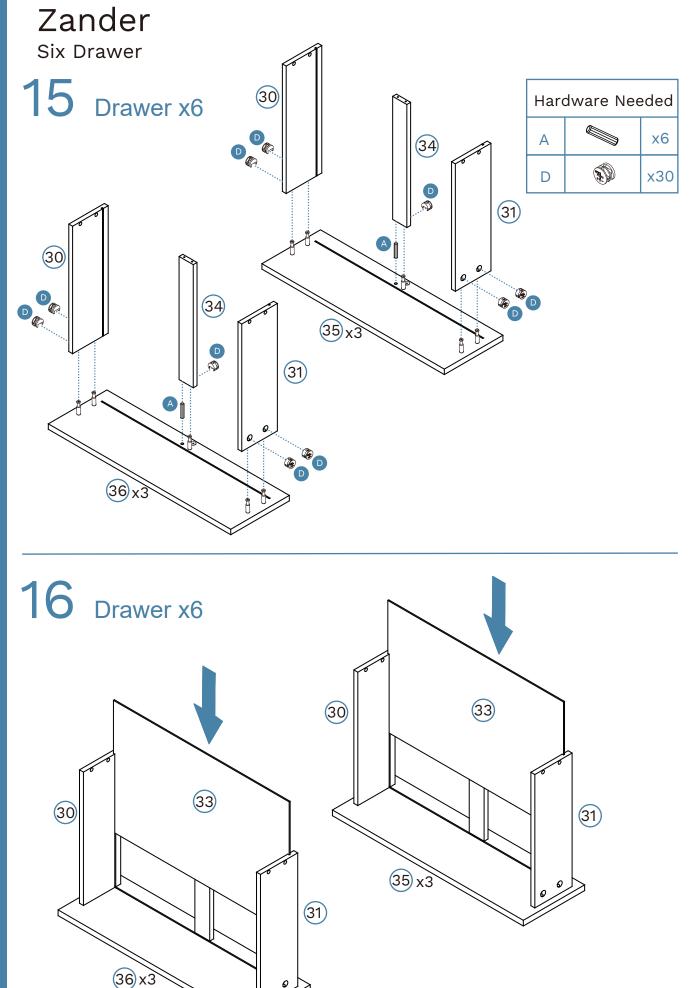

Mocka.

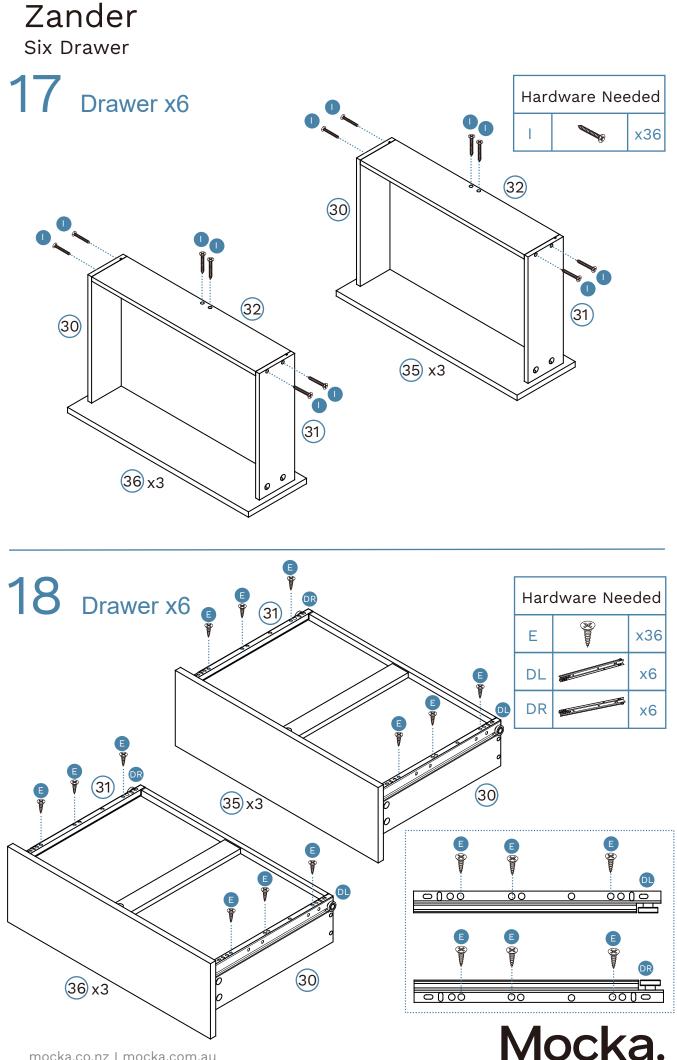

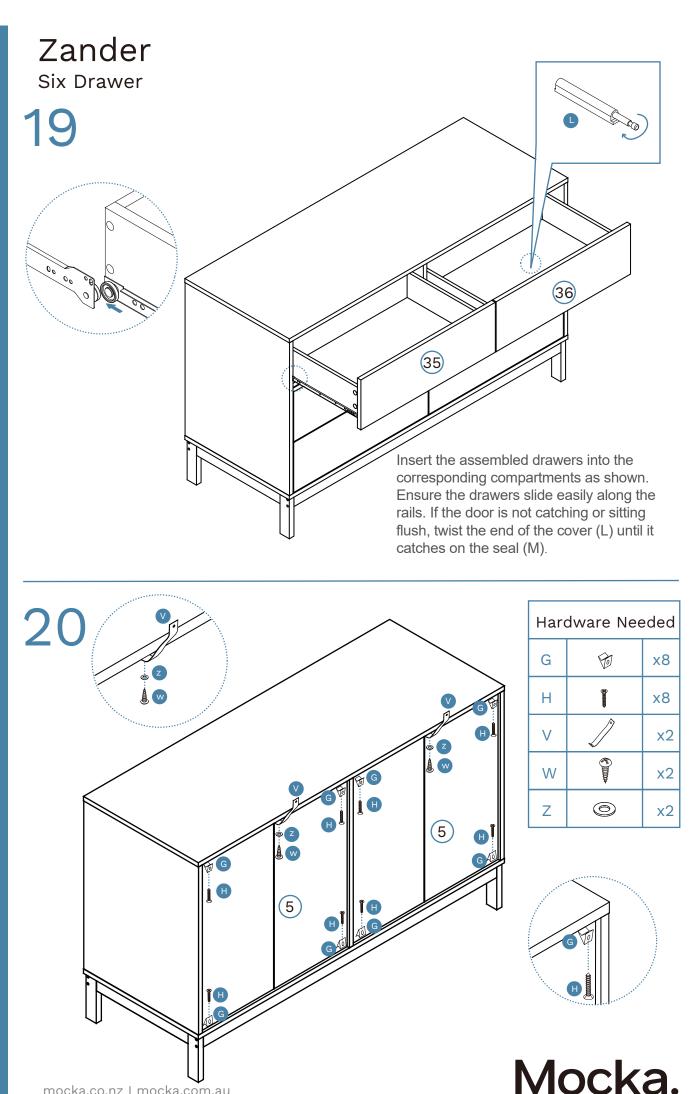

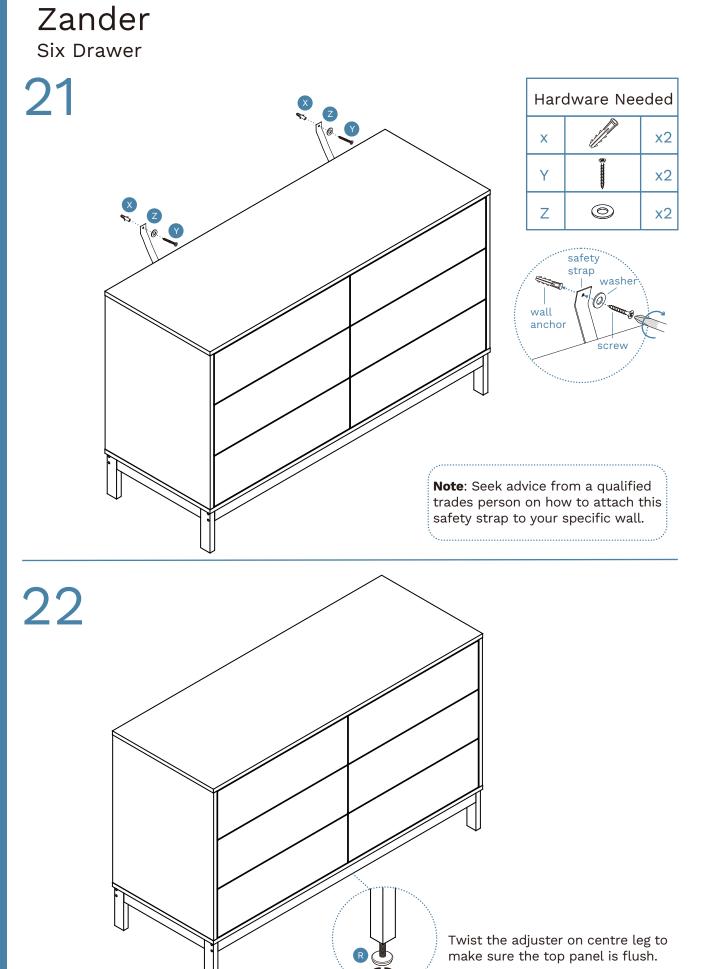

Once assembled lift furniture into place, do not drag. You're done, enjoy!

