
## Zara Tallboy


Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz



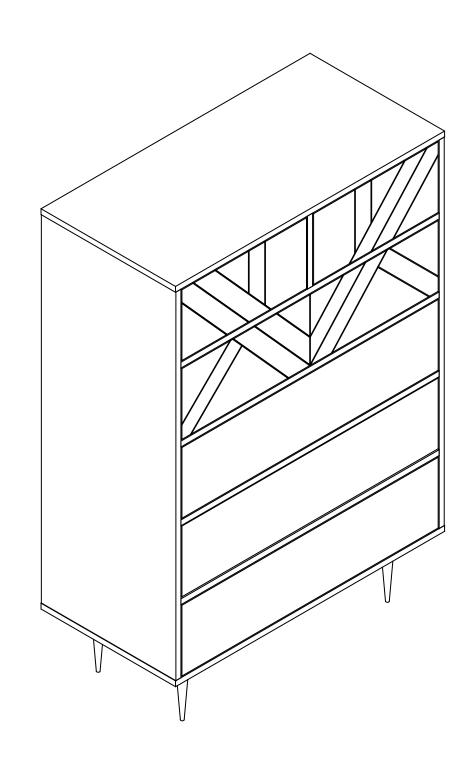

Zara


Tallboy

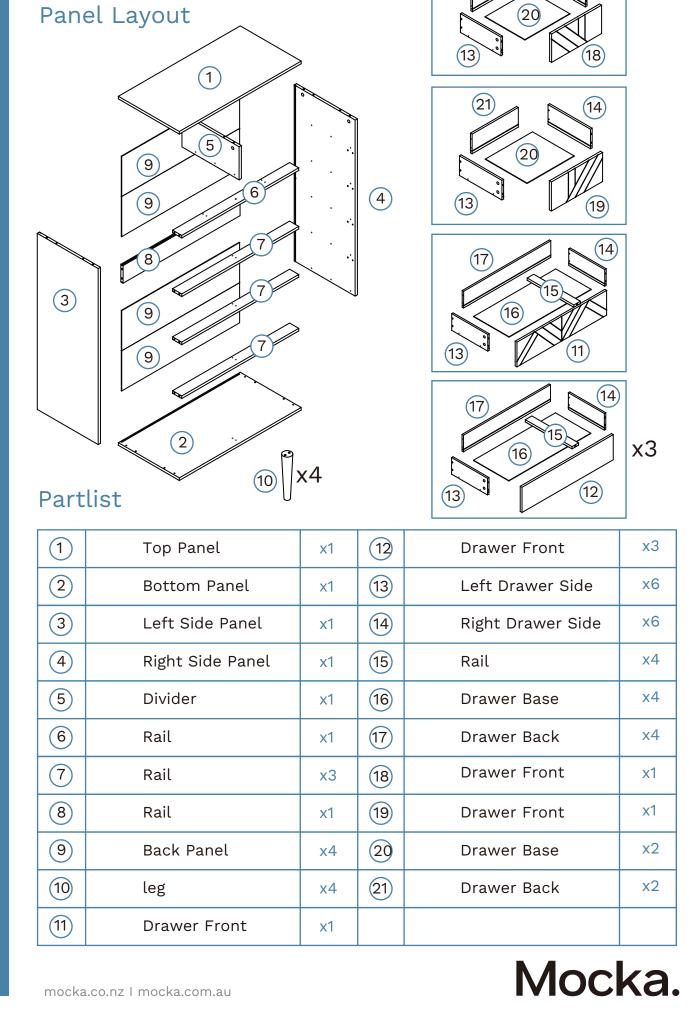


21

14

## Zara Tallboy

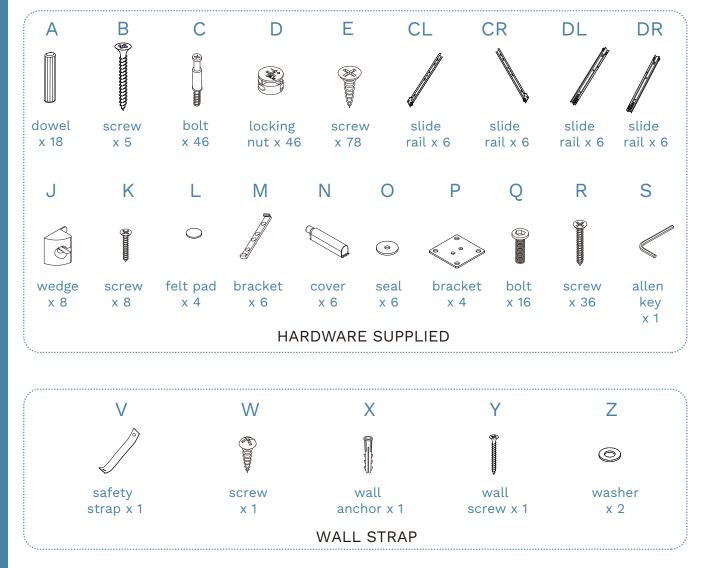


WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

 

Phillips & Flathead screwdrivers required


For quicker assembly, we recommend the use of a power drill on a low-speed setting.




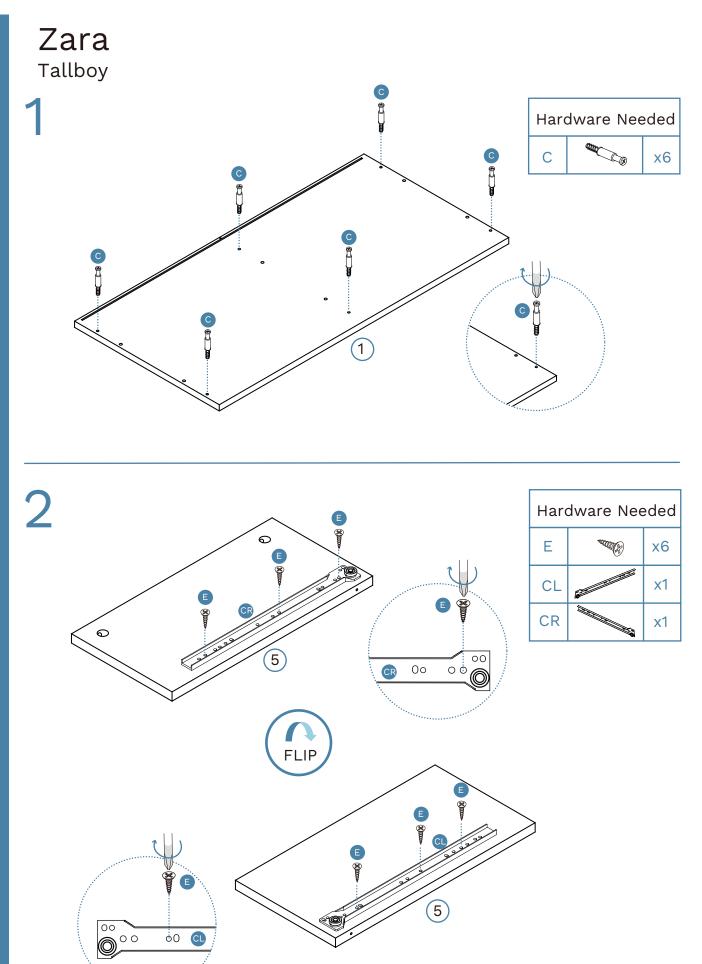


Mocka.


mocka.co.nz I mocka.com.au

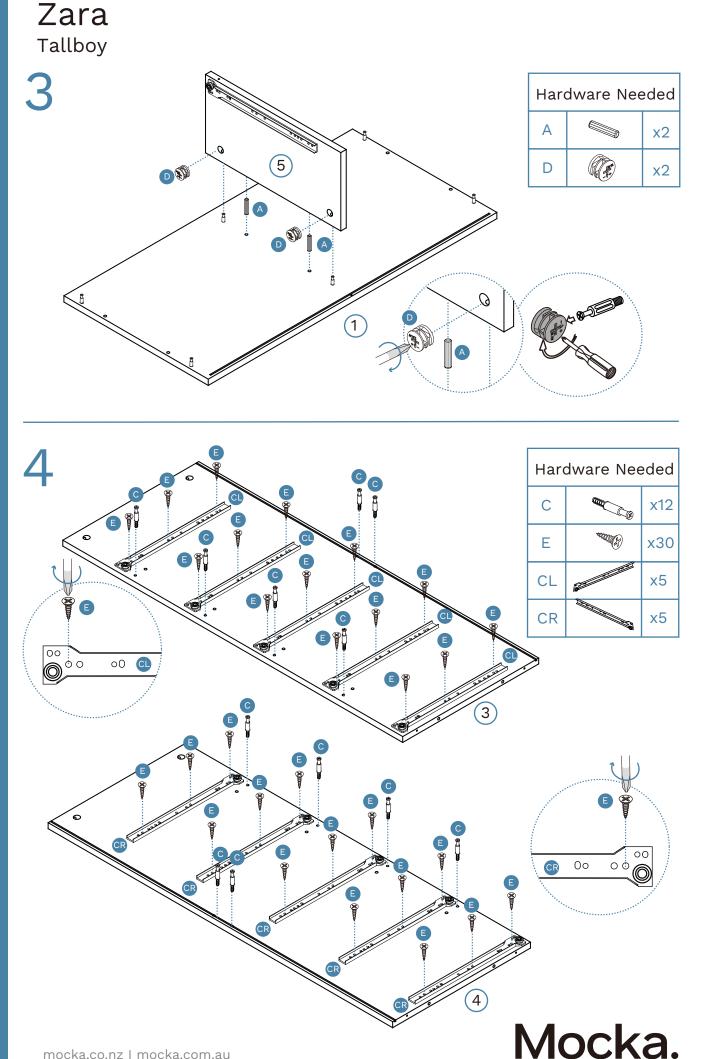


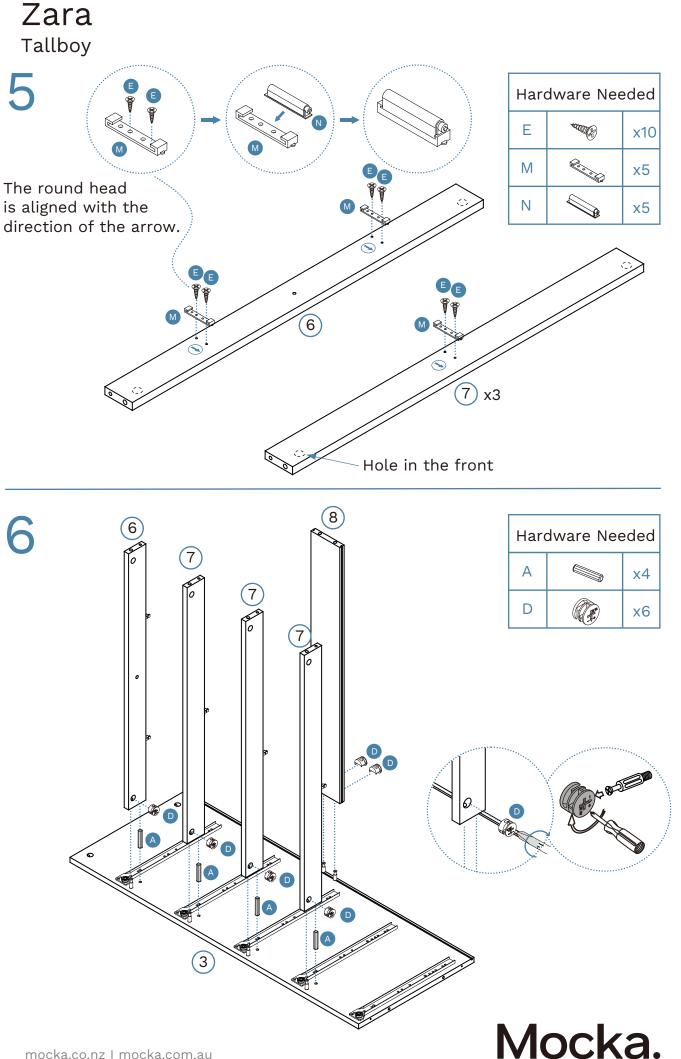

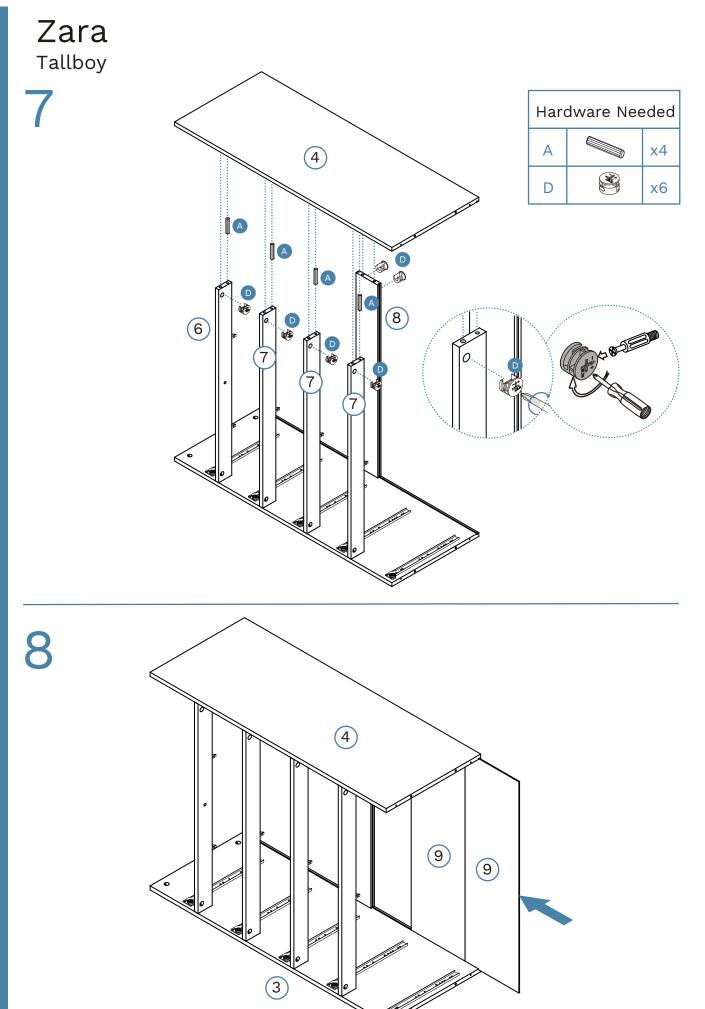


Mocka.

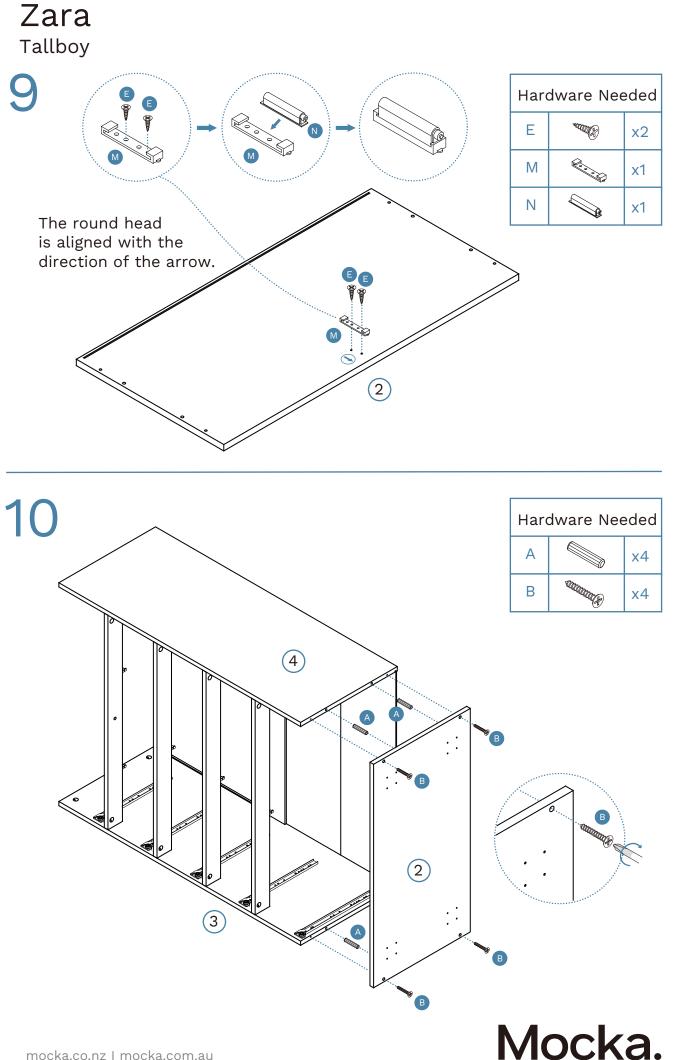

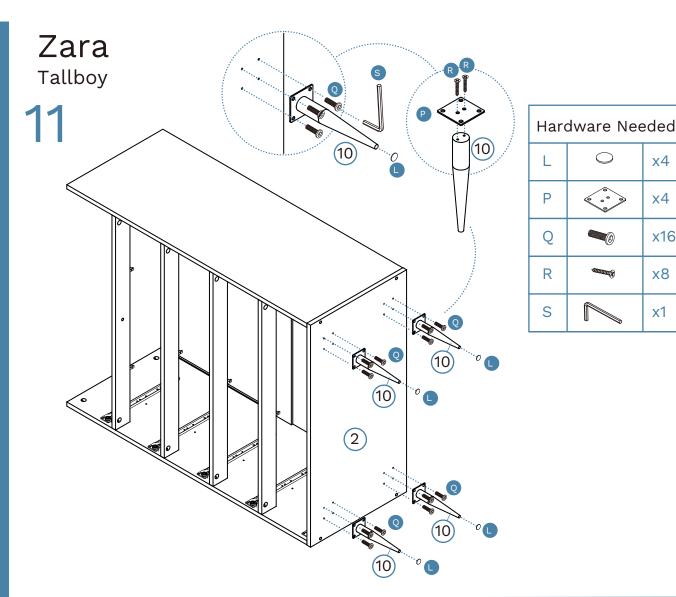

12

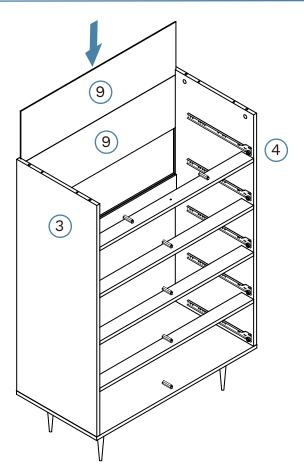




x4


x4

x16


x8

x1

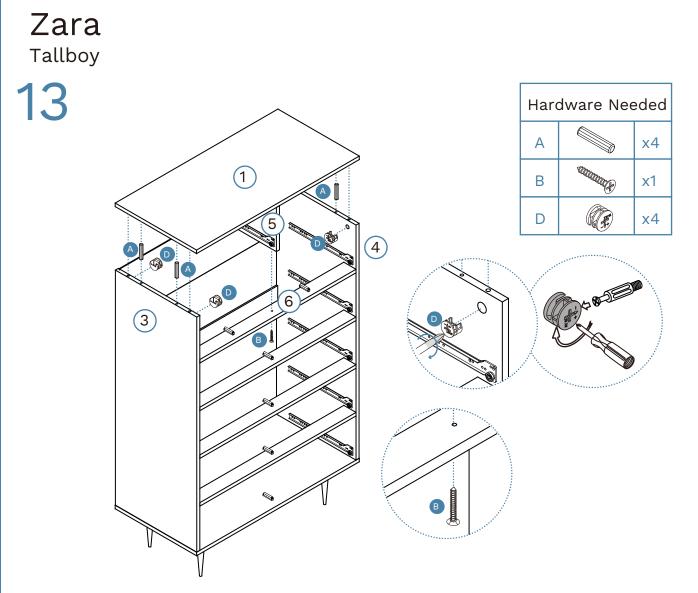


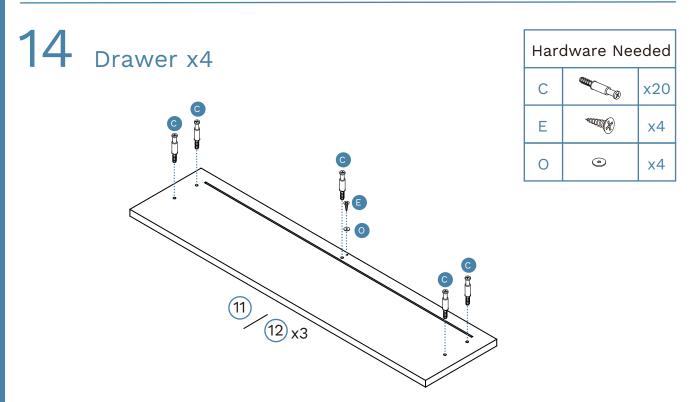





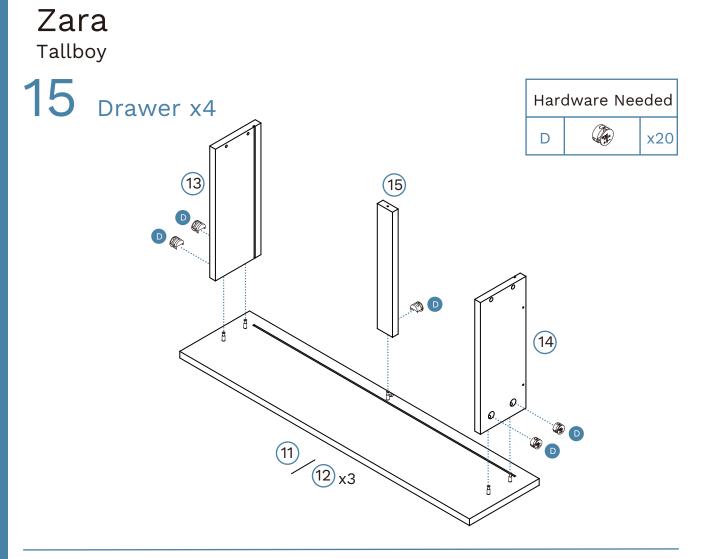



16 Drawer x4

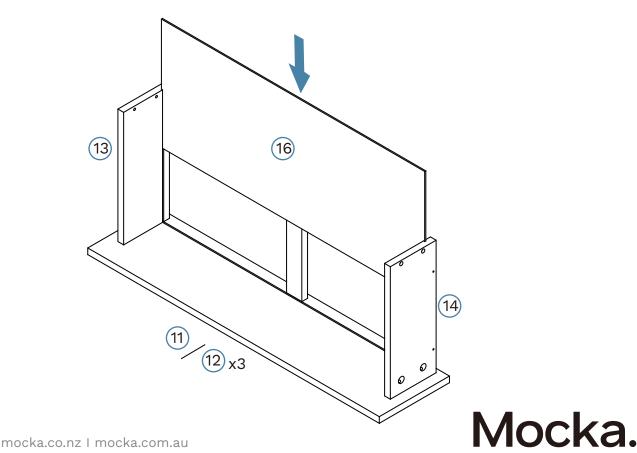

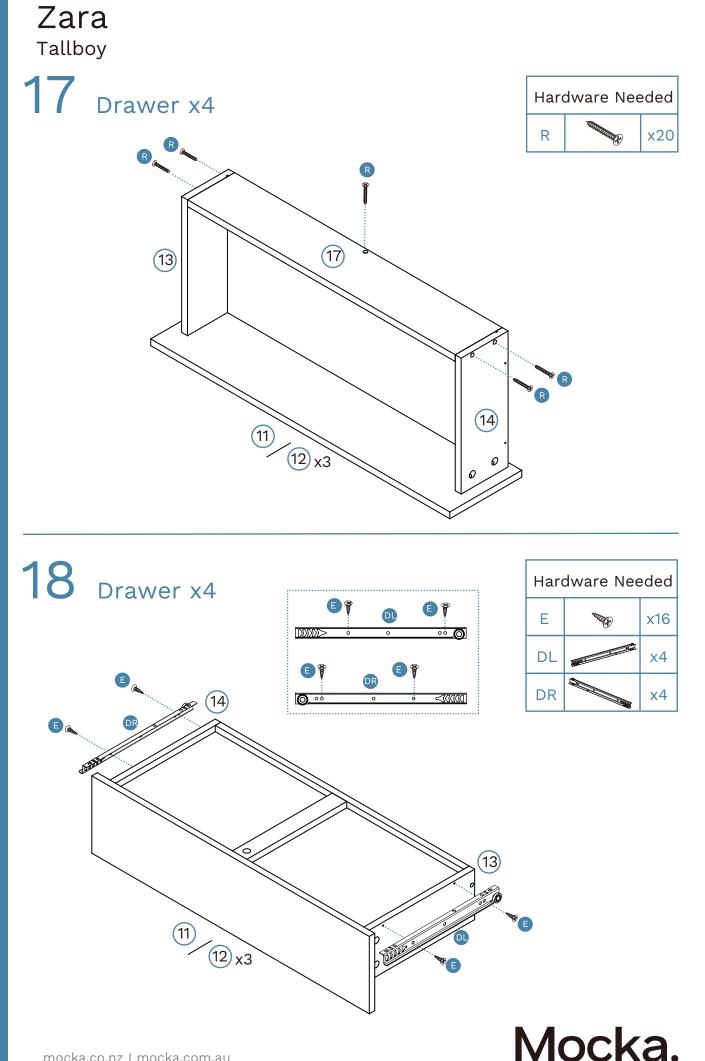

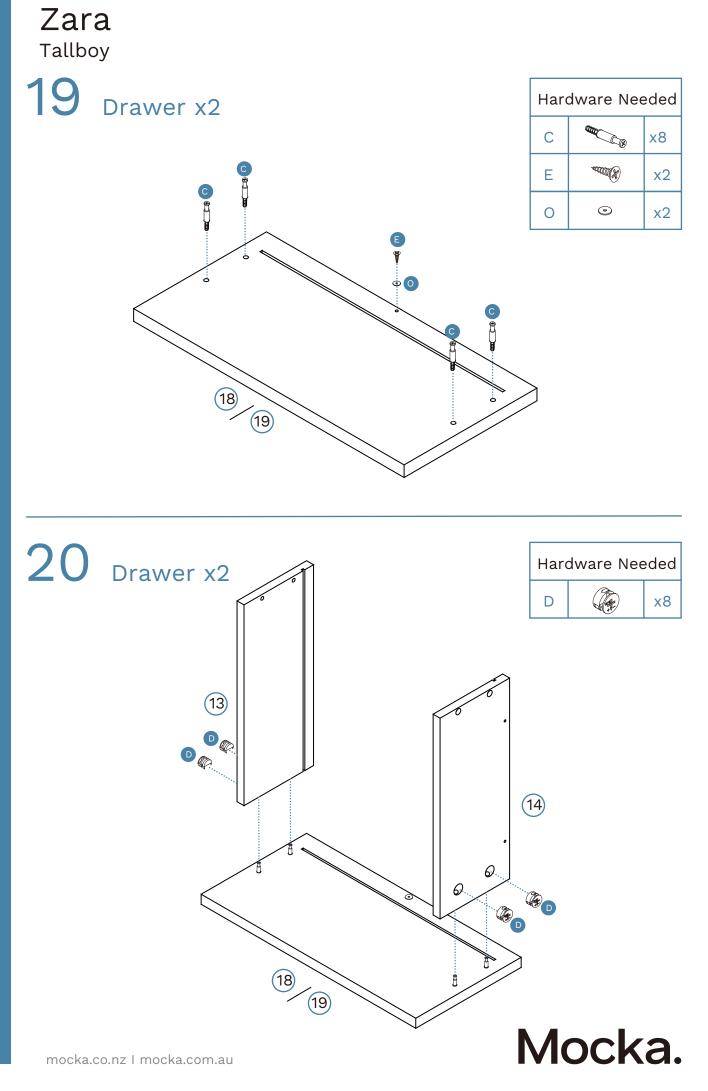

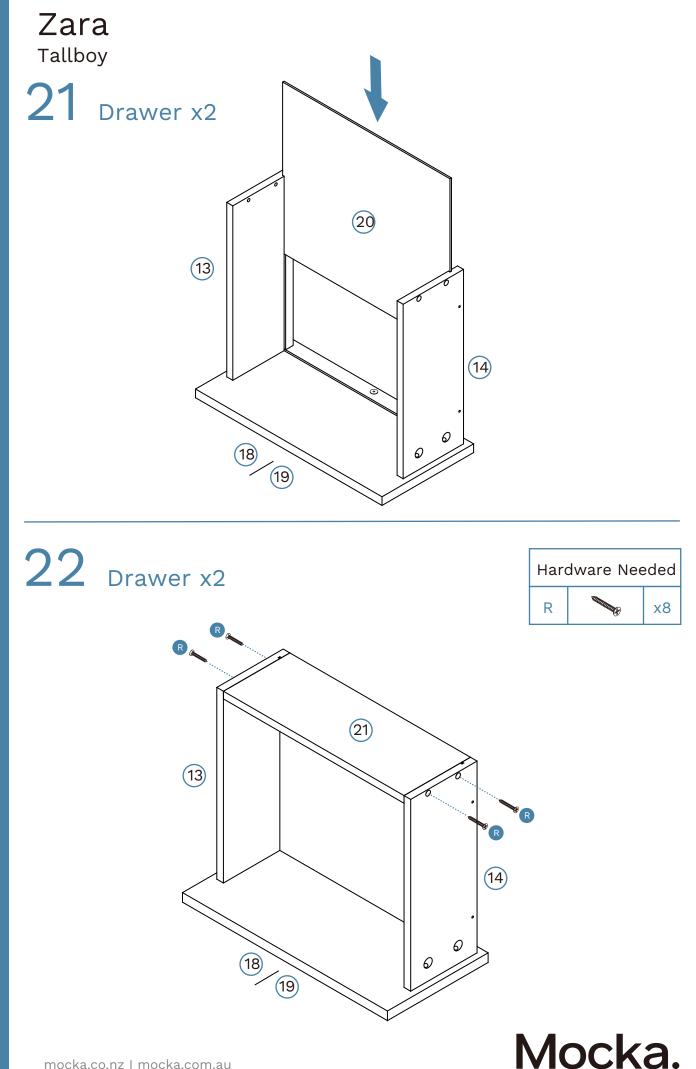

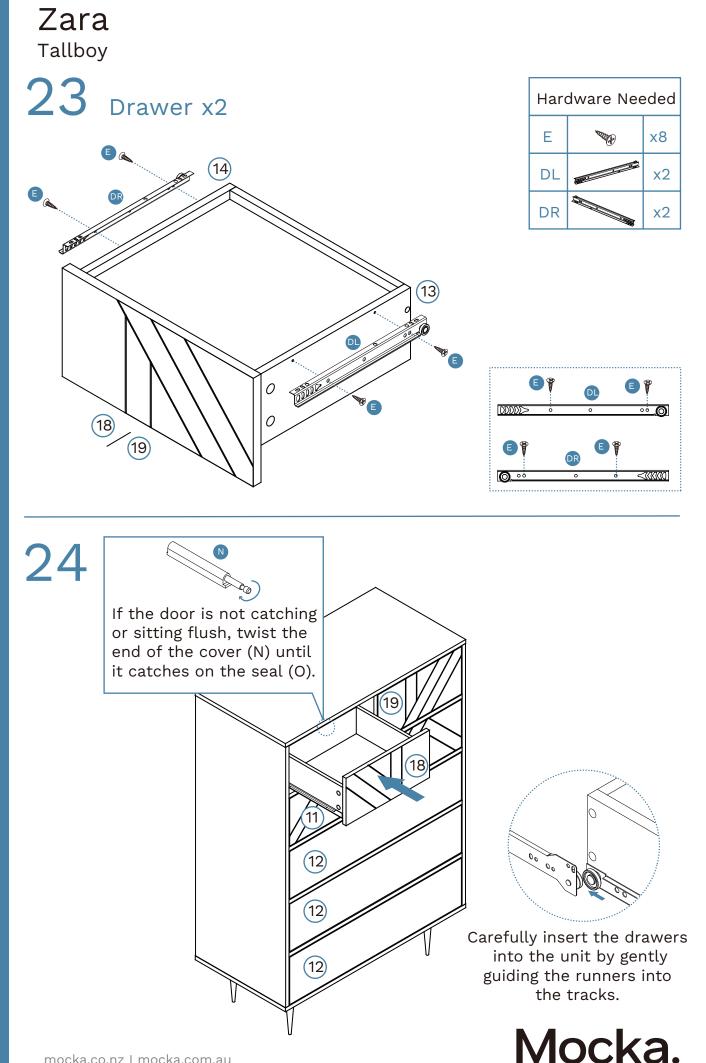

26


wall anchor

safety

strap | washer

(0,

crew

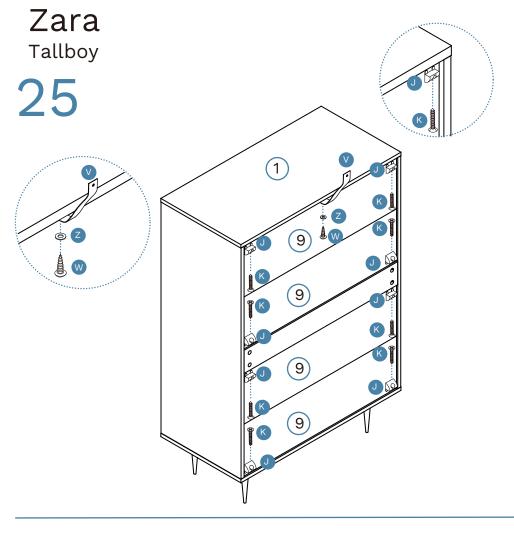

(Z

1

Hardware Needed		
X		x1
Y	Communes Co	x1
z	0	x1

Hardware Needed

Þ

0

x8

x8

**x1** 

**x1** 

x1

J

Κ

V

W

Ζ

**Note**: Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

Once assembled lift furniture into place, do not drag. You're done, enjoy!

