Inca Entertainment Unit

Assembly Instructions

Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz

mocka

A	B	C	D	E	F	G
						
dowel x20	screw x8	bolt x12	locking nut x12	screw x4	hinge x4	Allen Key x1

H	I	J	K	L	O
					
handle x2	small screw x10	wedge x4	screw x4	bolt x8	screw x24

Hardware Supplied

V	W	X	Y	Z
safety strap x1	screw x1	wall anchor x1	wall screw x1	washer x2

Wall Strap

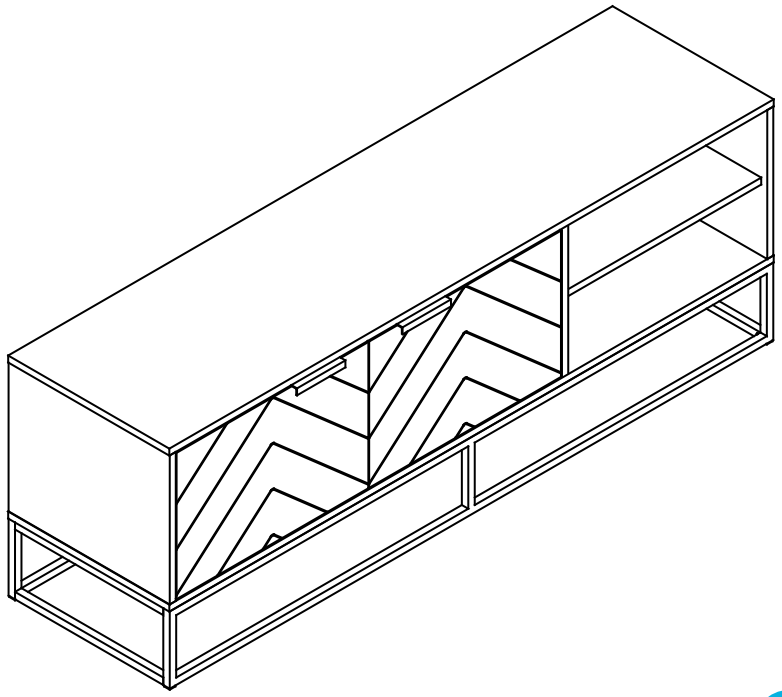

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

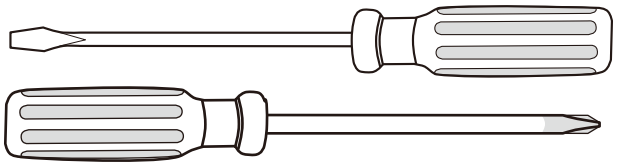

Phillips & Flathead screwdrivers

For quicker assembly, we recommend the use of a power drill on a low-speed setting.

Inca Entertainment Unit

Assembly Instructions

mocka

1

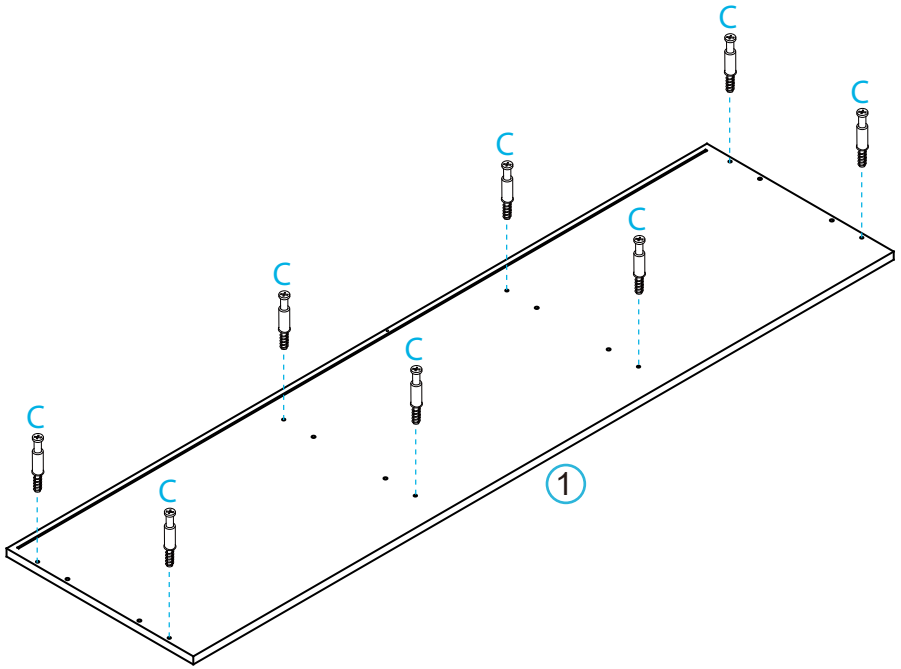

Insert 8x bolts (C) into panel [1] and tighten with a screwdriver.

2

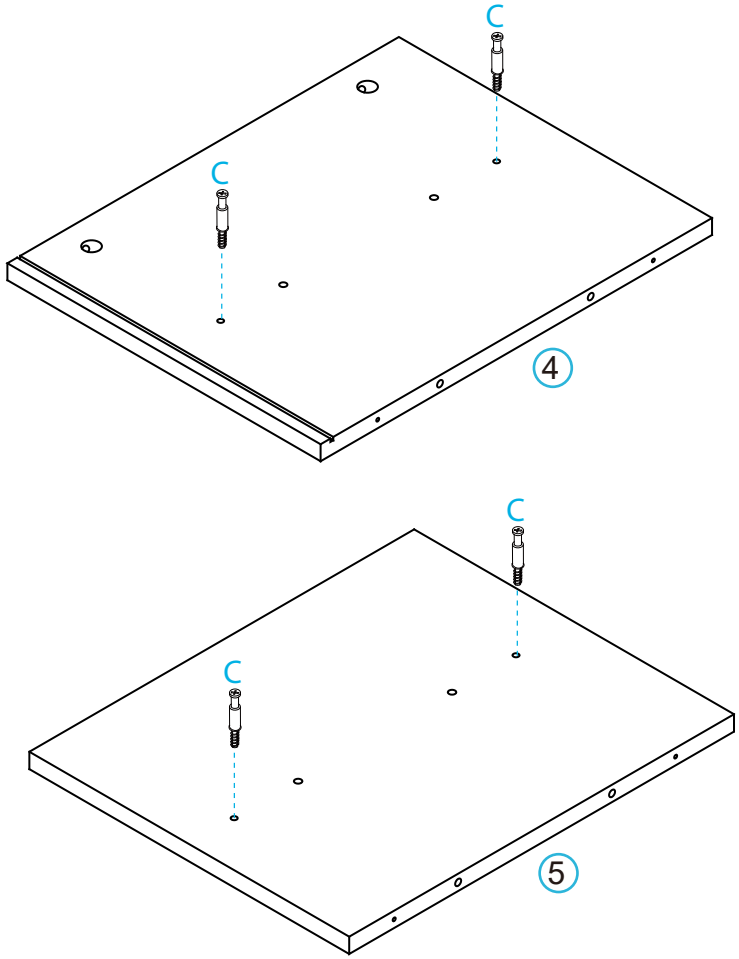

Insert 4x bolts (C) into panels [4] and [5] as shown. Tighten with a screwdriver.

.

mocka.co.nz | mocka.com.au | PO BOX 6171, Maroochydore, QLD, 4558

Inca Entertainment Unit

Assembly Instructions

mocka

3

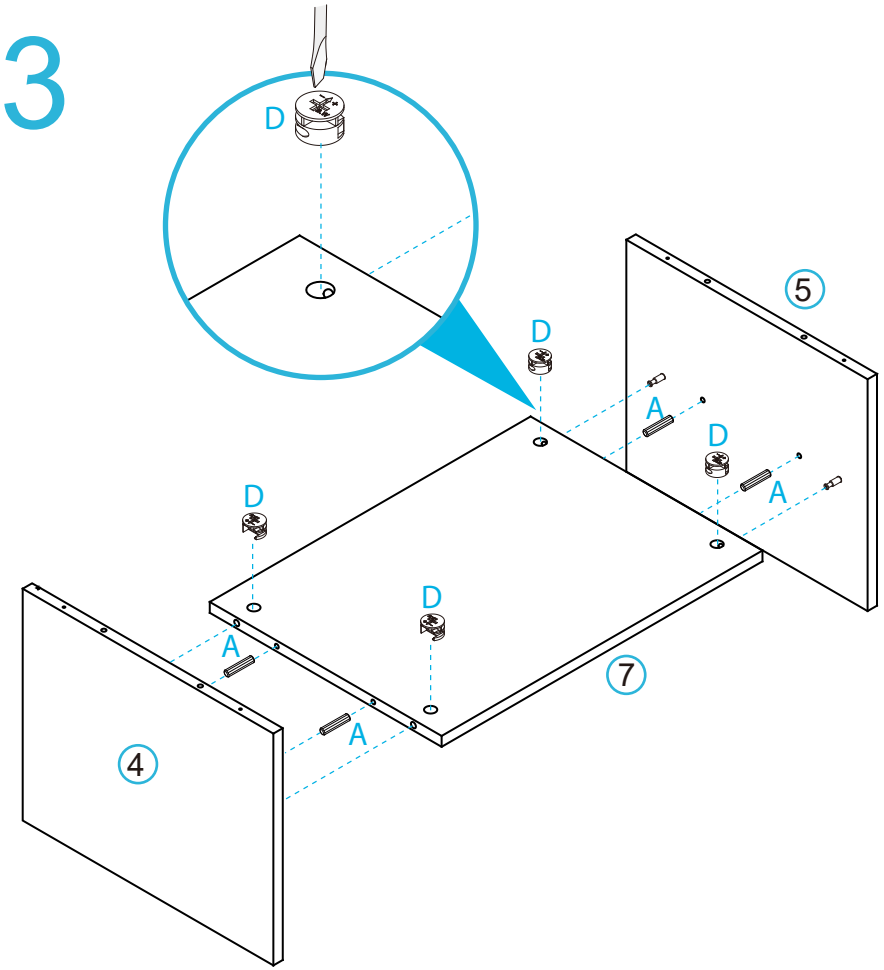

Attach panels [4] and [5] to panel [7] with 4x dowels (A) and secure with 4x locking nuts (D). Tighten with a screwdriver.

4

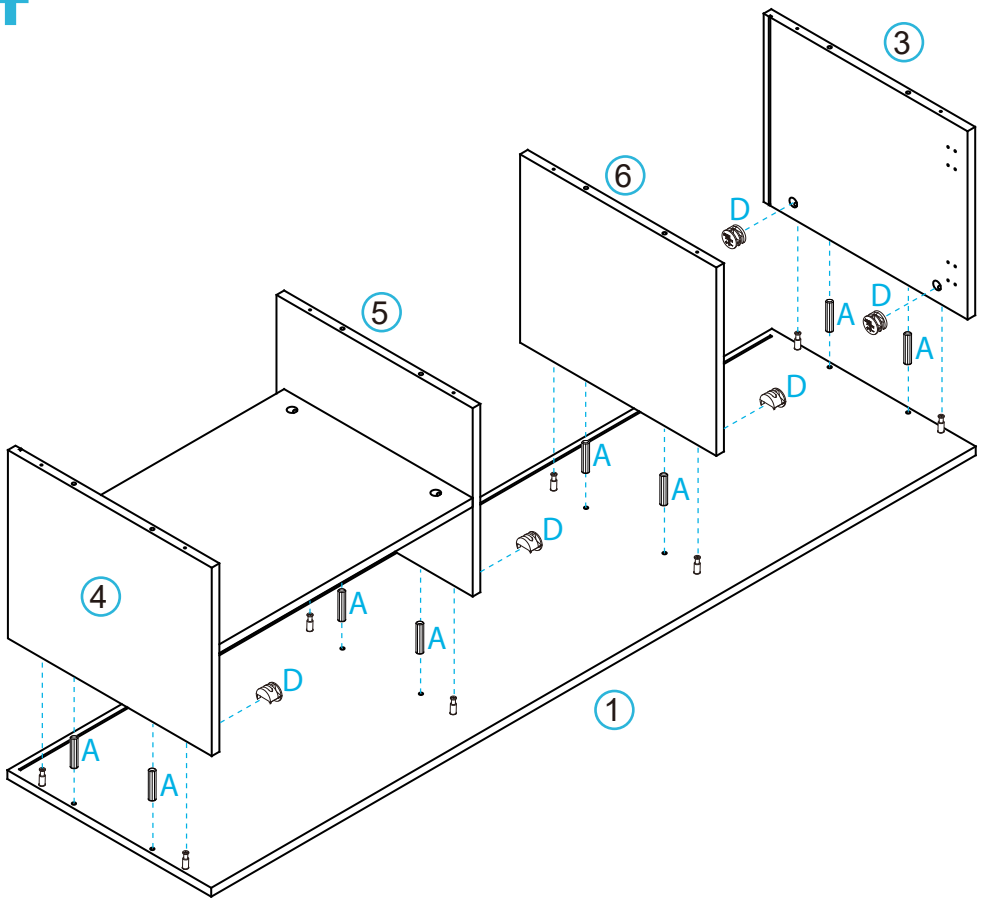

Attach panels [3], [4], [5] and [6] to panel [1] with 8x dowels (A) and secure with 8x locking nuts (D). Tighten with a screwdriver.

mocka.co.nz | mocka.com.au | PO BOX 6171, Maroochydore, QLD, 4558

Inca Entertainment Unit
Assembly Instructions

mocka

5

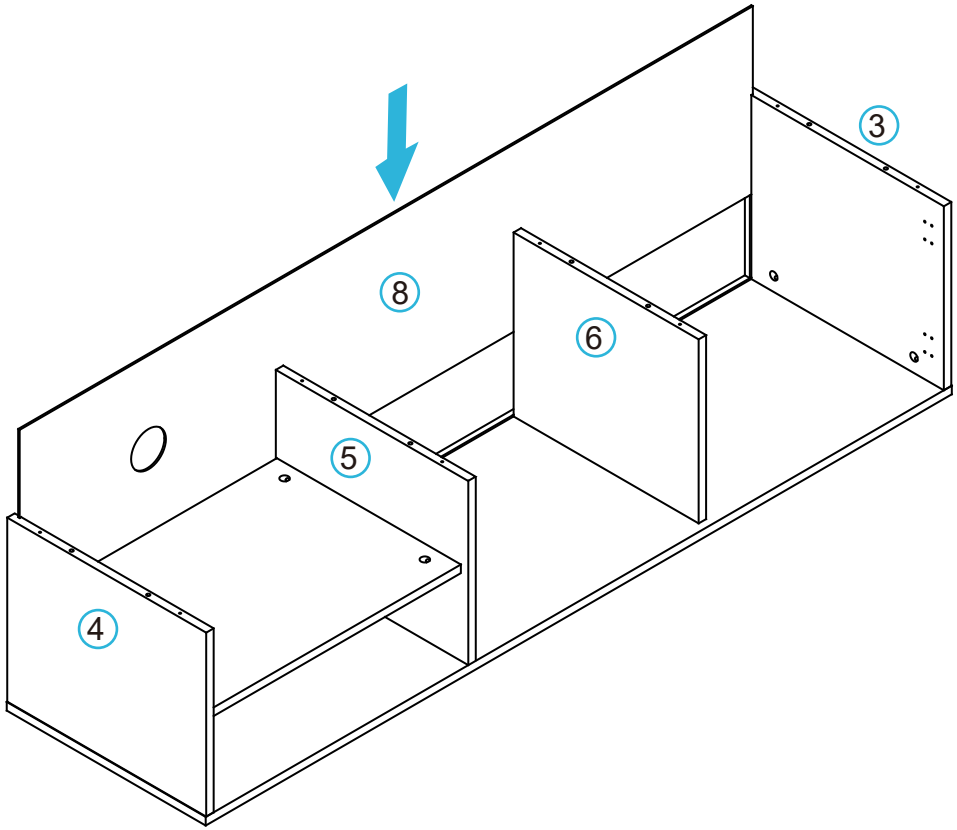

Slide panel [8] along the grooves between the panels [3], [4], [5] and [6].

6

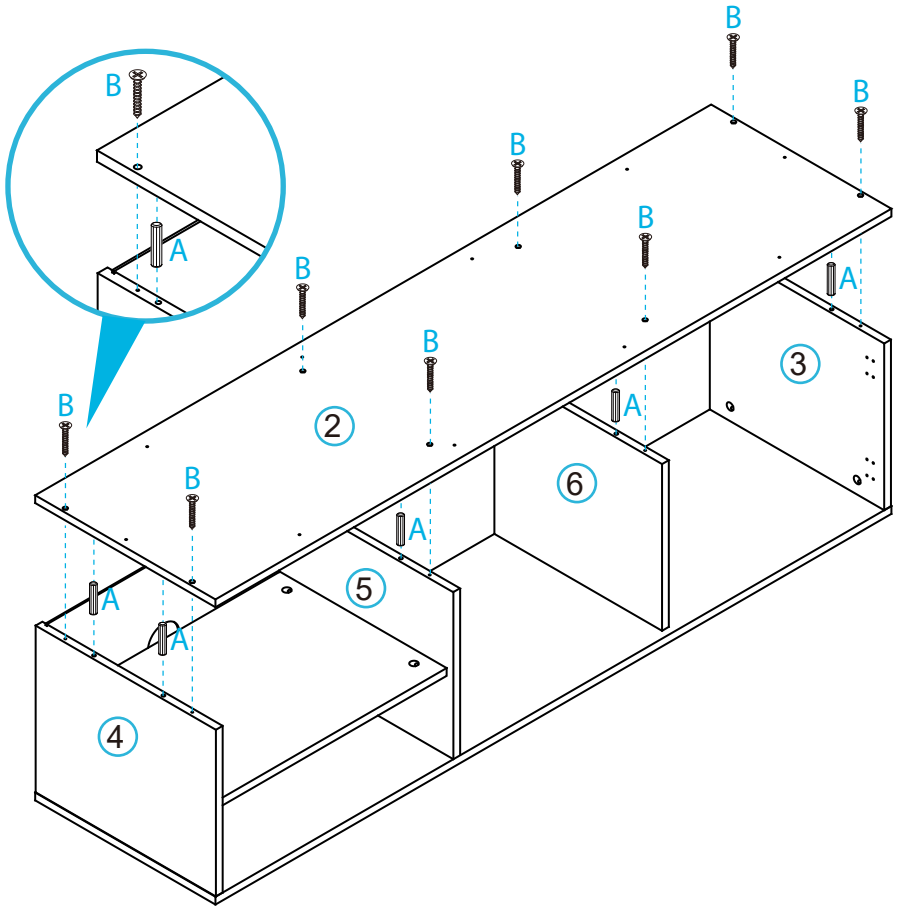

Attach panel [2] to the unit with 8x dowels (A) and secure with 8x screws (B). Tighten with a screwdriver.

Inca Entertainment Unit

Assembly Instructions

mocka

7

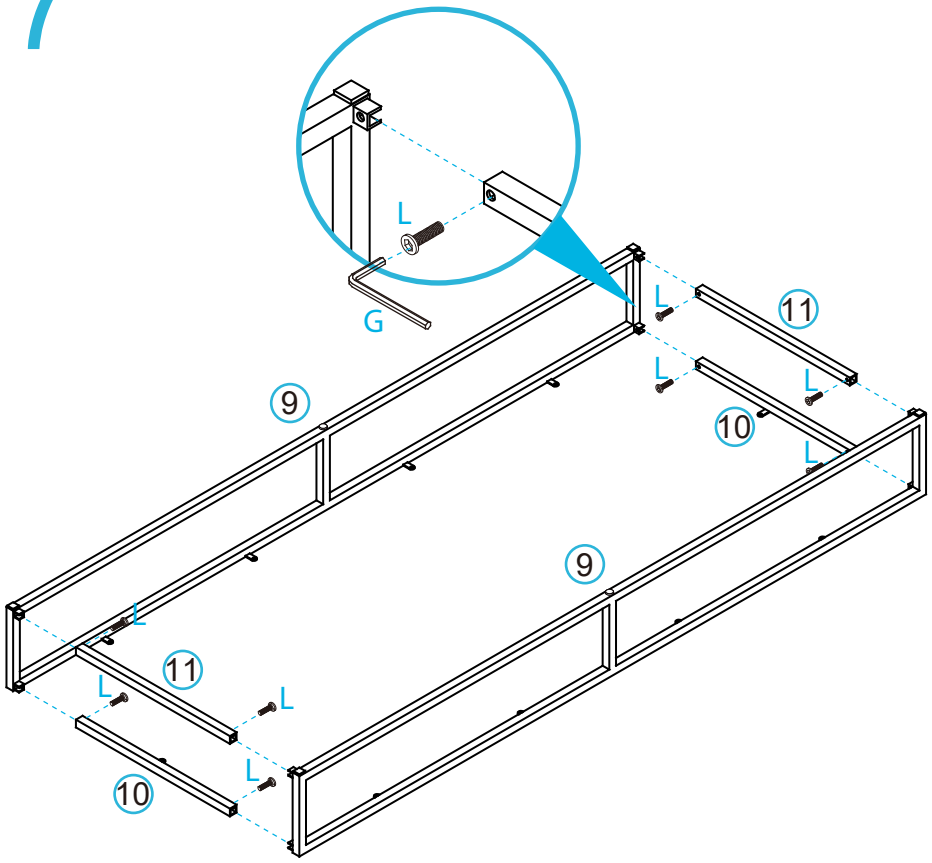

Attach panels [9] to panels [10] and panels [11] with 8x bolt (L). Tighten with an Allen Key (G).

8

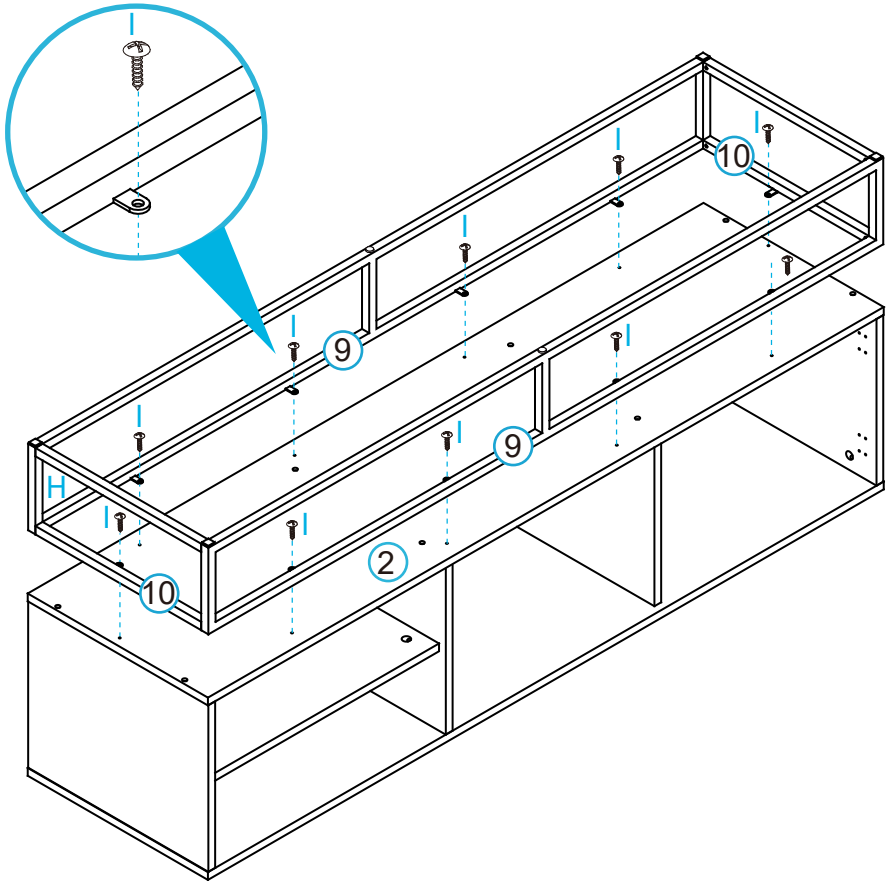

Attach panels [9] to panel [2] with 10x small screw (I). Tighten with a screwdriver.

Inca Entertainment Unit

Assembly Instructions

mocka

9

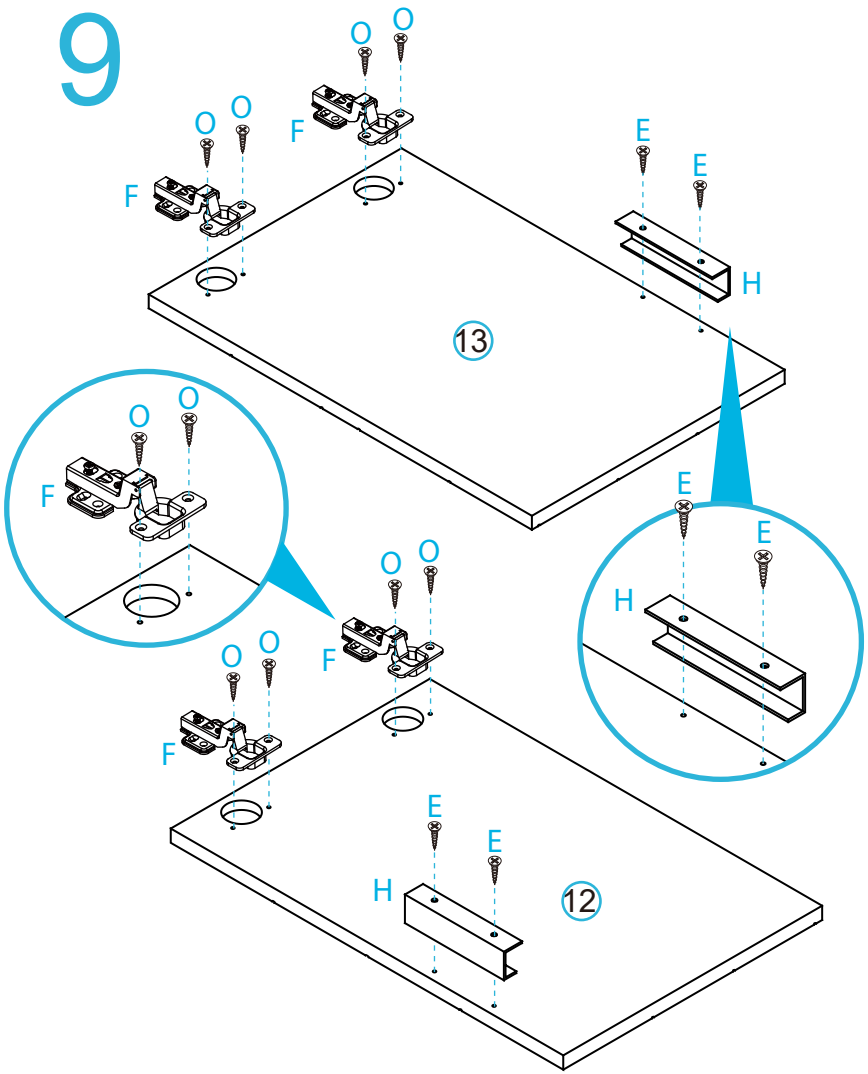

Attach 4x hinges (F) to panels [12] and [13] secure with 8x screws (O). Tighten with a screwdriver.Attach 2x handle (H) to panels [12] and [13] secure with 4x screws (E). Tighten with a screwdriver.

10

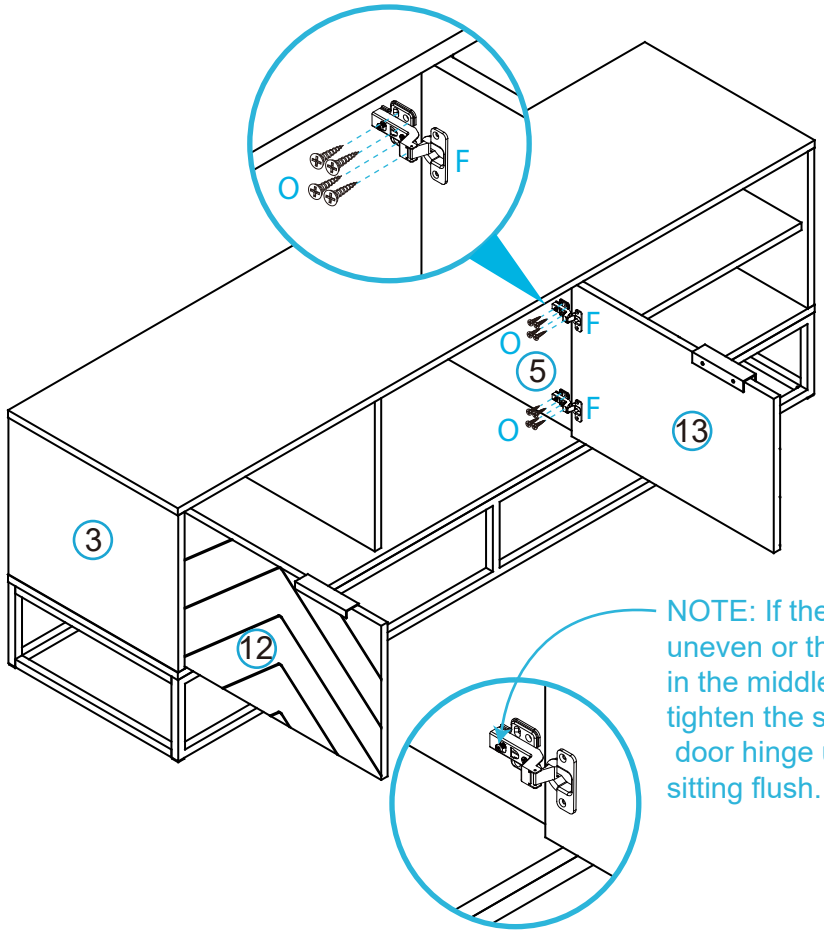

NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush.

Attach hinge on panels [3] and [5] to the unit using 16x crews (O). Tighten with a screwdriver. Ensure the doors open and close easily.

Inca Entertainment Unit

Assembly Instructions

mocka

11

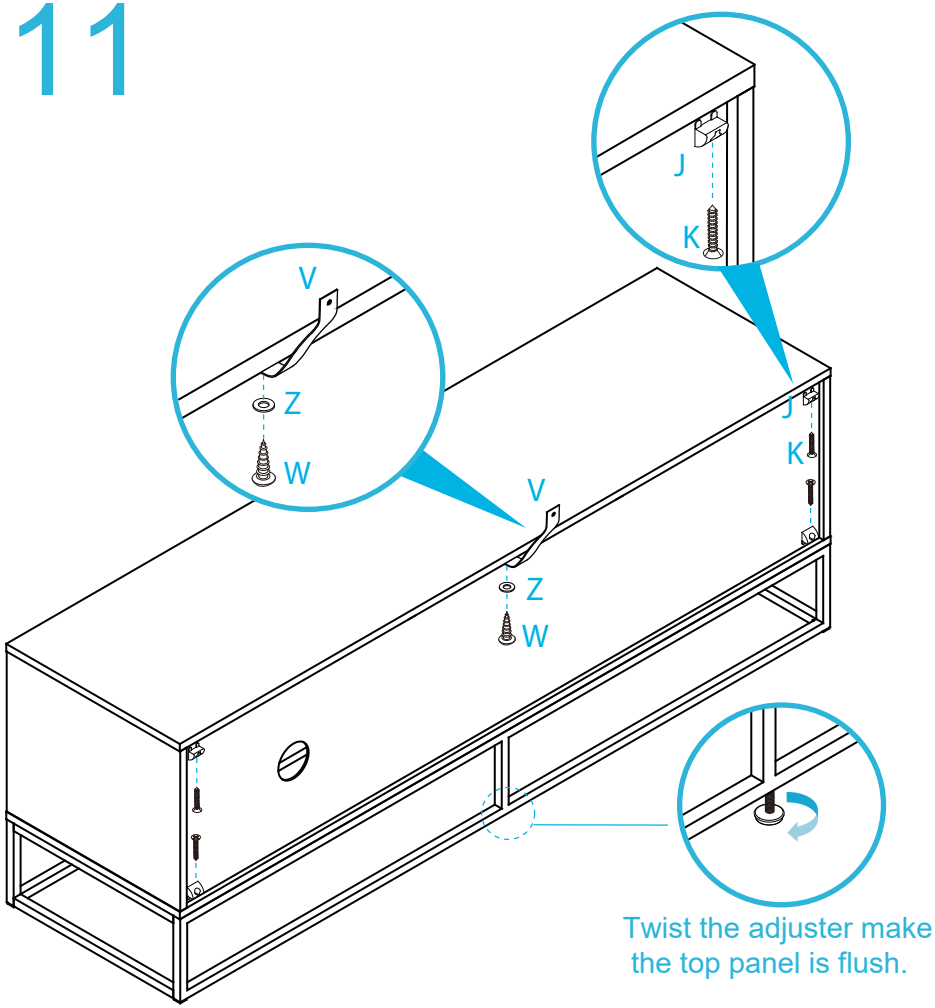

Attach 4x wedges (J) into the corners of the back of the unit and secure with 4x screws (K). Tighten with a screwdriver. Attach 1x safety strap (V) to the top of the back side of the unit as shown using 1x washer (Z) and 1x screw (W). Tighten with a screwdriver.

12

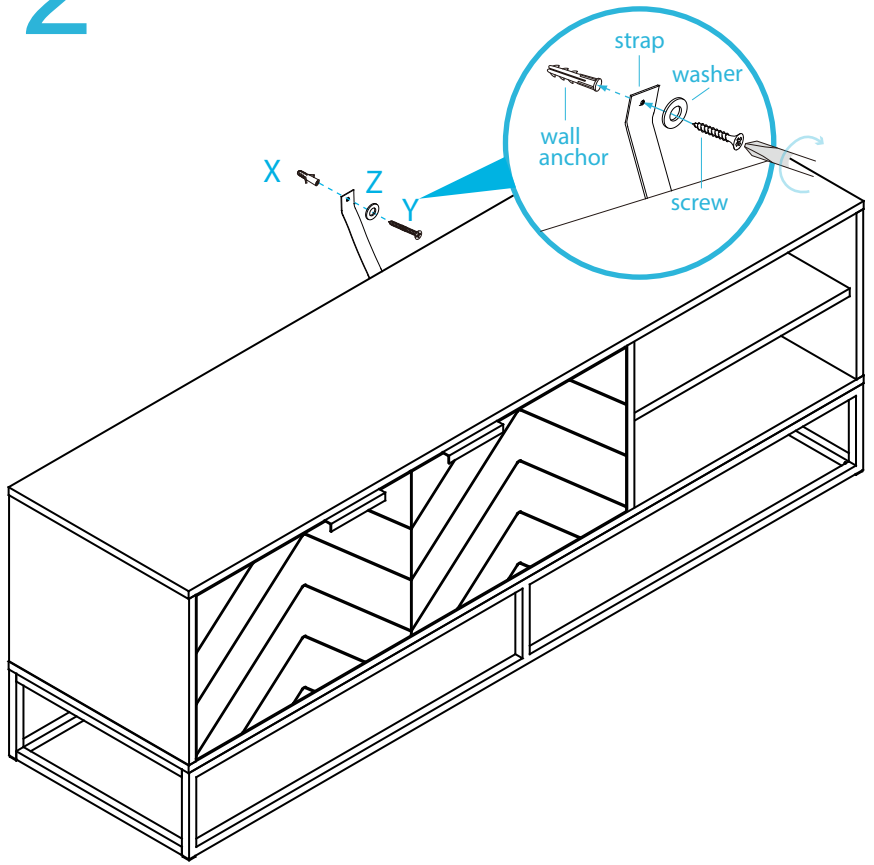

Once assembled lift furniture into place, do not drag. Use a drill to create a small hole lining up with the top of the safety strap (V). Fasten to the wall using 1x washer (Z), 1x wall anchor (X) and 1x wall screw (Y). Ensure unit is balanced and steady before use. You're done, enjoy!

Inca Entertainment Unit
Assembly Instructions

mocka

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.

STEP 1

Open the door.

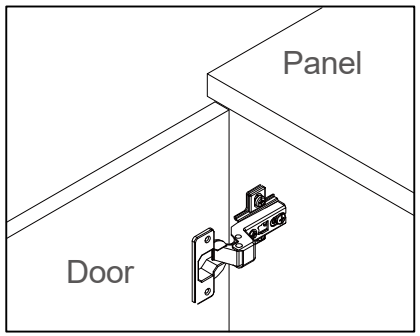

STEP 2

Adjuse the door panelsupward or downward

1.

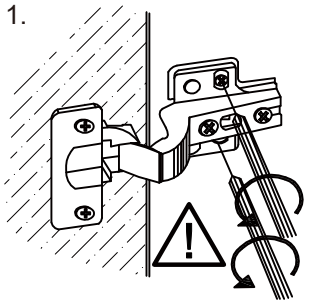

Unscrew 2 screws in round holes loosen 2 screws in oval holes a bit.

2.

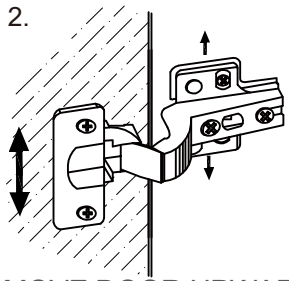

MOVE DOOR UPWARD OR DOWNWARD

3.

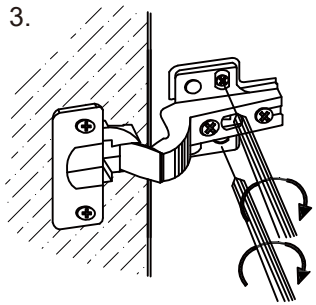

Tighten 2 screws in oval holes. Screw in 2 screws in round holes

STEP 3

Adjuse the flush between door panel and side panel

1.

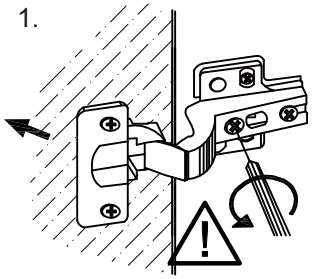

MOVE DOOR OUTWARD by turning this screw counter-clockwise

2.

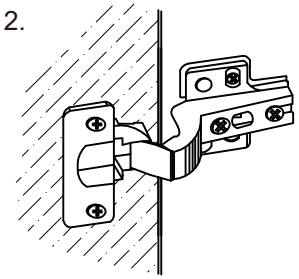

KEEP DOOR IN RIGHT POSITION

3.

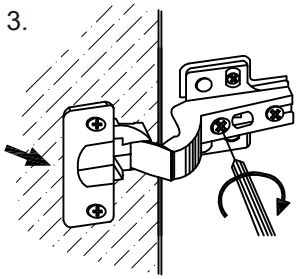

MOVE DOOR OUTWARD by turning this screw clockwise

STEP 4

Adjuse the Gap beteen door panel and side panel

1.

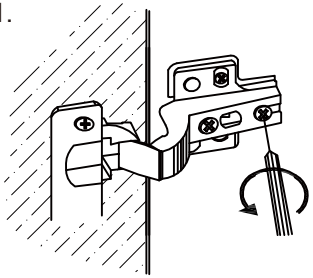

Loosen this screw a bit.

2.

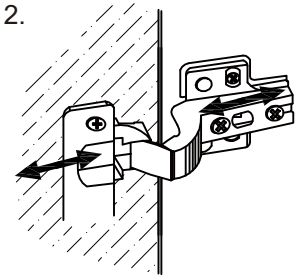

MOVE DOOR BACK OR FORTH

3.

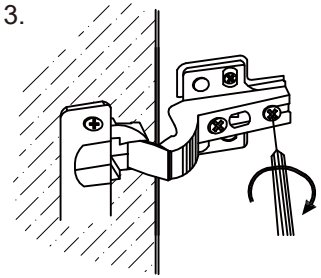

Re-tighten this screw.