
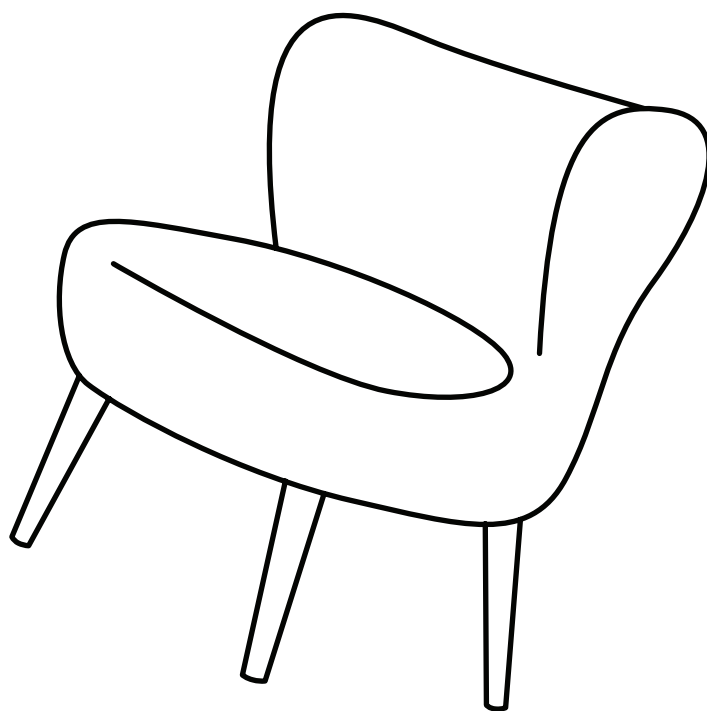


Hello,
I've arrived!

Now that I'm here you are only one
flat-pack away from transforming
your home.

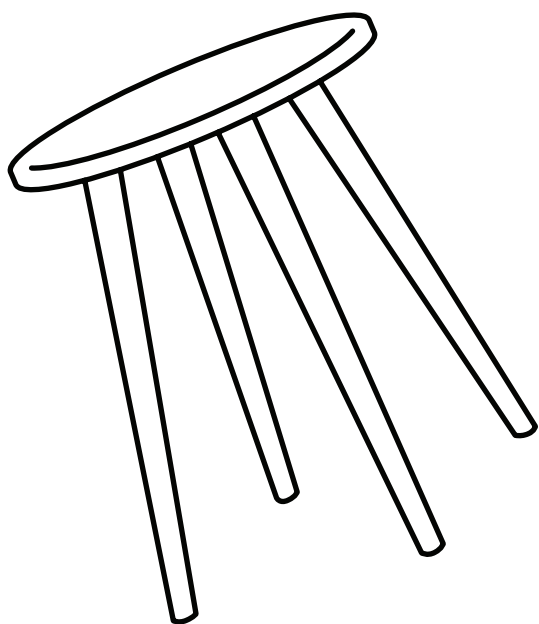

Mocka.

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create beautifully functional spaces to feel comfortably you.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions—you are already on your way to creating a beautifully functional space!



Set The Mood

Put on your favourite playlist, order that pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging and share a pic of your room reveal—we love seeing how you transform your home! Tag us @mockaaustralia/@mockaanz


Happy flat-packing!

The Mocka Team

Aspen

Classic Cot

Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz

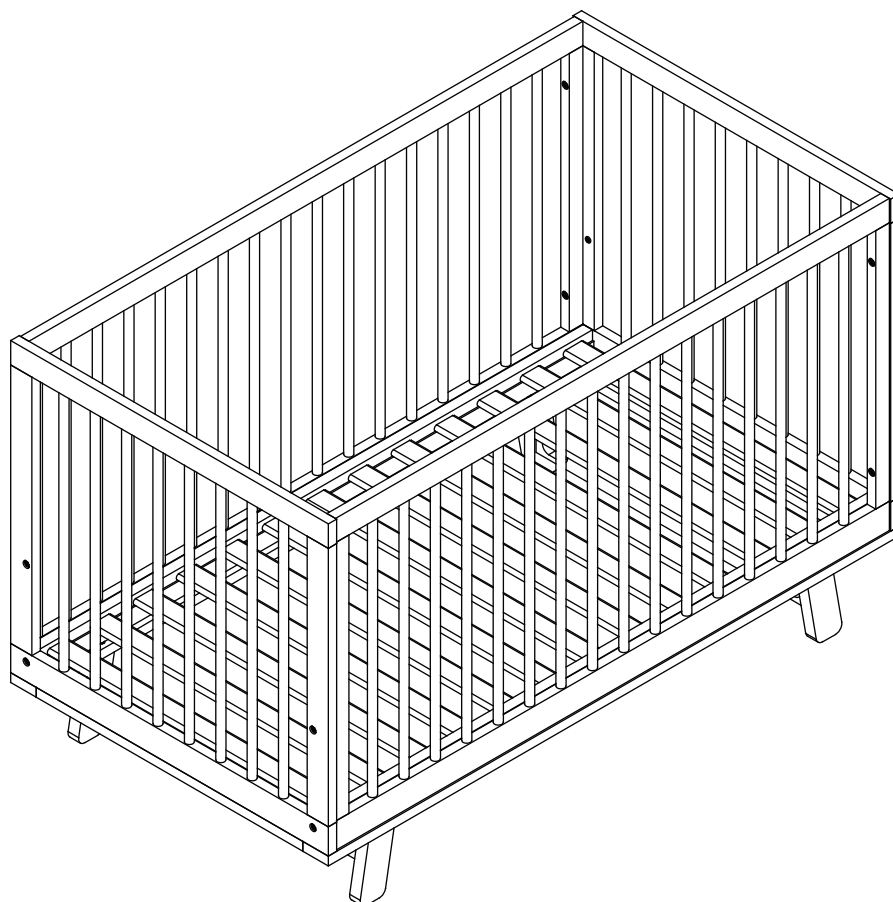

**LIFT THE COT INTO PLACE, DO NOT DRAG,
AS THIS CAN CAUSE DAMAGE**

Aspen

Classic Cot

Please follow the manufacturer's assembly instructions in detail to ensure the safety features of the cot are not compromised.

Ensure the cot is placed at a reasonable distance from curtains, blinds, heaters and power points. Keep all medications, string, elastic, small toys or small items, such as money, out of reach from any position in the cot.

Assembly

Care must be taken when attaching sides. Ensure all crews are 100% tight before use, but do not over tighten screws as this can cause damage to the cot. Once assembled lift furniture into place, do not drag.

Care and Maintenance

Regularly check all screws for tightness or damage that could render the cot unsafe. To clean, use a damp cloth, avoiding the use of detergents or abrasives.

RECOMMENDED MATTRESS SIZE

This cot has been manufactured for use with a mattress which measures 690 mm wide by 1300 mm long and 100 mm in thickness. The width and length are specified because it is important that gaps between the mattress and the sides and ends of the cot will not exceed 40mm when the mattress is pushed to one side or end, and 20 mm.

When the mattress is centered in the cot. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimize the risk of a child climbing or falling out of the cot.

Mattress Position



WARNING: TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP.

Importer: MOCKA Products Pty Ltd

PO BOX 18, Pinkenba QLD 4008, Queensland, AUSTRALIA


MOCKA

PO Box 29335, Riccarton, Christchurch 8440, NEW ZEALAND

Aspen

Classic Cot

Panel Layout

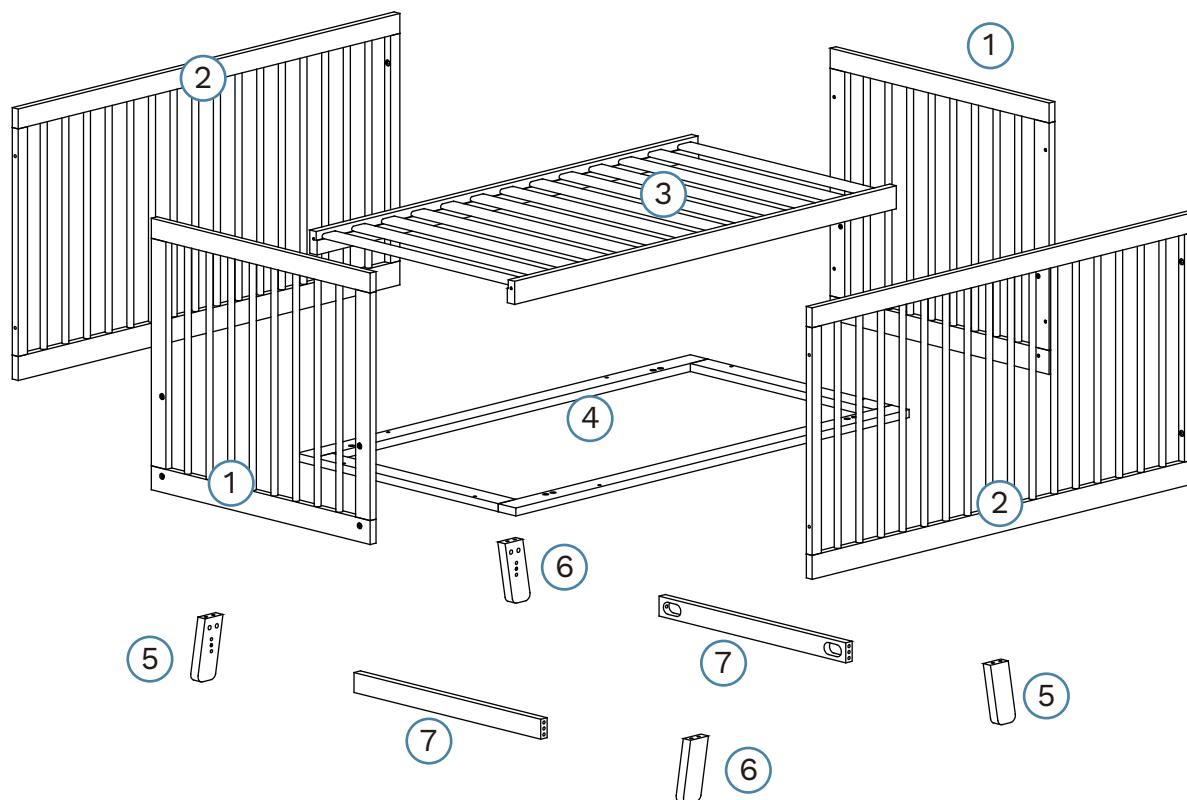


Partlist

①	End Panel	x2
②	Side Panel	x2
③	Mattress Base	x1
④	Bottom Panel	x1
⑤	Right Leg	x2
⑥	Left Leg	x2
⑦	Connecting Bar	x2

Aspen Classic Cot

A




8x
bolt

B



16x
bolt

C



8x
bolt

D



8x
nut

E



8x
dowel

F




2x
allen key

G



4x
screw&nut
(pre-installed)


HARDWARE SUPPLIED





Flathead screwdriver required

Aspen Classic Cot

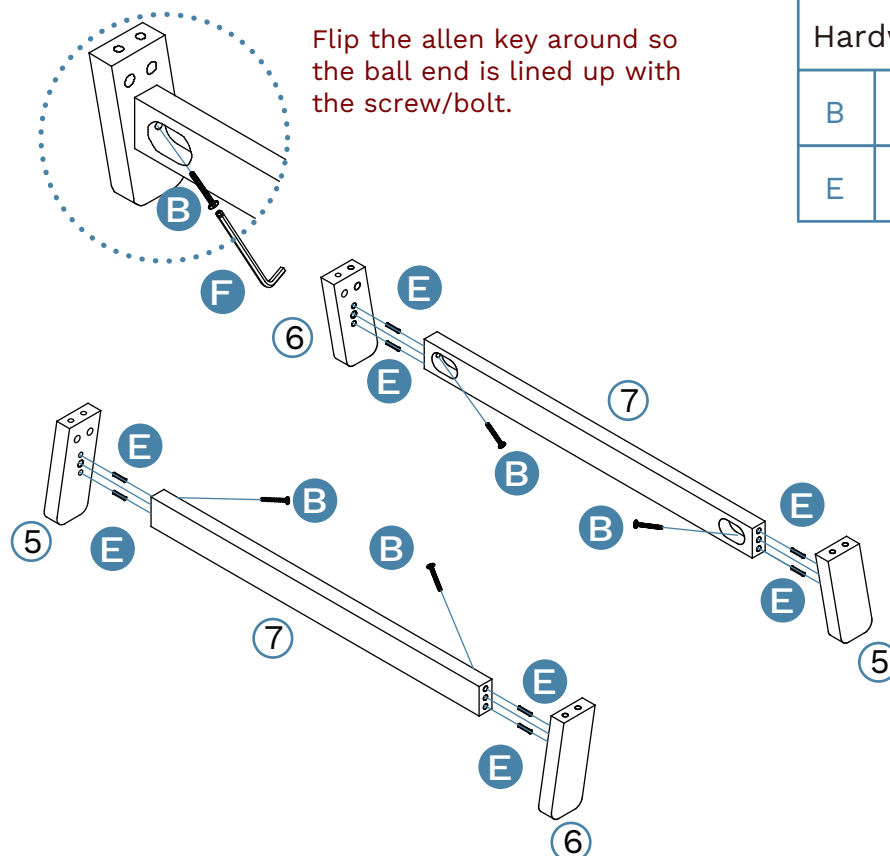
1





Hardware Needed

B		x4
E		x8

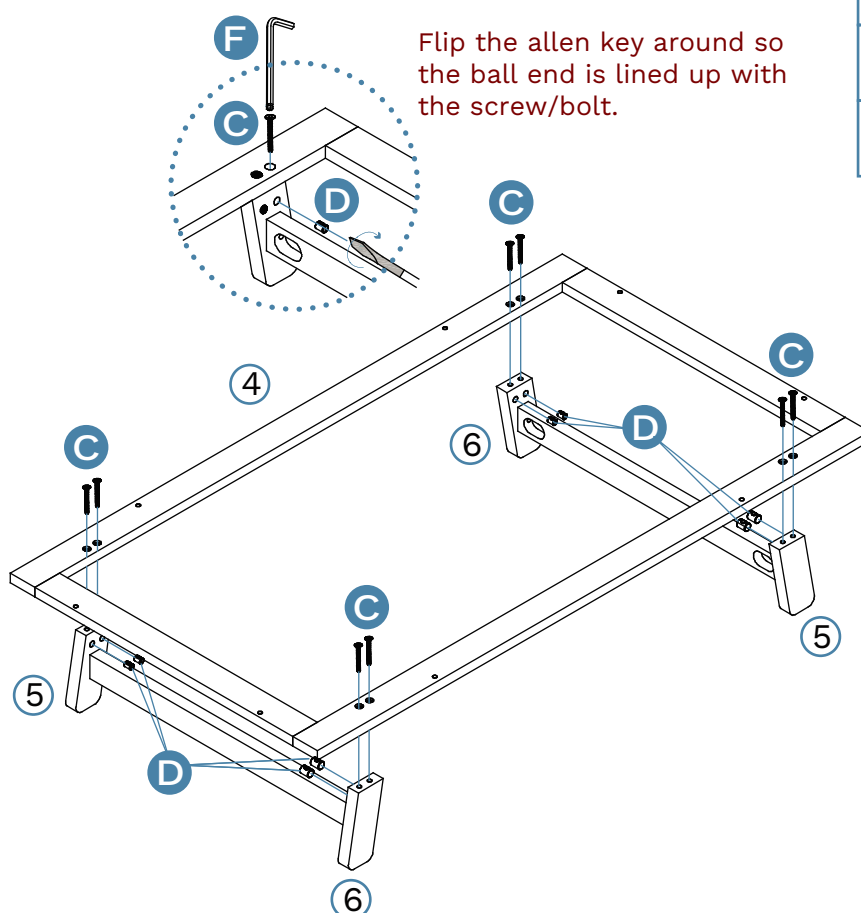2




Hardware Needed

C		x8
D		x8

Aspen Classic Cot

3

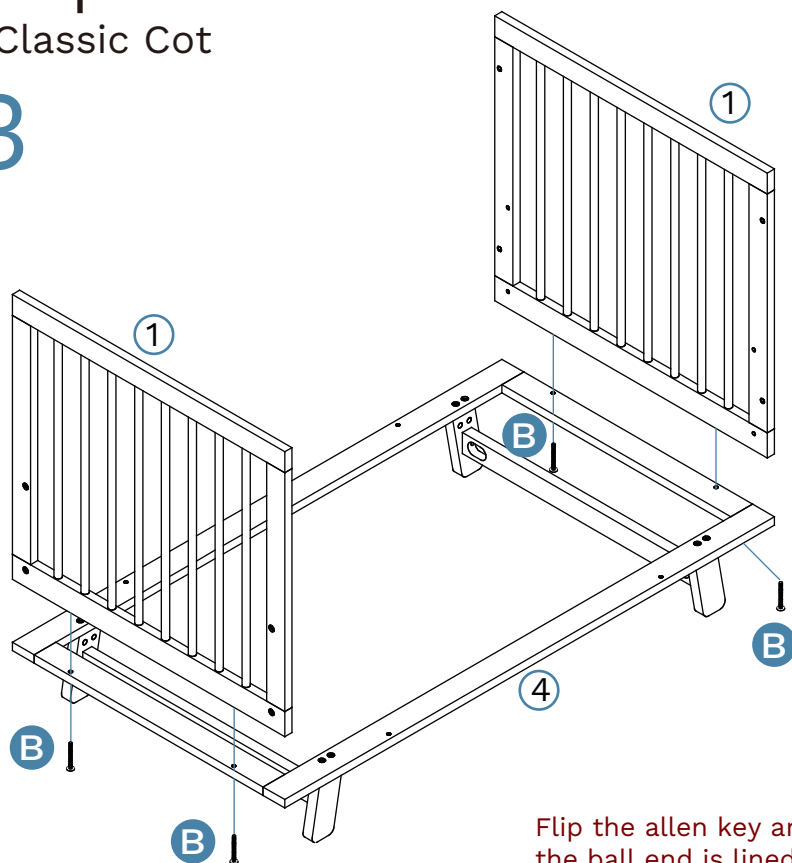


Hardware Needed

B




4

Flip the allen key around so the ball end is lined up with the screw/bolt.

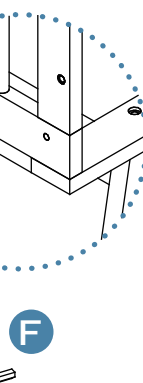

4

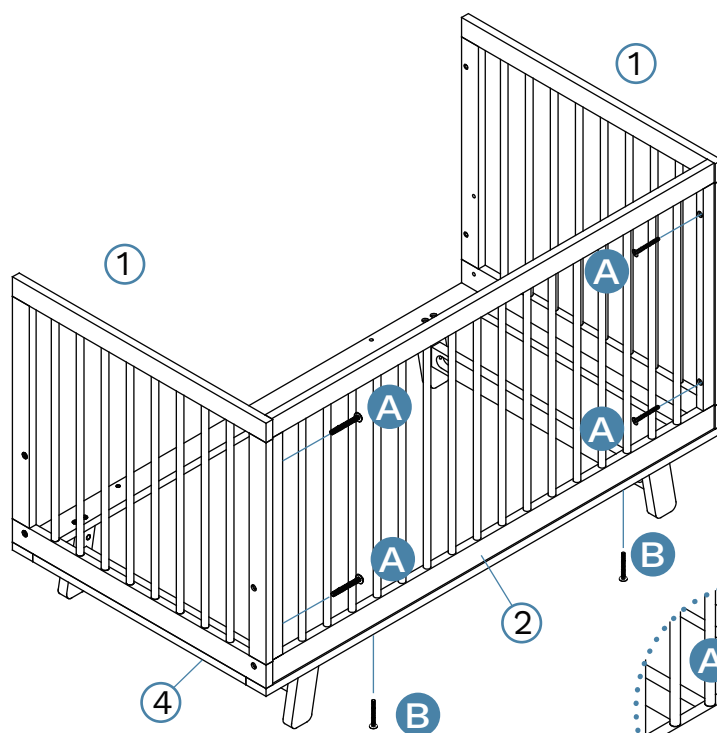

Hardware Needed

A




x4

B




x2

Flip the allen key around so the ball end is lined up with the screw/bolt.

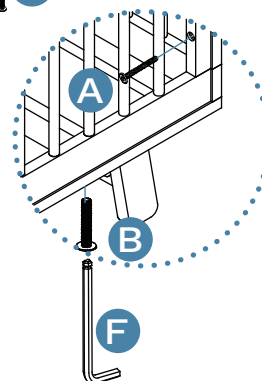

Aspen Classic Cot

5

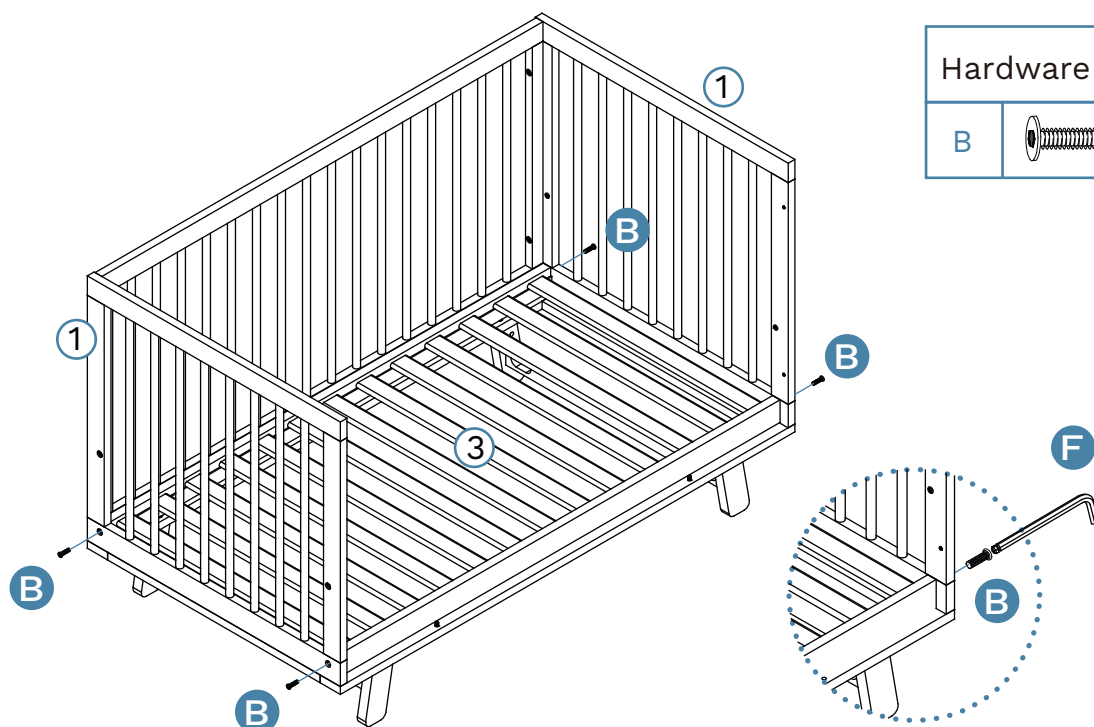

Hardware Needed


B



4

Flip the allen key around so the ball end is lined up with the screw/bolt.

6

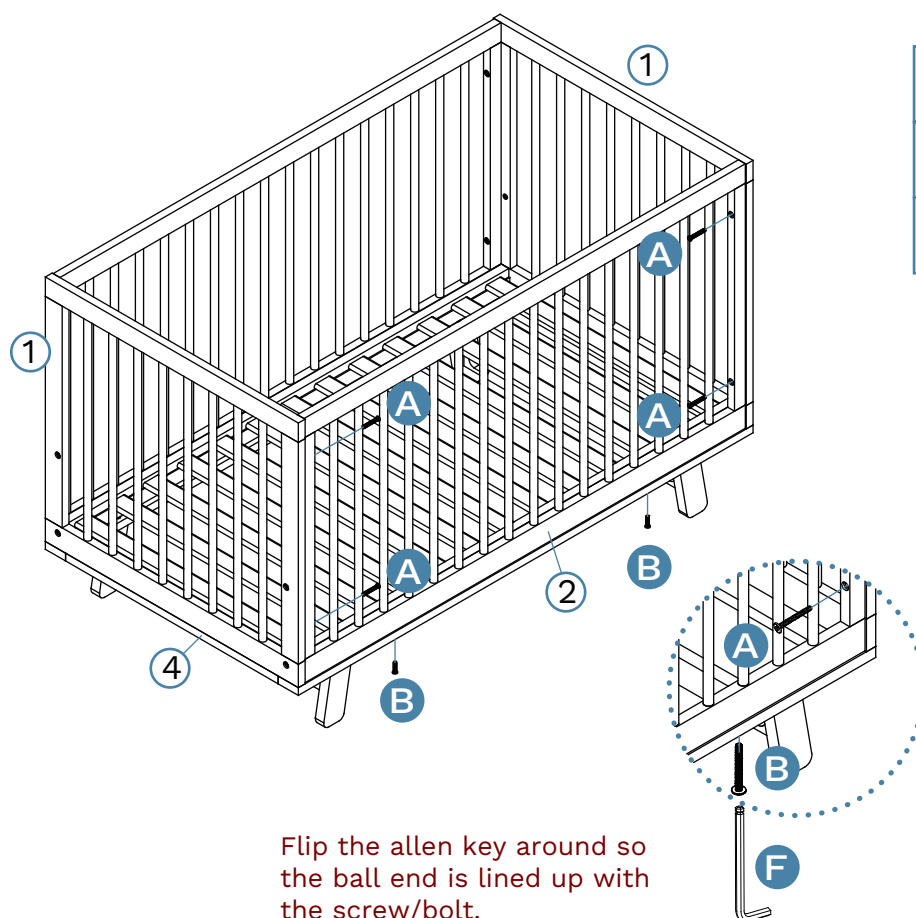

Hardware Needed

A



x4

B



x2

Flip the allen key around so the ball end is lined up with the screw/bolt.


Aspen Classic Cot

7



All done! Regularly check all screws are suitably tightened. Place the correct size mattress into the cot before use. To clean use a damp cloth, avoiding the use of detergents or abrasives. Once assembled lift furniture into place, do not drag.

8

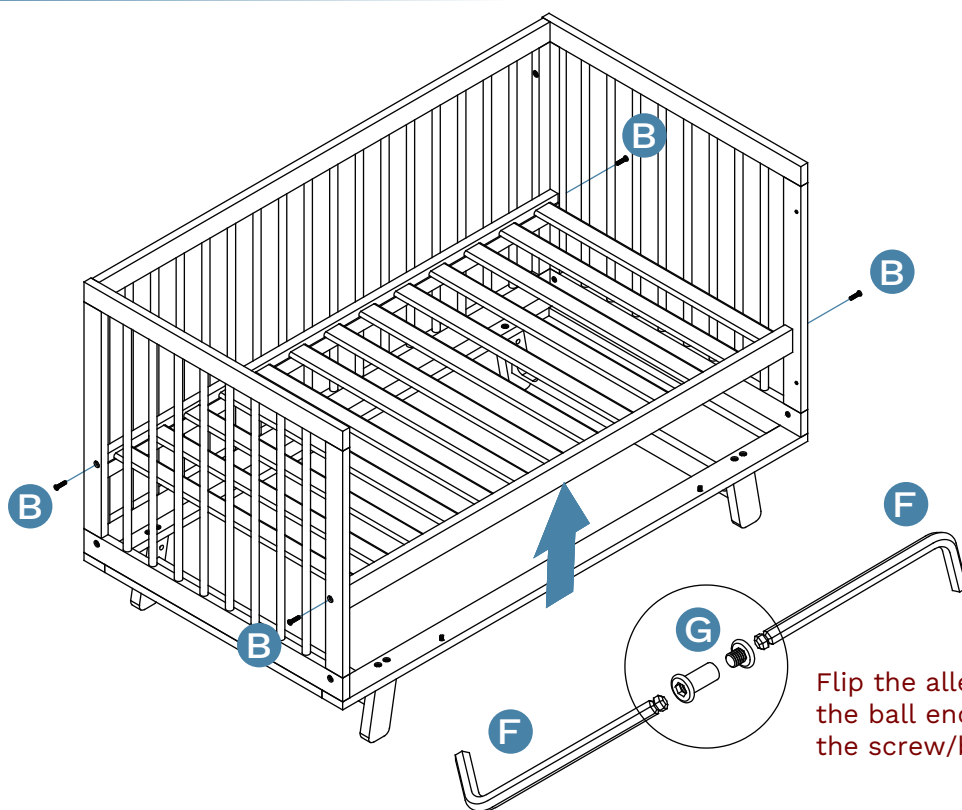

Flip the allen key around so the ball end is lined up with the screw/bolt.

OPTIONAL: To adjust mattress base setting, push the screws and nuts (G) out from the alternative holes with allen key (F) and repeat steps 5 and 6 by removing the side panel and moving the mattress frame [3] to corresponding holes. Securely attach again in the adjusted position.

WARNING: To prevent dangerous of hole, when mattress base of this cot adjust lowest position, the upper alternative hole should be covered with screws and nuts(G).