
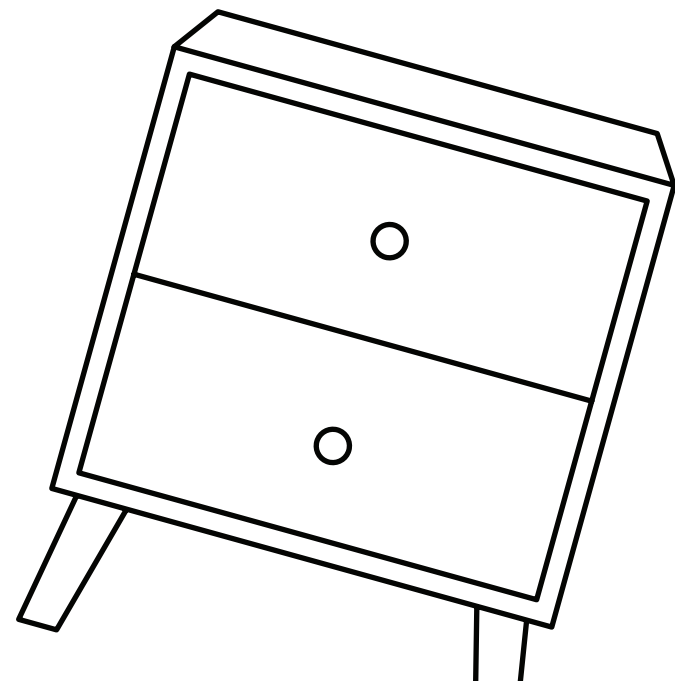


Hello, I've arrived!

Now that I'm here you are only one
flat-pack away from transforming
your home.

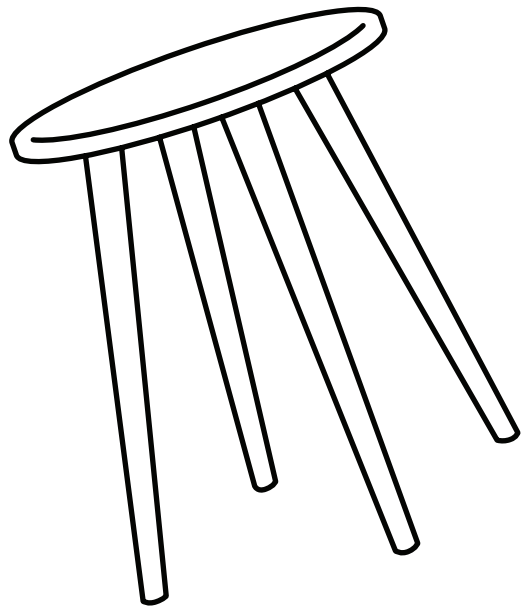

Mocka.

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create beautifully functional spaces to feel comfortably you.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions—you are already on your way to creating a beautifully functional space!



Set The Mood

Put on your favourite playlist, order that pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal


You did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging and share a pic of your room reveal - we love seeing how you transform your home! Tag us @mockaaustralia/@mockaanz

Happy flat-packing!

The Mocka Team

Aspiring Classic Cot

Thank you for your purchase. Please follow the manufacturer's assembly instructions in detail to ensure the safety features of the cot are not compromised.

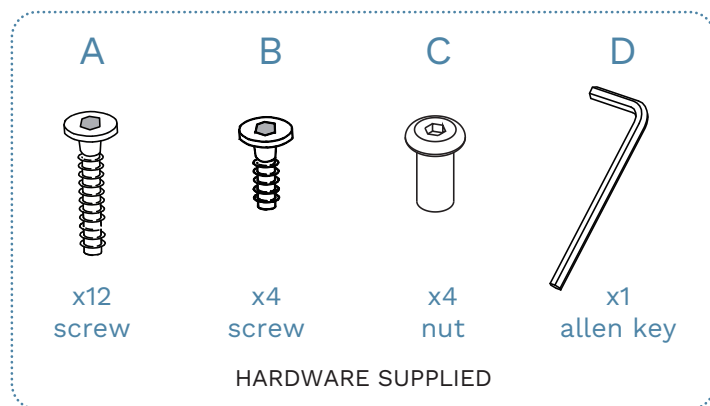

Ensure the cot is placed at a reasonable distance from curtains, blinds, heaters and power points. Keep all medications, string, elastic, small toys or small items, such as money, out of reach from any position in the cot.


ASSEMBLY

Care must be taken when attaching sides. Do not over-tighten screws as this can cause damage to the cot.

CARE AND MAINTENANCE

Regularly check all screws for tightness or damage that could render the cot unsafe. To clean - use a damp cloth, avoiding the use of detergents or abrasives.

WARNING: TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP

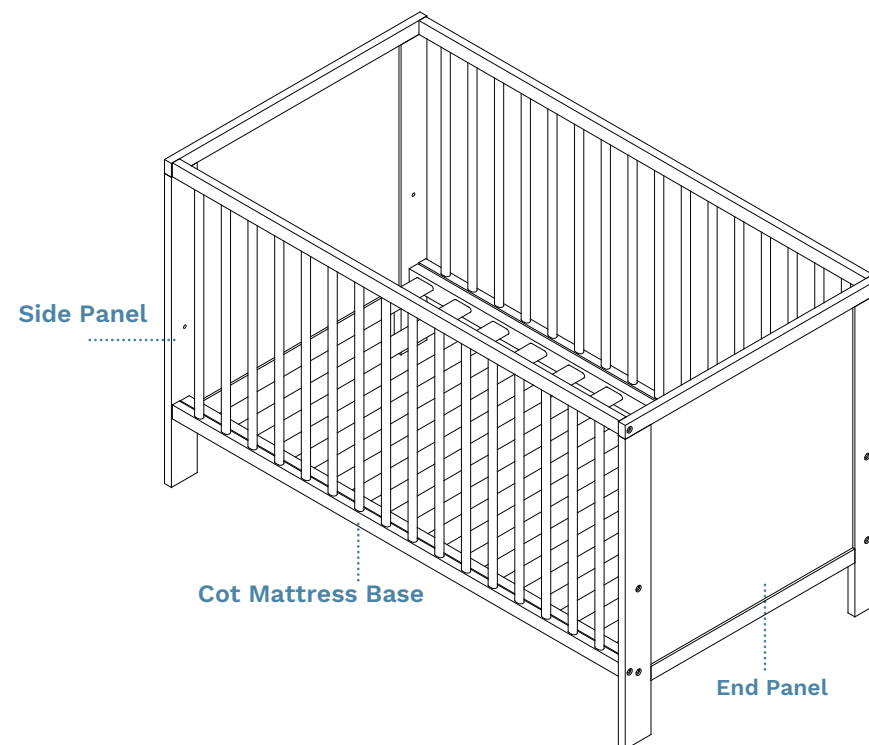

RECOMMENDED MATTRESS SIZE


This cot has been manufactured for use with a mattress which measures 1300mm long x 690mm wide x 100mm in thickness. The width and length are specified because it is important that gaps between the mattress and the sides and ends of the cot will not exceed 40mm when the mattress is pushed to one side or end, and 20mm when the mattress is centred in the cot. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimize the risk of a child climbing or falling out of the cot.

Mocka Products Pty Ltd. PO Box 18, Pinkenba, QLD 4008, AU
Mocka Limited, PO Box 29355, Riccarton, Christchurch 8440, NZ.

Mocka.


Aspiring Classic Cot

1

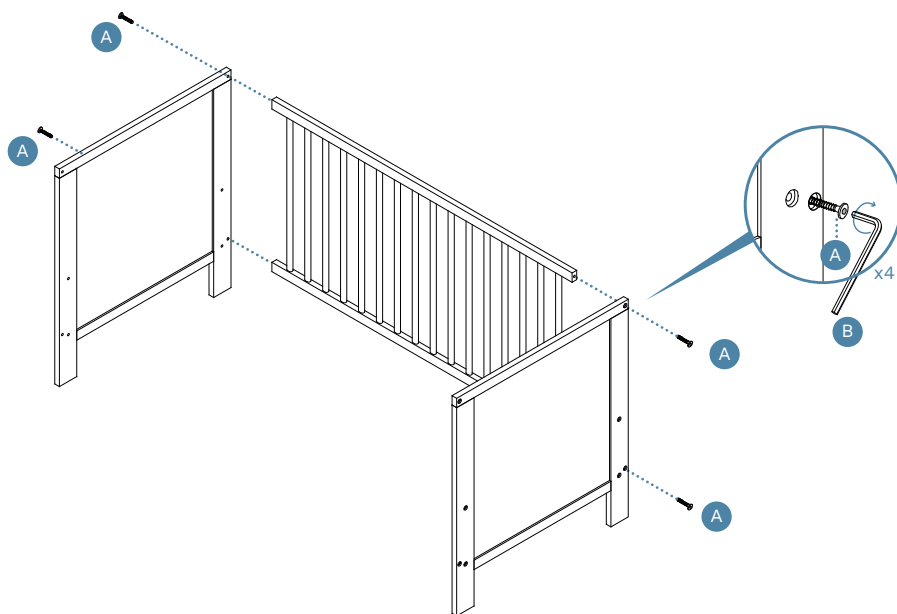

Find one of the side panels and attach to both end panels of the cot using 4x screws (A) in the holes as shown.


2

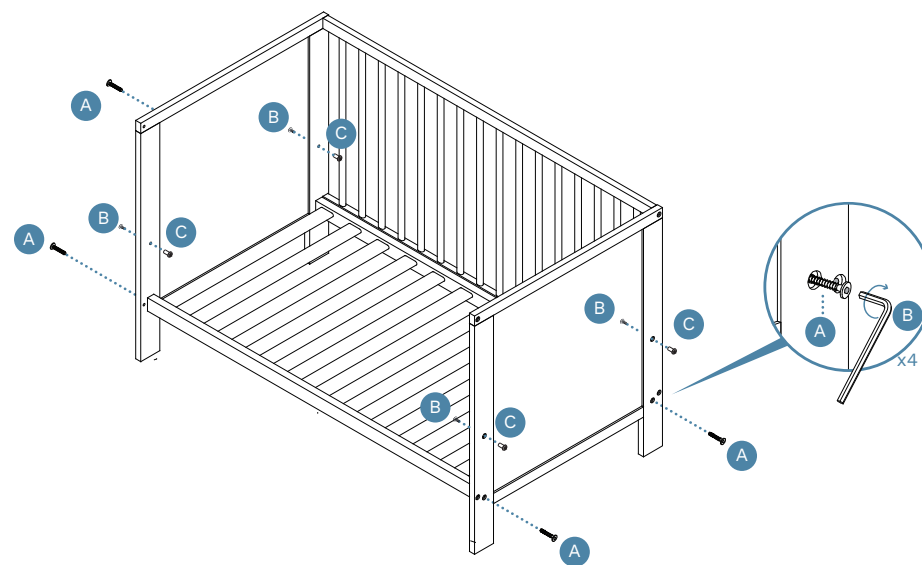

Attach the cot mattress base at the required level using 4x screws (A) as shown. Tighten all screws using the allen key (D). Attach 4 x screw (B) to 4 x nut (C). Tighten with an Allen Key (D).


Aspiring Classic Cot

3

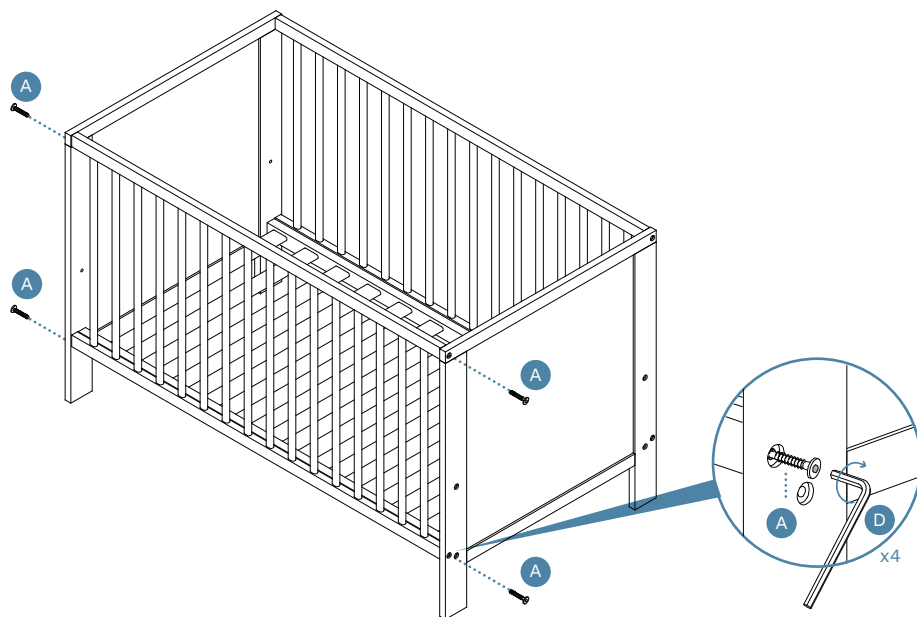


Slide the remaining side panel into place and attach using 4 x screws (A) in the holes as shown. Tighten all screws using the allen key (D).

4

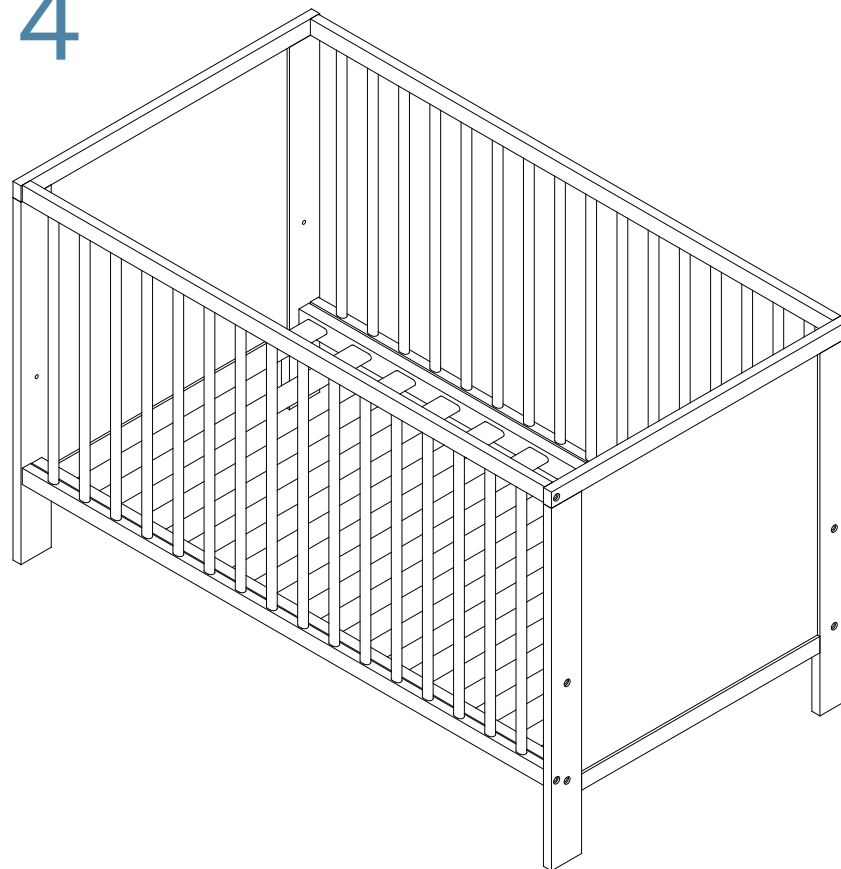

All done! Regularly check all screws are suitably tightened. Place the correct size mattress into the cot before use. To clean use a damp cloth, avoiding the use of detergents or abrasives. Once assembled lift furniture into place, do not drag.

Aspiring Classic Cot

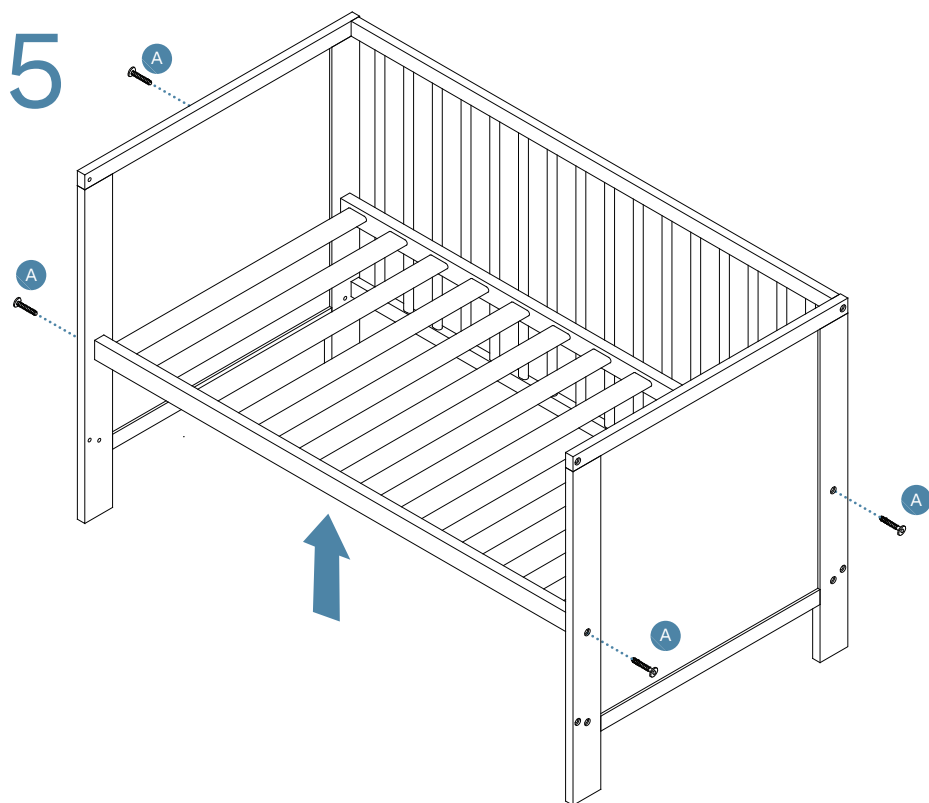

OPTIONAL/MATTRESS HEIGHT ADJUSTMENT (please keep these instructions handy for future reference)

To adjust mattress base settings, remove small plastic plugs. This will require a small amount of force, please note these are not screws and cannot be screwed out. You will need a screwdriver that fits into the centre hole and possibly a hammer, or similar, to gently tap the end until the plug pops out.

Repeat steps 2, 3 and 4 by removing the side panel and moving the base to corresponding holes. Securely attach again in the adjusted position.

**LIFT THE COT INTO PLACE, DO NOT DRAG,
AS THIS CAN CAUSE DAMAGE**