
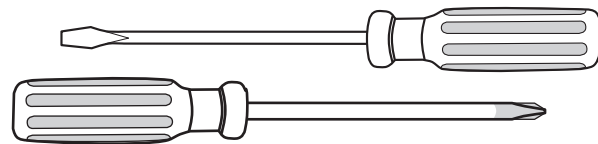


Mocka Under Cot Storage

Assembly Instructions


Thank you for your purchase.
Please follow the instructions below for correct assembly.

mocka

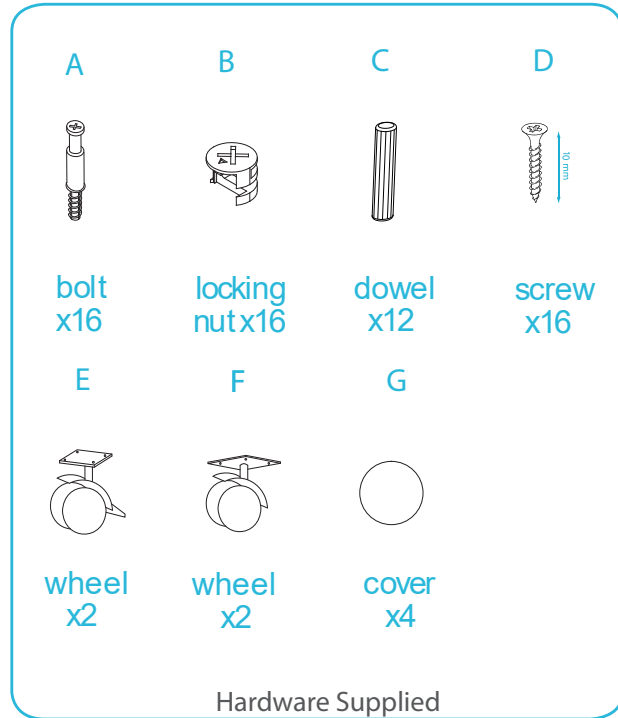

Phillips & Flathead screwdrivers required

For quicker assembly, we recommend the use of a power drill on a low-speed setting.

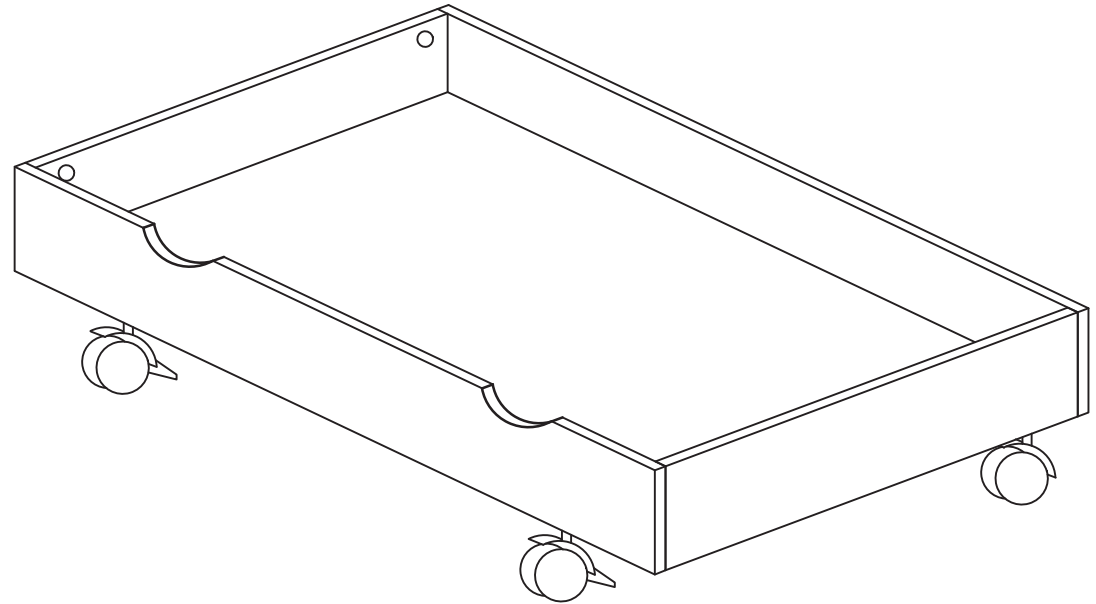


*We recommend using a Flathead screwdriver to tighten all locking nuts 100% before first use.
Please clear any loose wood from the locking nut holes before inserting the nut to ensure it locks 100%.

Mocka Under Cot Storage

Assembly Instructions


mocka

1

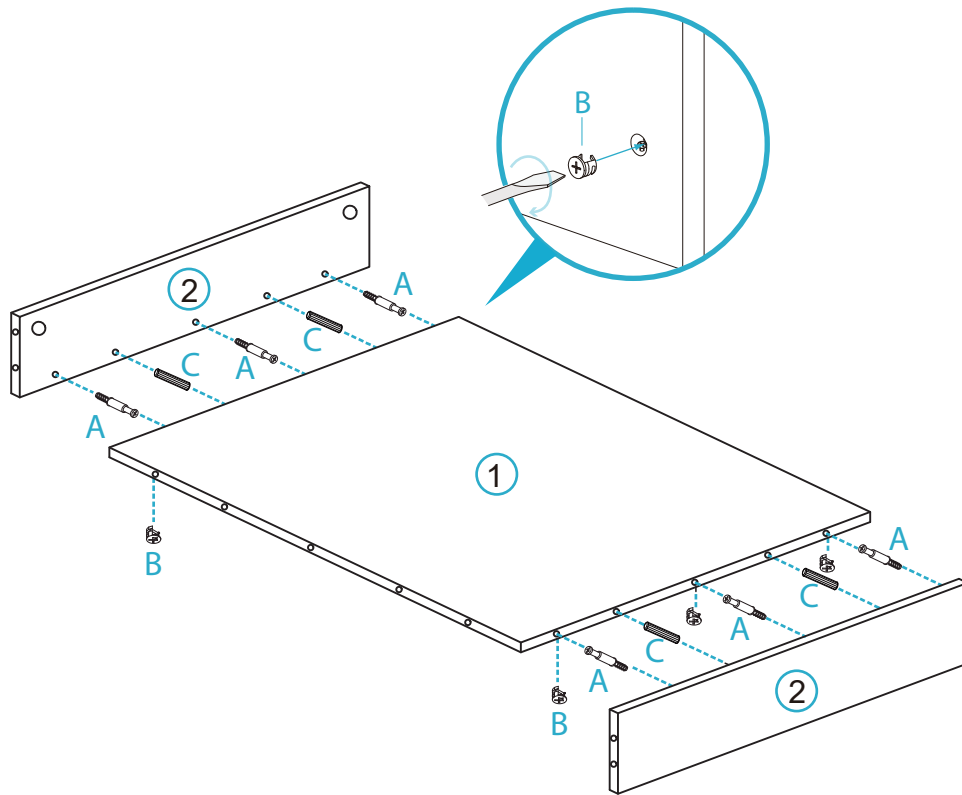

Attach the two side panels [2] to the base panel [1] with 6x bolts (A), 4x dowels (C) and secure with 6x locking nuts (B). Tighten with a screwdriver.

2

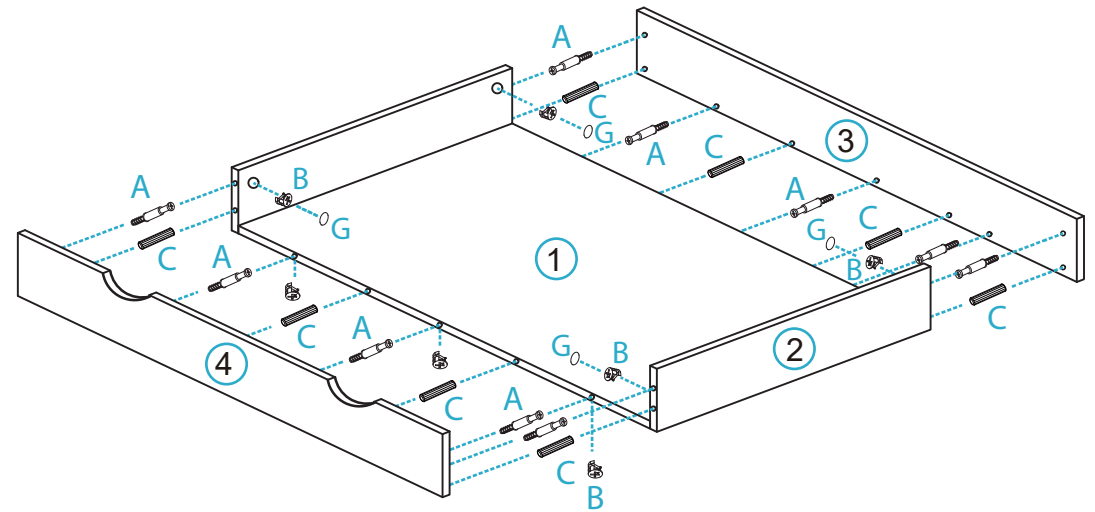


Attach the front panel [4] and back panel [3] with 10x bolts (A), 8x dowels (C) and secure with 10 x locking nuts (B). Tighten with a screwdriver. Cover Locking nuts (B) with 4 x covers (G).

Mocka Under Cot Storage


Assembly Instructions

mocka

3

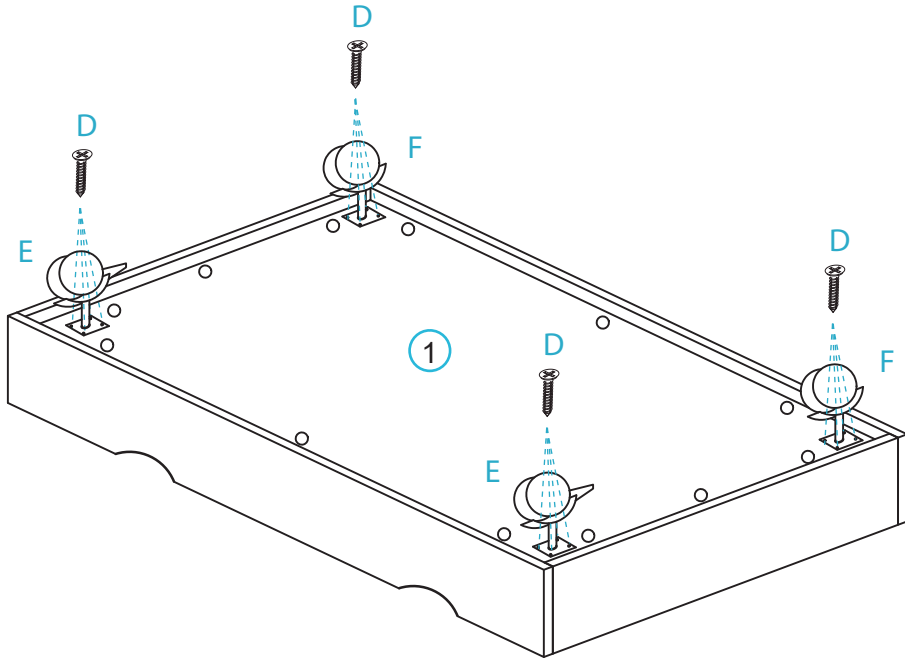

4

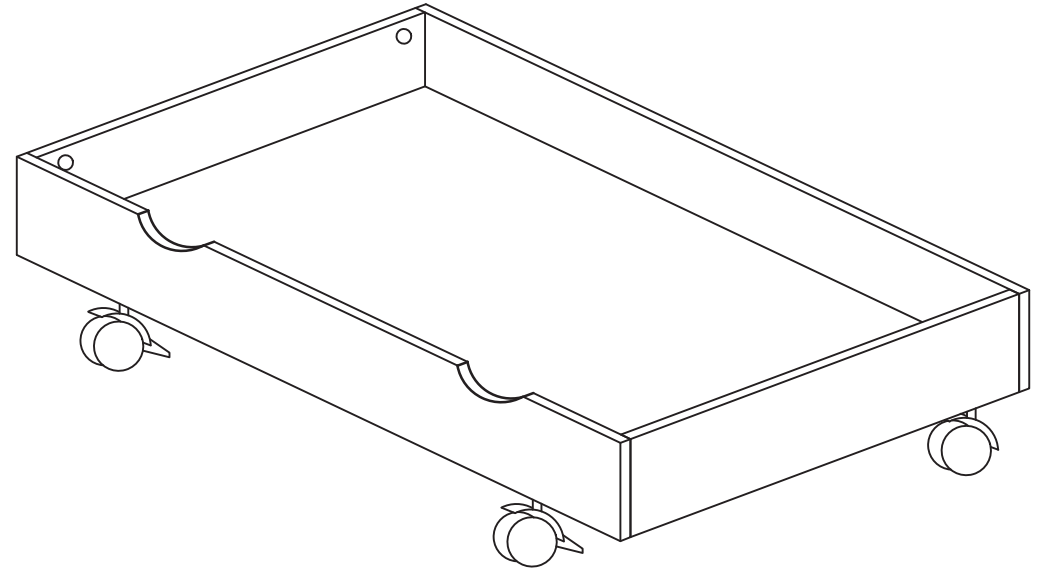

Attach 2x wheels (E) and 2x wheels (F) to the underside of panel [1] as shown, using 16x screws (D). Tighten with a screwdriver.

Repeat steps 1 to 3 to complete the second box. You're done, enjoy!