


# Porto Desk



## Assembly Instructions

Thank you for your purchase.  
Please follow the instructions below for correct assembly.

# mocka

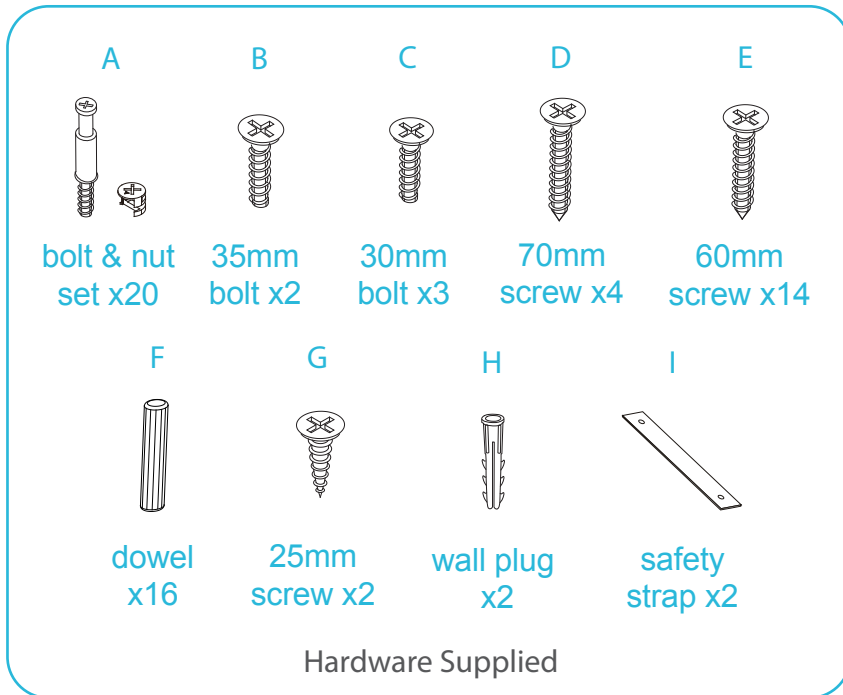

**WARNING:** Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

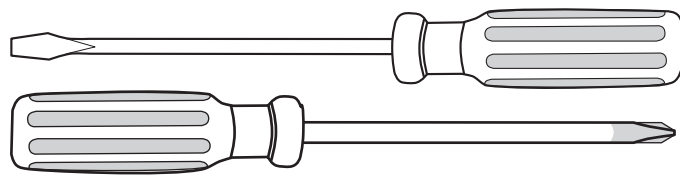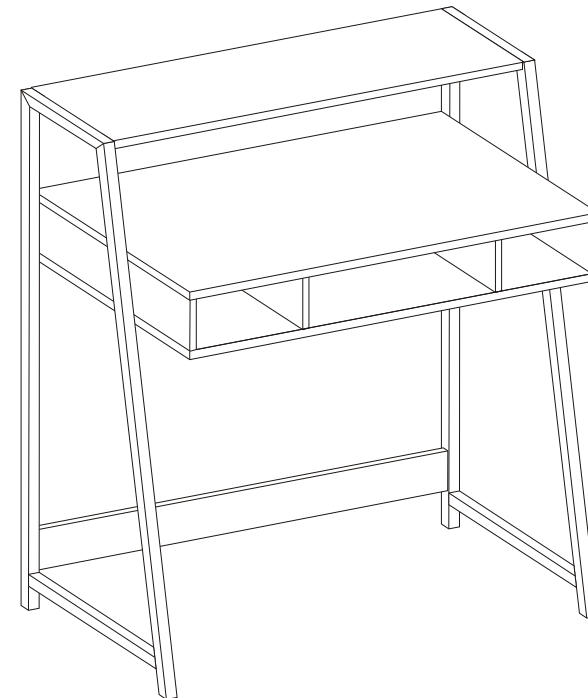


Phillips & Flathead screwdrivers required

# Porto Desk

## Assembly Instructions


mocka

1

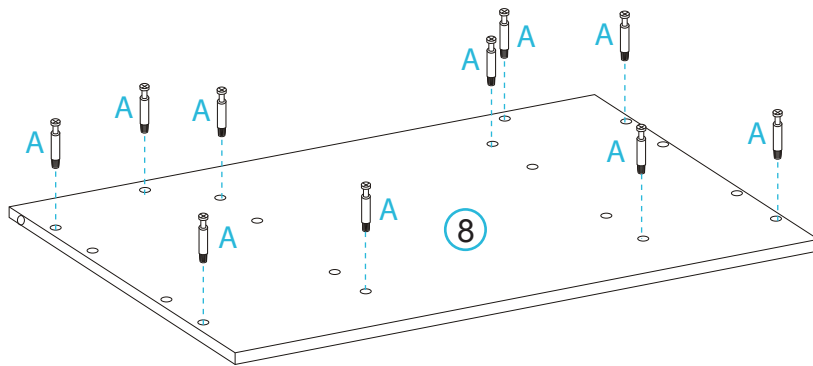

Attach 10x bolts (A) to panel [8].

2

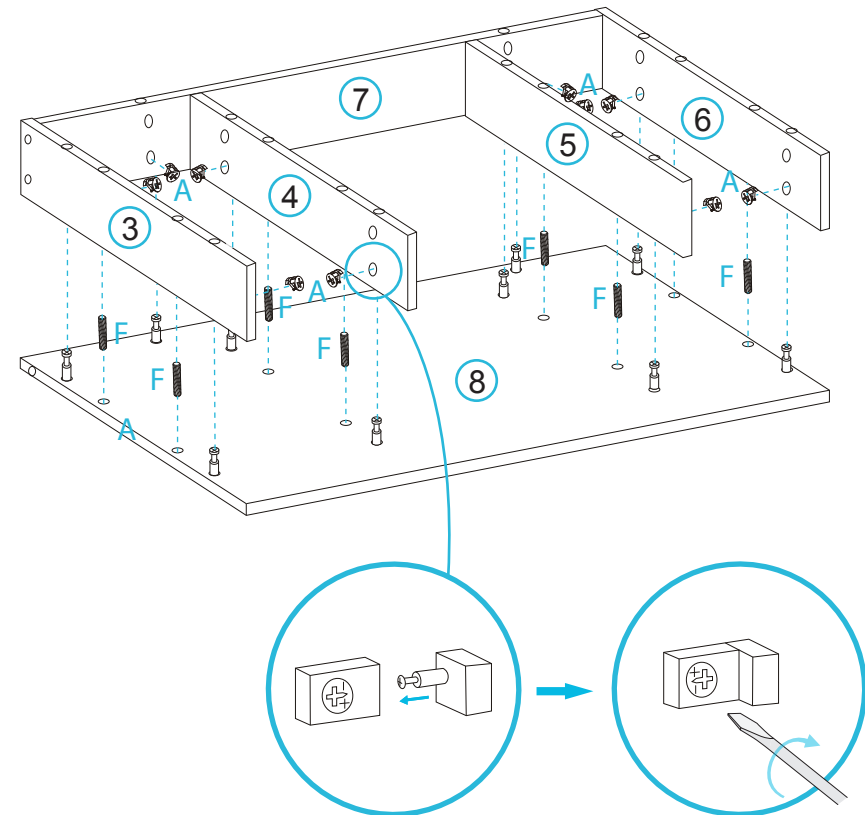


Attach panels [3], [4], [5], [6] and [7] to panel [8] using 8x dowels (F) and 10x locking nuts (A). Tighten with a screwdriver.

# Porto Desk

## Assembly Instructions


mocka

3

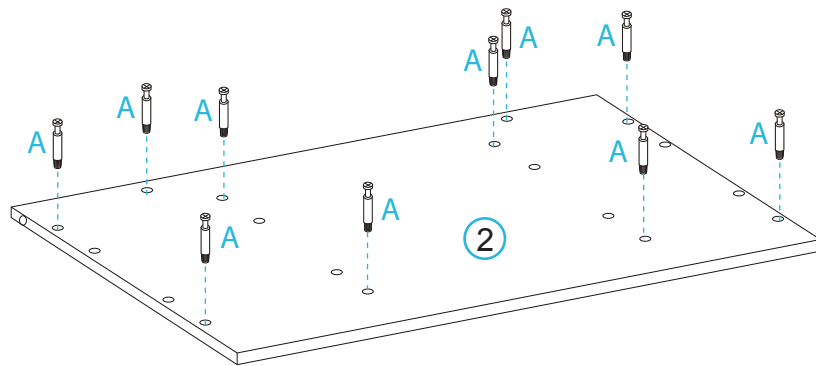

Attach 10x bolts (A) to panel [2].

4

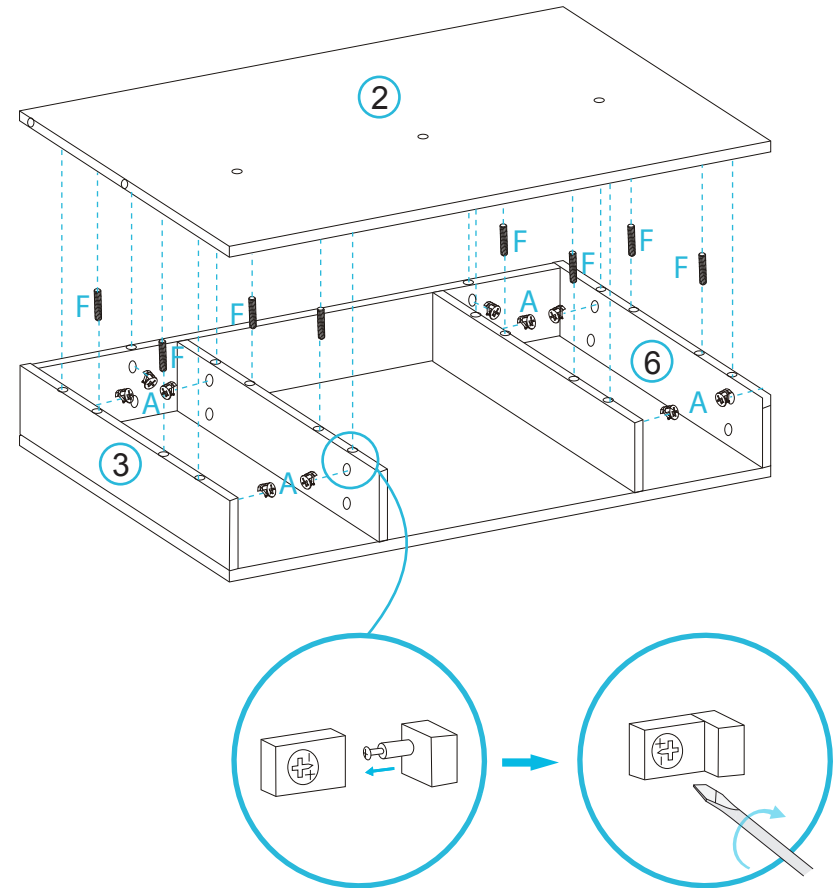


Attach panel [2] to panels [3], [4], [5], [6] and [7] using 8x dowels (F) and 10x locking nuts (A). Tighten with a screwdriver.

# Porto Desk

## Assembly Instructions


mocka

5

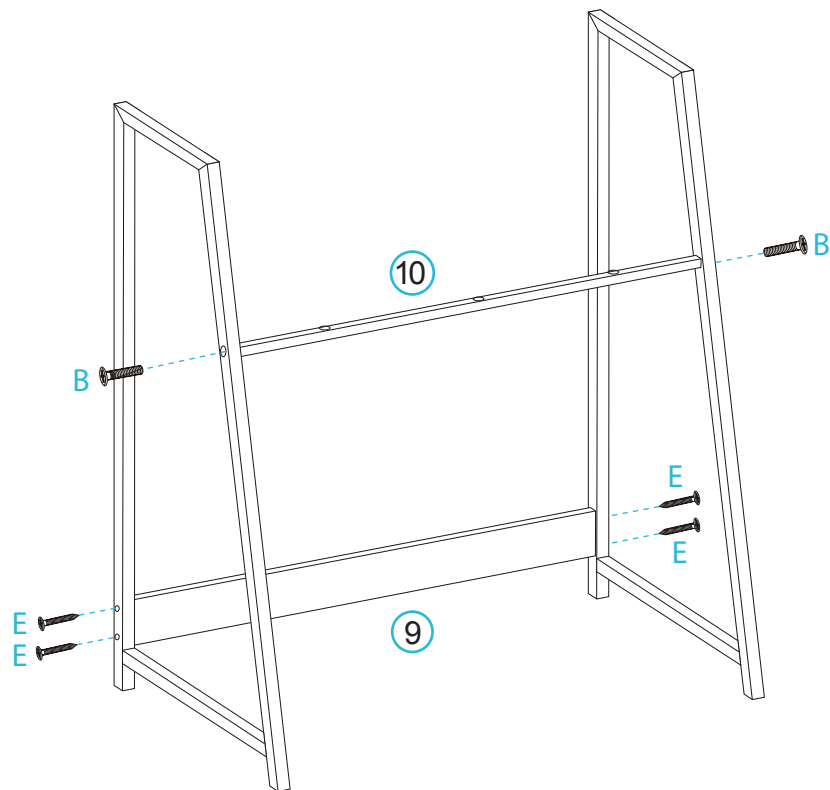

Attach panel [10] to the side panels and secure with 2x 35mm bolts (B). Attach panel [9] to the side panels using 4x 60mm screws (E). Tighten with a screwdriver.

6

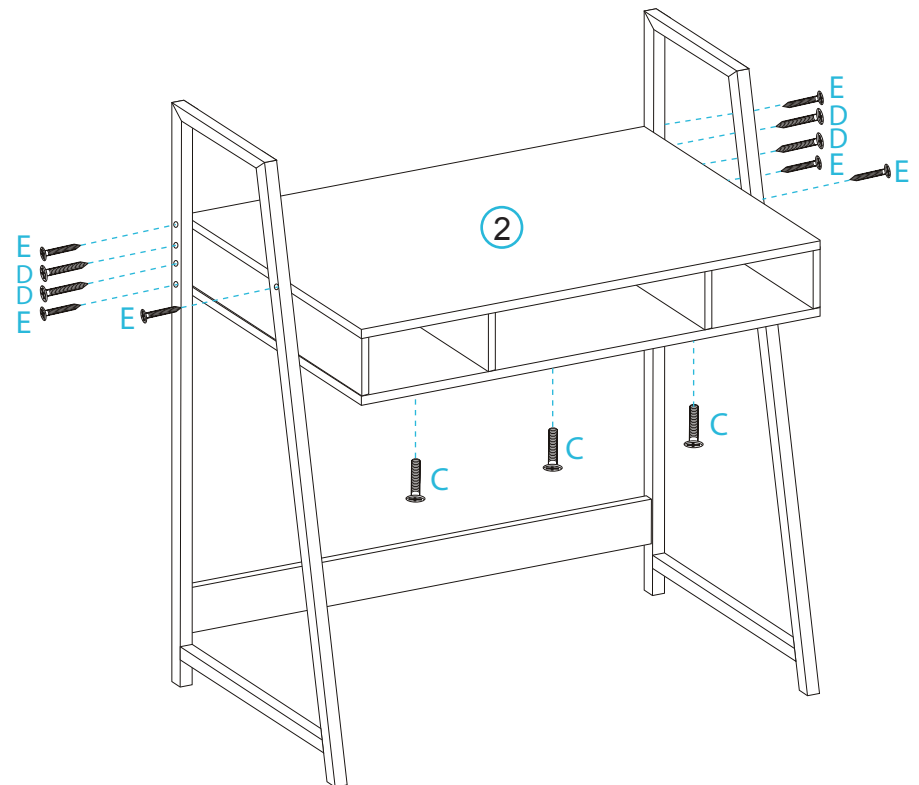


Attach the desk section to panel [10] using 3x 30mm bolts (C). Secure to the legs using 6x 60mm screws (E) and 4x 70mm screws (D). Tighten with a screwdriver.

# Porto Desk

## Assembly Instructions


mocka

7

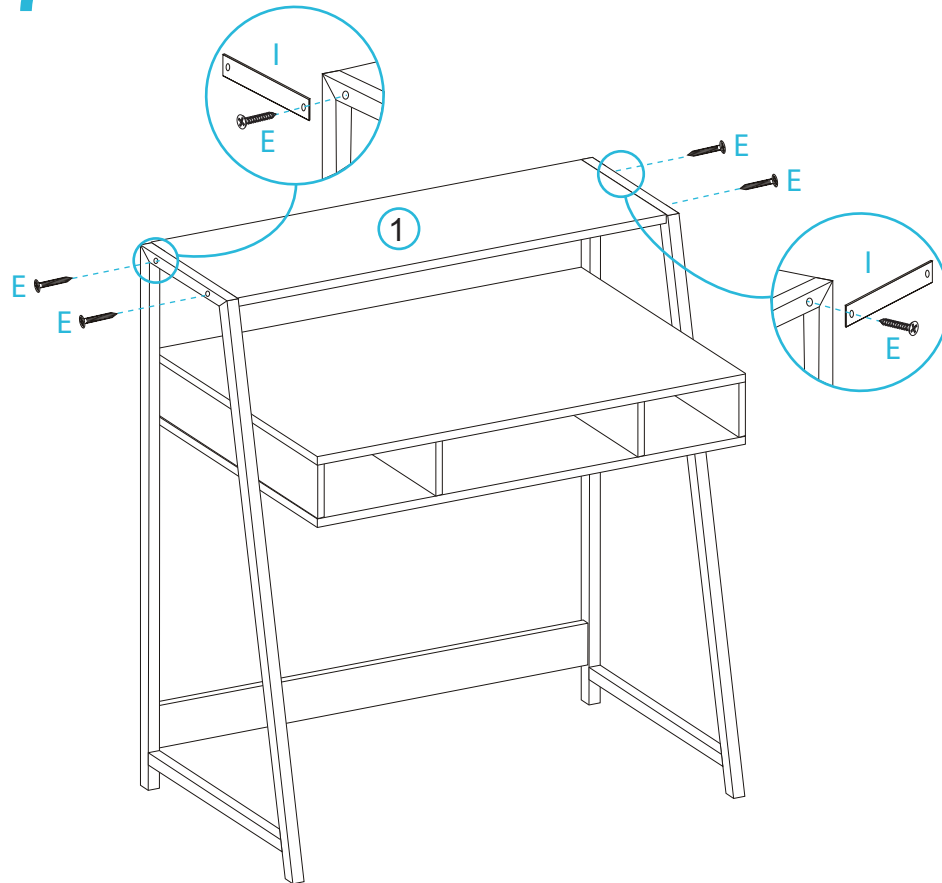

Attach panel [1] and secure with 4x 60mm screws (E), while attaching the 2x safety straps (I) as shown. Tighten with a screwdriver. Once assembled lift furniture into place, do not drag.

8

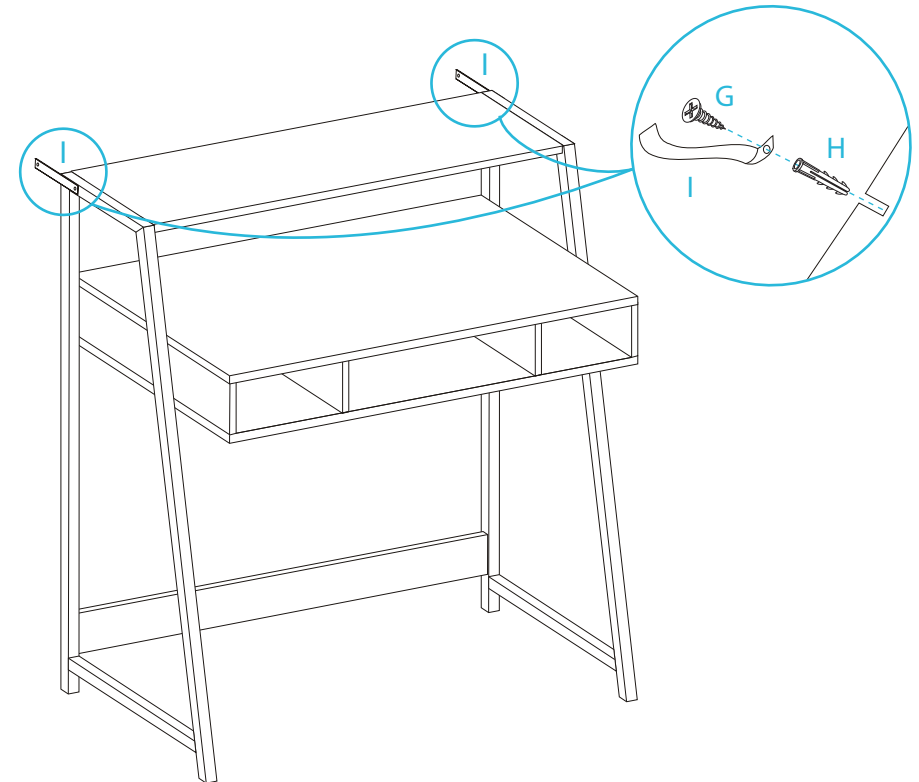

Move the unit to the desired location against a wall. Attach the other end of the 2x safety straps (I) to the wall using 2x wall plugs (H) and 2x 25mm screws (G). Tighten with a screwdriver. You're done, enjoy!