


Boston Cot

Assembly Instructions

Thank you for your purchase.

Please follow the manufacturers assembly instructions in detail to ensure the safety features of the cot are not compromised.

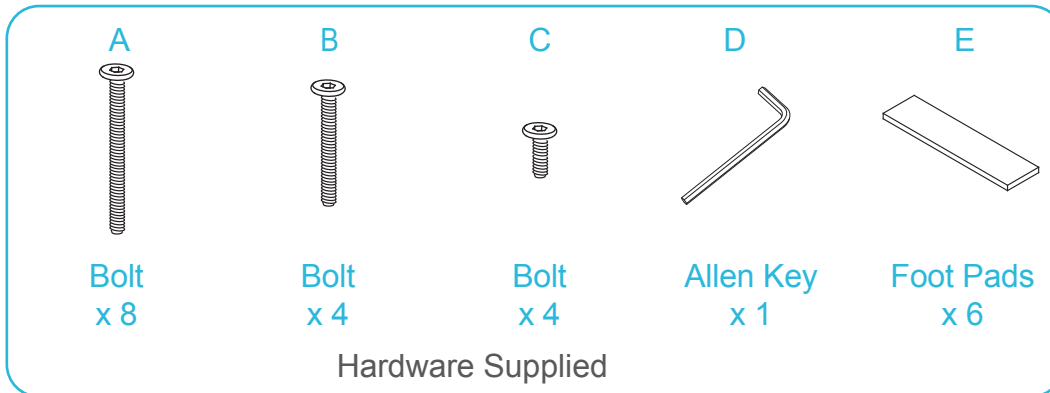

Ensure the cot is placed at a reasonable distance from curtains, blinds, heaters and power points. Keep all medications, string, elastic, small toys or small items, such as money, out of reach from any position in the cot.

Assembly

Care must be taken when attaching sides. Do not over-tighten screws as this can cause damage to the cot.

Care and Maintenance

Regularly check all screws for tightness or damage that could render the cot unsafe.


To clean - use a damp cloth, avoiding the use of detergents or abrasives.

Recommended mattress size

This cot has been manufactured for use with a mattress which measures 1300mm long x 690mm wide x 100mm in thickness. The width and length are specified because it is important that gaps between the mattress and the sides and ends of the cot will not exceed 40mm. This is to minimize the risk of a child's limb becoming caught in the gap. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500mm with the mattress base in the lower position to minimize the risk of a child climbing or falling out of the cot.

mocka


WARNING: TO PREVENT FALLS, THE MATTRESS BASE OF THIS COT SHOULD BE ADJUSTED TO THE LOWEST POSITION BEFORE THE CHILD CAN SIT UP

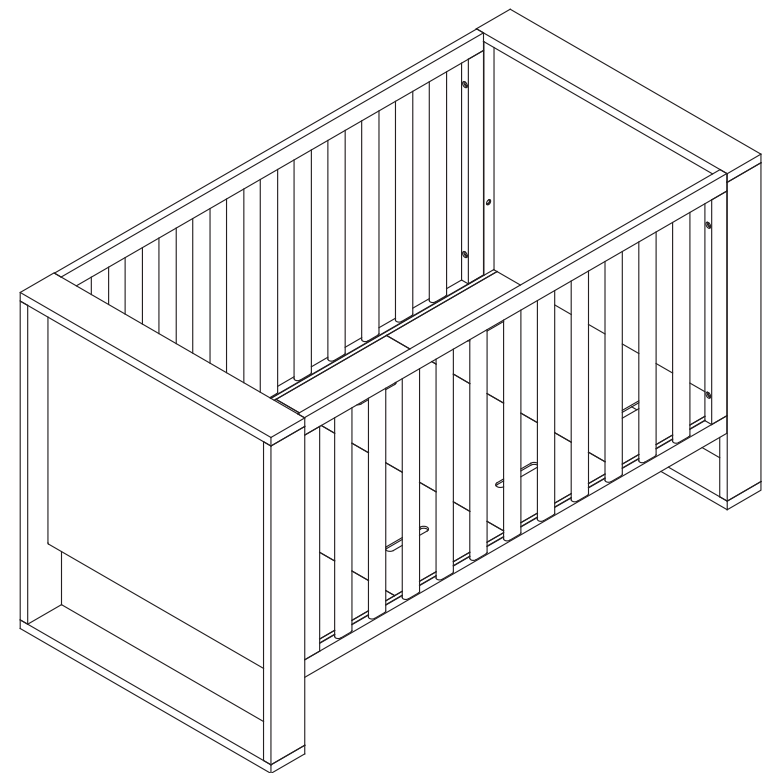

Boston Cot


Assembly Instructions

mocka

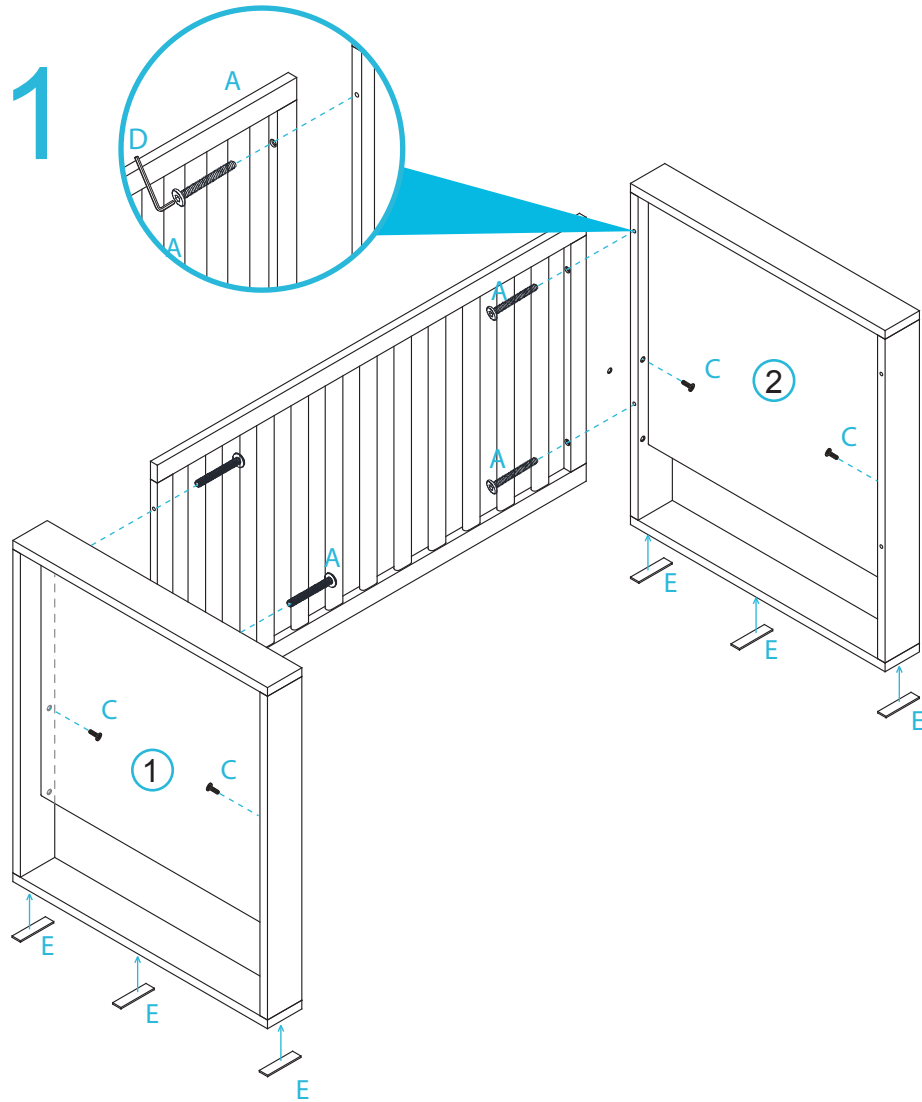

Attach 6 x foot pads(E) to panels [1] and [2]. Find one of the side panels and attach to both end panels of the cot using 4x screws (A) in the holes as shown. Insert 4x screws (C) in the holes as shown. Tighten with the Allen key (D).

2

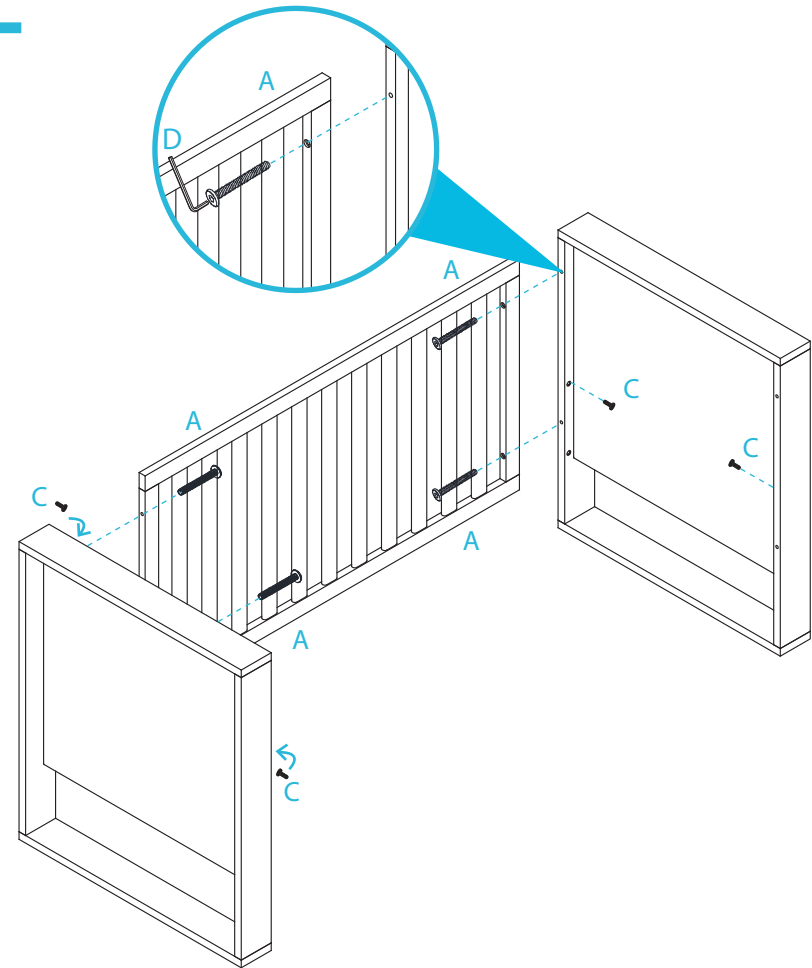


Insert 4x screws (C) in the holes as shown. Tighten with the Allen key (D)

Boston Cot

Assembly Instructions


mocka

3

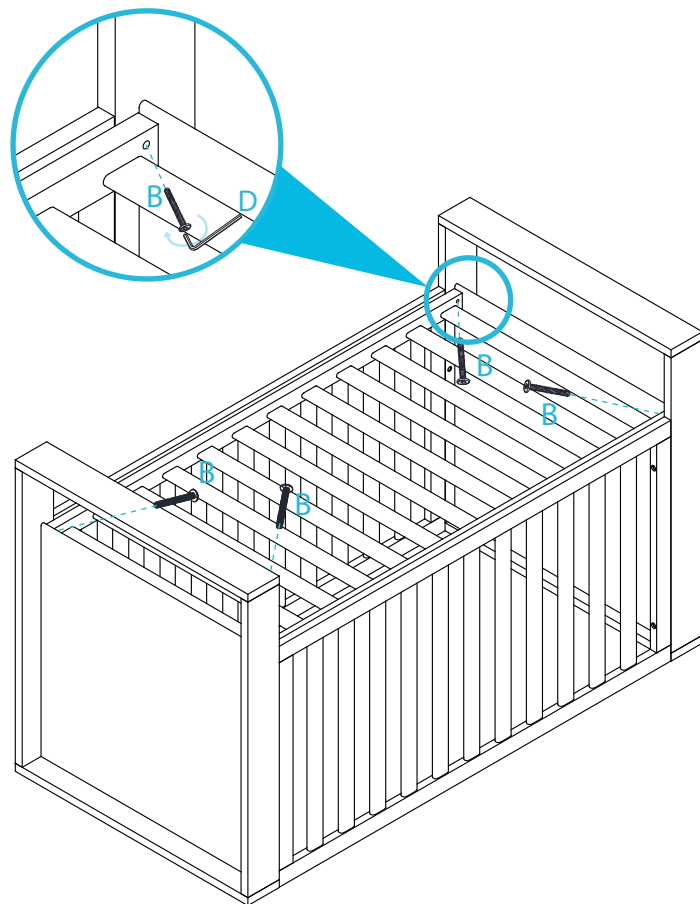

Turn the cot over so the bottom of cot is at the top. Attach the cot base to the required level (newborn or Toddler) using 4 x screws (B) as shown and tighten with allen key. Pictured is the lower toddler base. The higher newborn level is closer to the top rail of the cot.

4

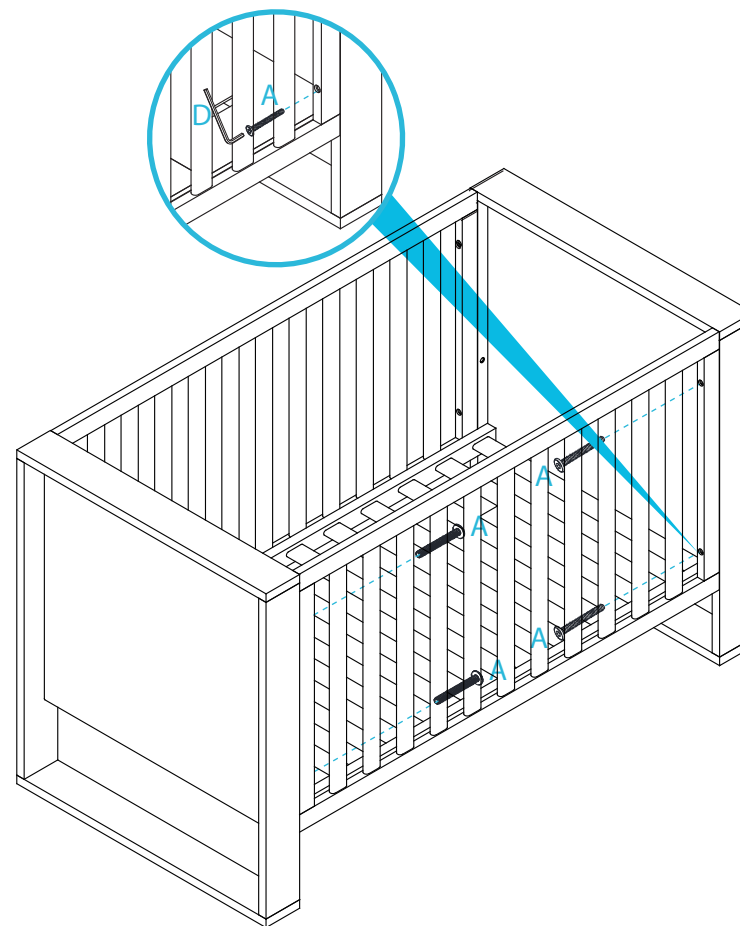


Turn the cot over so it is now upright. Slide the remaining side panel into place and attach using 4x screws (A) in the holes as shown. Tighten with the Allen key (D).

Boston Cot

Assembly Instructions


mocka

5

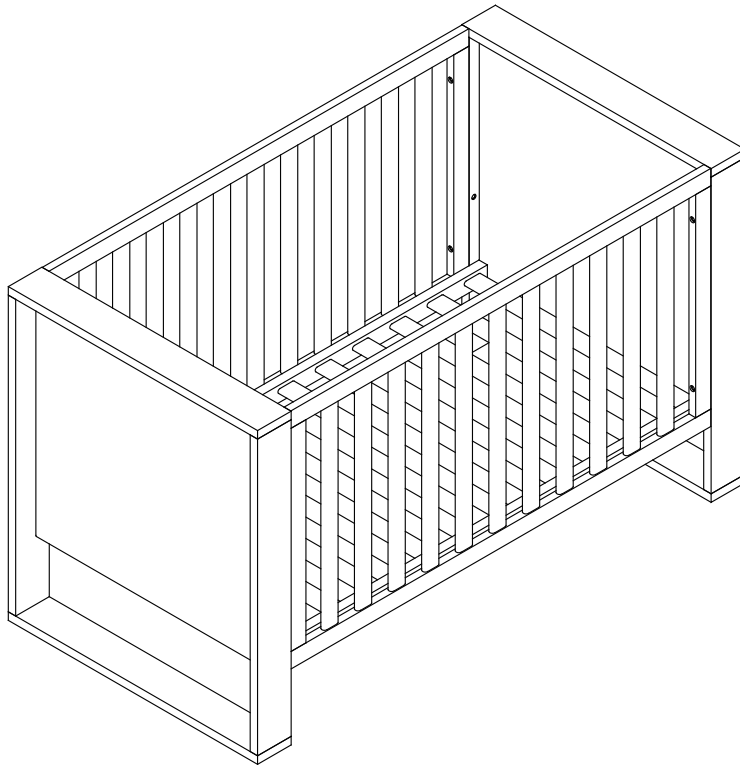

All done! Regularly check all screws are suitably tightened. Place the correct size mattress into the cot before use. To clean use a damp cloth, avoiding the use of detergents or abrasives. Once assembled lift furniture into place, do not drag.

6

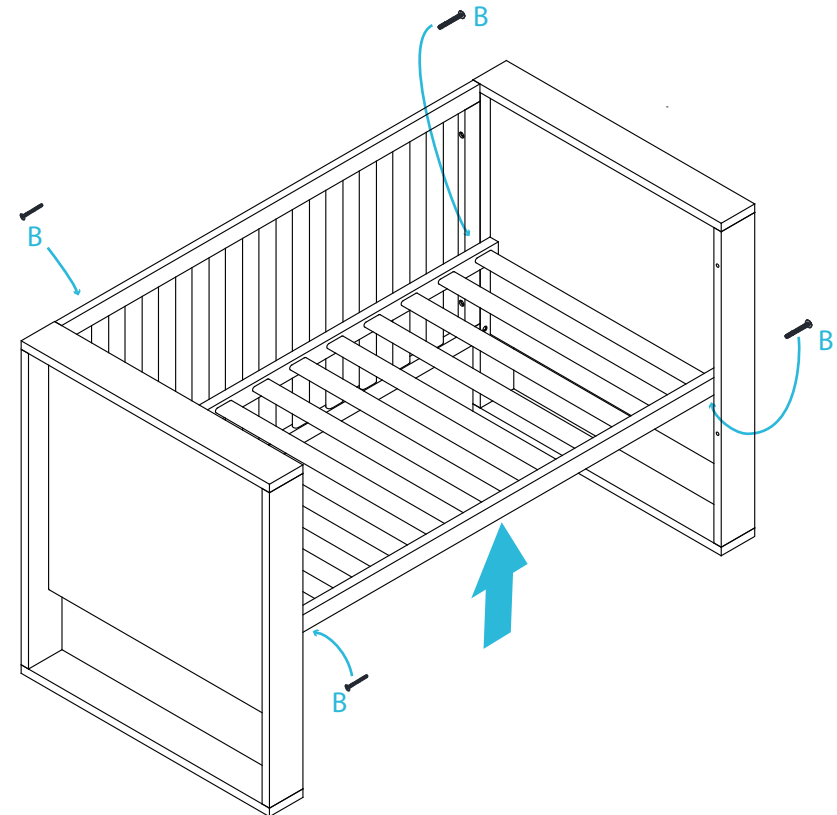

To adjust the base setting, remove the C screws from the end panels and repeat steps 2 and 3 by removing the side panel and moving the base to the corresponding hole. Securely attach again in the adjusted position.